



Serinus[®] 50

Sulfur Dioxide Analyser



User Manual
Version: 3.3

Acoem Australasia
1492 Ferntree Gully Road Knoxfield VIC 3180
Melbourne Australia +61 3 9730 7800 info.au@acoem.com ecotech.com



Manual subject to change without notice. Images used are for illustrative purposes only. Ecotech & Serinus are trademarks or registered trademarks of Ecotech Pty Ltd in the United States and/or other countries. © 2022 Ecotech Pty Ltd. All Rights Reserved.

This page is intentionally blank.

Table of Contents

| | |
|--|-----------|
| Manufacturer's Statement | 13 |
| Notice | 13 |
| Safety Information | 14 |
| Important Safety Messages | 15 |
| Warranty..... | 16 |
| Service & Repairs | 17 |
| Product Compliance and Approvals..... | 18 |
| Manual Revision History | 19 |
| 1. Introduction..... | 21 |
| 1.1 Description | 21 |
| 1.2 Specifications | 21 |
| 1.2.1 Measurement | 21 |
| 1.2.2 Precision/Accuracy | 21 |
| 1.2.3 Calibration | 22 |
| 1.2.4 Power Requirements | 22 |
| 1.2.5 Operating Conditions..... | 22 |
| 1.2.6 Communications..... | 23 |
| 1.2.7 Physical Dimensions..... | 23 |
| 1.2.8 Certifications..... | 23 |
| 1.3 Nomenclature | 24 |
| 1.4 Background/Theory..... | 25 |
| 1.4.1 Measurement Theory | 25 |
| 1.4.2 Kalman Filter Theory..... | 26 |
| 1.5 Instrument Description | 27 |
| 1.5.1 Calibration Valve Manifold | 27 |
| 1.5.2 Sample Filter Holder | 28 |
| 1.5.3 Dual Hydrocarbon Kicker | 28 |
| 1.5.4 Zero Air Scrubber | 29 |
| 1.5.5 DFU | 29 |
| 1.5.6 Main Controller PCA | 29 |
| 1.5.7 Measurement Cell | 30 |
| 1.5.8 Lamp Driver PCA | 34 |
| 1.5.9 Pneumatic Tubing | 34 |
| 1.5.10 Rear Panel..... | 35 |
| 1.5.11 Communications | 36 |
| 2. Installation..... | 39 |
| 2.1 Initial Check | 39 |
| 2.2 Installation Notes | 42 |
| 2.3 Instrument Set-up | 43 |
| 2.3.1 Power Connections..... | 43 |
| 2.3.2 Pneumatic Connections | 44 |
| 2.3.3 Communications Connections | 47 |
| 2.3.4 Instrument Set-up..... | 48 |
| 2.4 U.S. EPA Equivalent Set-up | 49 |

| | | |
|-----------|---|-----------|
| 2.5 | EN Type Approval Set-up | 50 |
| 2.6 | Transporting/Storage..... | 51 |
| 3. | Operation..... | 53 |
| 3.1 | Warm-Up | 53 |
| 3.2 | Measurement | 53 |
| 3.3 | General Operation Information | 54 |
| 3.3.1 | Keypad & Display..... | 54 |
| 3.3.2 | Home Screen | 56 |
| 3.4 | Menus & Screens | 58 |
| 3.4.1 | Quick Menu | 59 |
| 3.4.2 | Main Menu..... | 60 |
| 3.4.3 | Analyser State Menu..... | 61 |
| 3.4.4 | Status Menu | 62 |
| 3.4.5 | Temperature Menu | 64 |
| 3.4.6 | Pressure & Flow Menu | 65 |
| 3.4.7 | Voltage Menu..... | 65 |
| 3.4.8 | General Settings Menu..... | 66 |
| 3.4.9 | Measurement Settings Menu..... | 67 |
| 3.4.10 | Calibration Menu | 69 |
| 3.4.11 | Pressure Calibration Menu..... | 71 |
| 3.4.12 | Flow Calibration Menu (Optional)..... | 72 |
| 3.4.13 | Service Menu..... | 73 |
| 3.4.14 | Diagnostics Menu | 74 |
| 3.4.15 | Digital Pots Menu | 75 |
| 3.4.16 | Internal Pump Menu (Optional) | 77 |
| 3.4.17 | Valve Menu | 78 |
| 3.4.18 | Tests Menu..... | 79 |
| 3.4.19 | Digital Input Test Menu..... | 80 |
| 3.4.20 | Digital Output Test Menu..... | 80 |
| 3.4.21 | Calculation Factors Menu..... | 81 |
| 3.4.22 | Communications Menu | 82 |
| 3.4.23 | Data Logging Menu | 83 |
| 3.4.24 | Serial Communication Menu..... | 84 |
| 3.4.25 | Analog Input Menu | 85 |
| 3.4.26 | Analog Output Menu..... | 86 |
| 3.4.27 | Digital Input Menu | 87 |
| 3.4.28 | Digital Output Menu | 89 |
| 3.4.29 | Network Menu (Optional) | 90 |
| 3.4.30 | Bluetooth Menu | 92 |
| 3.4.31 | Trend Display Menu | 92 |
| 3.4.32 | Chart | 93 |
| 3.4.33 | Advanced Menu | 95 |
| 3.4.34 | Hardware Menu | 96 |
| 3.4.35 | Parameter Display Menu..... | 97 |
| 4. | Communications..... | 99 |
| 4.1 | RS232 Communication..... | 99 |
| 4.2 | USB Communication | 100 |
| 4.3 | TCP/IP Network Communication (Optional) | 101 |
| 4.3.1 | Reading Network Port Setup | 102 |

| | | |
|-----------|--|------------|
| 4.3.2 | Setting Network Port Setup | 102 |
| 4.3.3 | Port Forwarding on Remote Modem/Router Setup | 103 |
| 4.3.4 | Setup Airodis to Communicate with Serinus | 103 |
| 4.4 | Analog and Digital Communication | 104 |
| 4.4.1 | Analog Outputs | 104 |
| 4.4.2 | Analog Inputs | 105 |
| 4.4.3 | Digital Status Inputs | 105 |
| 4.4.4 | Digital Status Outputs | 105 |
| 4.5 | Logging Data | 107 |
| 4.5.1 | Configure Instrument Internal Logging | 107 |
| 4.6 | Using Airodis Software to Download Data | 107 |
| 4.6.1 | Connecting the Instrument to a PC | 107 |
| 4.6.2 | Installing Airodis | 110 |
| 4.6.3 | Configuring Airodis | 111 |
| 4.7 | Serinus Remote App/Bluetooth | 116 |
| 4.7.1 | Installation | 116 |
| 4.7.2 | Connecting to the Instrument | 117 |
| 4.7.3 | Instrument Control | 118 |
| 4.7.4 | Real-Time Plot | 119 |
| 4.7.5 | Download | 120 |
| 4.7.6 | Get Parameters | 121 |
| 4.7.7 | Preferences | 122 |
| 5. | Calibration | 125 |
| 5.1 | Overview | 125 |
| 5.2 | Pressure Calibration | 127 |
| 5.2.1 | Full Pressure Calibration (Two Point Calibration) | 127 |
| 5.2.2 | Pressure Calibration (Ambient Only) | 129 |
| 5.2.3 | Pressure Calibration (Internal Pump Option Only) | 130 |
| 5.3 | Manual Background | 131 |
| 5.4 | Zero Calibration | 132 |
| 5.4.1 | Calibration Port | 132 |
| 5.4.2 | Sample Port | 133 |
| 5.4.3 | Background Air Port | 133 |
| 5.5 | Span Calibration | 134 |
| 5.5.1 | Calibration Port | 134 |
| 5.5.2 | Sample Port | 135 |
| 5.5.3 | Manual Instrument Gain and Offset Adjustments | 136 |
| 5.6 | Precision Check | 136 |
| 5.7 | Multipoint Precision Check | 137 |
| 5.8 | Flow Calibration (Internal Pump Option Only) | 138 |
| 5.9 | High Pressure Zero/Span Valve (Option) | 139 |
| 5.9.1 | Single Pressurised Calibration Option | 140 |
| 5.9.2 | Dual Pressurised Calibration Option | 141 |
| 6. | Service | 145 |
| 6.1 | Additional Safety Requirements for Service Personnel | 145 |
| 6.2 | Maintenance Tools | 145 |
| 6.3 | Maintenance Schedule | 146 |

| | | |
|--------|--|-----|
| 6.4 | Maintenance Procedures..... | 148 |
| 6.4.1 | Particulate Filter Replacement..... | 148 |
| 6.4.2 | Clean Chassis Fan Filter..... | 151 |
| 6.4.3 | DFU Replacement..... | 151 |
| 6.4.4 | Leak Check..... | 152 |
| 6.4.5 | Replacing the PMT Desiccant Packs..... | 156 |
| 6.4.6 | Replace Zero Air Scrubber..... | 157 |
| 6.4.7 | Orifice Replacement..... | 159 |
| 6.4.8 | UV Lamp Replacement..... | 160 |
| 6.4.9 | Clean Pneumatics..... | 163 |
| 6.4.10 | Pressure Sensor Check..... | 163 |
| 6.5 | Bootloader..... | 164 |
| 6.5.1 | Display Help Screen..... | 164 |
| 6.5.2 | Communications Port Test..... | 165 |
| 6.5.3 | Updating Firmware..... | 165 |
| 6.5.4 | Erase All Settings..... | 165 |
| 6.5.5 | Start Analyser..... | 165 |
| 7. | Troubleshooting..... | 167 |
| 7.1 | Flow Fault..... | 170 |
| 7.2 | Noisy/Unstable Readings..... | 171 |
| 7.3 | Electronic Zero Adjust..... | 172 |
| 7.4 | Reaction Cell Temperature Failure..... | 173 |
| 7.5 | USB Memory Stick Failure..... | 174 |
| 7.6 | Technical Support Files..... | 175 |
| 8. | Optional Extras..... | 177 |
| 8.1 | Dual Sample Filter (PN: E020100)..... | 177 |
| 8.2 | Test Lamp (PN: E020103)..... | 178 |
| 8.3 | Network Port (PN: E020101)..... | 178 |
| 8.3.1 | Hardware Setup..... | 179 |
| 8.4 | Rack Mount Kit (PN: E020116)..... | 179 |
| 8.5 | Internal Pump (PN: E020106)..... | 184 |
| 8.5.1 | Hardware Setup..... | 184 |
| 8.5.2 | Internal Pump Pneumatic..... | 184 |
| 8.5.3 | Internal Pump Additional Components..... | 184 |
| 8.5.4 | Internal Pump Removed Components..... | 185 |
| 8.5.5 | Pressure Calibration Internal Pump Option..... | 185 |
| 8.5.6 | Flow Calibration..... | 185 |
| 8.5.7 | Leak Check Internal Pump Option..... | 186 |
| 8.5.8 | Pump Control..... | 186 |
| 8.6 | Metric Fittings Kit (PN: E020122)..... | 186 |
| 8.7 | Internal Zero and Span (PN: E020135)..... | 186 |
| 8.7.1 | IZS Specifications..... | 187 |
| 8.7.2 | IZS Setup..... | 189 |
| 8.7.3 | IZS Transporting/Storage..... | 190 |
| 8.7.4 | IZS Calibration..... | 191 |
| 8.7.5 | IZS Service and Maintenance..... | 192 |
| 8.8 | High Pressure Zero/Span Valves..... | 195 |

| | | |
|-----------|---|------------|
| 8.9 | Trace Level Instrument (PN: E020126) | 195 |
| 8.9.1 | Trace Specifications | 195 |
| 8.9.2 | Trace Setup | 196 |
| 8.9.3 | Trace Operation | 196 |
| 8.9.4 | Trace Default Values | 197 |
| 8.9.5 | Trace Calibration Guidelines | 197 |
| 8.9.6 | Trace Service and Maintenance | 198 |
| 9. | Parts List and Schematics | 199 |
| 9.1 | Serinus Accessories Kit | 199 |
| 9.2 | Maintenance Kit | 199 |
| 9.3 | Consumables | 200 |
| 9.4 | Instrument Parts List | 201 |
| 9.4.1 | Optional Extras Spare Part List | 206 |
| 9.5 | Plumbing Schematic - (PN: D020003) | 208 |
| 9.6 | Internal Pump Plumbing Schematic - (PN: D020006) | 209 |
| 9.7 | IZS Plumbing Schematic - (PN: D020053) | 210 |
| 9.8 | Block Wiring Schematic - (PN: D020105) | 212 |
| 9.9 | IZS Block Wiring Schematic - (PN: D020123) | 213 |
| 9.10 | Optical Bench Assembly - (PN: H012130) | 214 |
| 9.11 | Reaction Cell Assembly - (PN: H012100) | 215 |
| 9.12 | Lamp Holder Assembly - (PN: H012120) | 216 |
| 9.13 | Dump Assembly - (PN: H012110) | 217 |
| 9.14 | Permeation Oven Assembly - (PN: H012170) | 218 |
| 9.15 | Sample Filter Holder Assembly - (PN: H010160) | 219 |
| 9.16 | Calibration Valve Manifold Assembly - (PN: H010013-01) | 220 |
| 9.17 | IZS Calibration Valve Manifold Assembly - (PN: H010056) | 221 |
| 9.18 | Valve Assembly - (PN: H010042) | 222 |
| 9.19 | High Pressure Valve Exploded View - (PN: H050043) | 223 |

List of Figures

| | |
|---|----|
| Figure 1 – Simple Pneumatic Diagram | 25 |
| Figure 2 – Optical Measurement Theory | 26 |
| Figure 3 – Major Components of Serinus 50 | 27 |
| Figure 4 – Calibration Valve Manifold | 27 |
| Figure 5 – Sample Filter Holder | 28 |
| Figure 6 – Dual Hydrocarbon Kicker | 28 |
| Figure 7 – Zero Air Scrubber | 29 |
| Figure 8 – DFU | 29 |
| Figure 9 – Measurement Cell | 30 |
| Figure 10 – PMT Assembly - 1 | 30 |
| Figure 11 – PMT Assembly - 2 | 30 |
| Figure 12 – Reaction Cell Assembly - 1 | 31 |
| Figure 13 – Reaction Cell Assembly - 2 | 32 |
| Figure 14 – Reaction Cell Assembly - 3 | 32 |
| Figure 15 – Orifice | 33 |

| | |
|--|----|
| Figure 16 – Lamp Driver PCA Type Jumper Setting (REV D)..... | 34 |
| Figure 17 – Ecotech Tubing..... | 34 |
| Figure 18 – Rear Panel..... | 35 |
| Figure 19 – Power ON/OFF Switch | 35 |
| Figure 20 – Communication Connections..... | 36 |
| Figure 21 – Received Item | 40 |
| Figure 22 – Opening the Instrument - 1 | 41 |
| Figure 23 – Opening the Instrument - 2 | 41 |
| Figure 24 – Opening the Instrument - 3 | 41 |
| Figure 25 – Opening the Instrument - 4 | 42 |
| Figure 26 – Instrument Rear Panel..... | 43 |
| Figure 27 – Connect Power Cord | 44 |
| Figure 28 – Turn ON Power Switch..... | 44 |
| Figure 29 – Dust Plugs | 45 |
| Figure 30 – Remove Nut | 45 |
| Figure 31 – Ferrules Correct Orientation..... | 45 |
| Figure 32 – Replace Nut Loosely..... | 46 |
| Figure 33 – Insert Tube | 46 |
| Figure 34 – Tighten Nut | 46 |
| Figure 35 – Installation of USB Memory Stick..... | 48 |
| Figure 36 – Switching the Battery ON/OFF..... | 48 |
| Figure 37 – Dust Plugs | 51 |
| Figure 38 – Packing Instruction | 52 |
| Figure 39 – Front Panel..... | 54 |
| Figure 40 – Home Screen..... | 56 |
| Figure 41 – Quick Menu Screen..... | 59 |
| Figure 42 – Main Menu Screen..... | 60 |
| Figure 43 – Analyser State Menu Screen..... | 61 |
| Figure 44 – Status Menu Screen | 62 |
| Figure 45 – Temperature Menu Screen..... | 64 |
| Figure 46 – Pressure & Flow Menu Screen | 65 |
| Figure 47 – Voltage Menu Screen..... | 65 |
| Figure 48 – General Settings Menu Screen..... | 66 |
| Figure 49 – Measurement Settings Menu Screen..... | 67 |
| Figure 50 – Calibration Menu Screen | 69 |
| Figure 51 – Pressure Calibration Menu Screen..... | 71 |
| Figure 52 – Flow Calibration Menu Screen | 72 |
| Figure 53 – Service Menu Screen | 73 |
| Figure 54 – Diagnostics Menu Screen..... | 74 |
| Figure 55 – Digital Pots Menu Screen | 75 |
| Figure 56 – Internal Pump Menu Screen | 77 |
| Figure 57 – Valve Menu Screen | 78 |
| Figure 58 – Tests Menu Screen..... | 79 |
| Figure 59 – Digital Input Test Menu Screen..... | 80 |
| Figure 60 – Digital Output Test Menu Screen..... | 80 |
| Figure 61 – Calculation Factors Menu Screen..... | 81 |
| Figure 62 – Communications Menu Screen..... | 82 |
| Figure 63 – Data Logging Menu Screen | 83 |
| Figure 64 – Serial Communication Menu Screen..... | 84 |
| Figure 65 – Analog Input Menu Screen | 85 |
| Figure 66 – Analog Output Menu Screen | 86 |
| Figure 67 – Digital Input Menu Screen | 87 |

| | |
|---|-----|
| Figure 68 – Digital Output Menu Screen | 89 |
| Figure 69 – Network Menu Screen..... | 90 |
| Figure 70 – Bluetooth Menu Screen | 92 |
| Figure 71 – Trend Display Menu Screen..... | 92 |
| Figure 72 – Chart Screen | 93 |
| Figure 73 – Advanced Menu Screen..... | 95 |
| Figure 74 – Hardware Menu Screen..... | 96 |
| Figure 75 – Parameter Display Menu Screen | 97 |
| Figure 76 – Communication Ports..... | 99 |
| Figure 77 – Multidrop RS232 Cable Example | 100 |
| Figure 78 – Example of Typical Network Setups | 101 |
| Figure 80 – Example of Network Menu Setup | 102 |
| Figure 81 – Port Forwarding Example | 103 |
| Figure 82 – LAN Network Set-Up (Airodis) | 103 |
| Figure 83 – WAN Network Set-Up (Airodis) | 104 |
| Figure 84 – Rear Panel PCA (Default Jumpers Highlighted) | 106 |
| Figure 85 – Analog & Digital I/O Individual Pin Descriptions..... | 106 |
| Figure 86 – Installing Driver Software (Device Manager)..... | 108 |
| Figure 87 – Update Driver Popup..... | 108 |
| Figure 88 – Update Driver Popup (Directory Location) | 109 |
| Figure 89 – Installing Driver Confirmation Prompt | 109 |
| Figure 90 – Successful Driver Installation..... | 110 |
| Figure 91 – Airodis Workspace Manager | 111 |
| Figure 92 – Adding a New Station | 111 |
| Figure 93 – New Station Connection..... | 112 |
| Figure 94 – Station Configuration (Channel List)..... | 113 |
| Figure 95 – Error Status Notification..... | 113 |
| Figure 96 – Downloading Data | 114 |
| Figure 97 – Download Data Status..... | 114 |
| Figure 98 – Data Visibility..... | 115 |
| Figure 99 – Exporting Data | 115 |
| Figure 100 – Data Download Complete | 116 |
| Figure 101 – Downloading the App from Google Play Store | 117 |
| Figure 102 – Bluetooth Pairing Request..... | 117 |
| Figure 103 – Showing or Hiding the NumPad | 118 |
| Figure 104 – Switching Analysers..... | 119 |
| Figure 105 – Real-Time Plot | 120 |
| Figure 106 – Plot of Downloaded Data | 121 |
| Figure 107 – Directory Settings | 122 |
| Figure 108 – Logs Format | 122 |
| Figure 109 – Colour Theme Settings | 123 |
| Figure 110 – Example of a Calibration System | 125 |
| Figure 111 – Full Pressure Calibration Set-up | 128 |
| Figure 112 – Full Pressure Calibration Set-up (Ambient) | 128 |
| Figure 113 – Ambient Pressure Calibration Set-up | 129 |
| Figure 114 – Pressure Calibration (Internal Pump Option Only) Set-up..... | 130 |
| Figure 115 – DFU | 131 |
| Figure 116 – Zero Calibration Set-up - 1..... | 132 |
| Figure 117 – Zero Calibration Set-up - 2..... | 133 |
| Figure 118 – Span Calibration Set-up - 1 | 134 |
| Figure 119 – Span Calibration Set-up - 2 | 135 |
| Figure 120 – Excel Graph of Multipoint Calibration | 138 |

| | |
|---|-----|
| Figure 121 – Single High Pressure Calibration Option | 140 |
| Figure 122 – Dual High Pressure Calibration Option | 141 |
| Figure 123 – Minifit Extraction Tool - (PN: T030001) | 145 |
| Figure 124 – Orifice/Sintered Filter Removal Tool - (PN: H010046) | 146 |
| Figure 125 – Leak Test Jig - (PN: H050069) | 146 |
| Figure 126 – Air Monitoring Test Equipment Kit (AMTEK) - Customisable | 146 |
| Figure 127 – Remove Tubing | 148 |
| Figure 128 – Remove Retaining Ring | 148 |
| Figure 129 – Remove Filter Sealing Cap | 149 |
| Figure 130 – Particulate Filter | 149 |
| Figure 131 – Avoid to Touching Particulate Filter Paper | 150 |
| Figure 132 – Elbow Fitting Direction | 150 |
| Figure 133 – Reconnect the Compression Nut and Tubing | 150 |
| Figure 134 – Remove Filter Casing and Filter | 151 |
| Figure 135 – DFU | 152 |
| Figure 136 – Leak Test Jig on Exhaust Port | 152 |
| Figure 137 – Connect Vacuum Source | 153 |
| Figure 138 – Blocker BGnd Air Port | 153 |
| Figure 139 – Bypass DFU | 155 |
| Figure 140 – Remove Desiccant Access Cap | 156 |
| Figure 141 – Remove the Tubing | 157 |
| Figure 142 – Pull-out the DFU | 158 |
| Figure 143 – Zero Scrubber Removal | 158 |
| Figure 144 – Reaction Cell Tee Fitting | 159 |
| Figure 145 – Orifice Location | 160 |
| Figure 146 – Collets of the UV Lamp | 161 |
| Figure 147 – Connect Oscilloscope | 162 |
| Figure 148 – Collets of the UV Lamp | 162 |
| Figure 149 – Test Point Location | 164 |
| Figure 150 – Typical Test Point Reading of Cell Pressure Sensor | 164 |
| Figure 151 – Flow Fault Diagnostic Procedure | 170 |
| Figure 152 – Noisy or Unstable Zero or Span Results | 171 |
| Figure 153 – Troubleshooting, Electronic Zero Adjust | 172 |
| Figure 154 – Troubleshooting, Reaction Cell Temperature Failure | 173 |
| Figure 155 – USB Memory Stick Failure | 174 |
| Figure 156 – USB Memory Stick File Structure | 176 |
| Figure 157 – Dual Filter Option Installed | 177 |
| Figure 158 – Test Lamp | 178 |
| Figure 159 – Separate Rack Slides | 180 |
| Figure 160 – Assemble Inner Slide on Chassis | 180 |
| Figure 161 – Rack Mount Ears Fitted to Instrument | 181 |
| Figure 162 – Attach Rack Mount Adaptors to Outer Slides | 181 |
| Figure 163 – Test Fit the Rack Slide Assembly into your Rack | 182 |
| Figure 164 – Attach Slides to Front of Rack | 182 |
| Figure 165 – Slide Clips | 183 |
| Figure 166 – Internal Pump Option | 184 |
| Figure 167 – IZS Specific Internal Components Diagram | 187 |
| Figure 168 – Typical Permeation Tube and Chamber Dimensions (Units in mm) | 188 |
| Figure 169 – Permeation Tube Removal | 190 |

List of Tables

| | |
|--|-----|
| Table 1 – Internationally Recognised Symbols | 14 |
| Table 2 – Manual Revision History | 19 |
| Table 3 – List of Items Received | 39 |
| Table 4 – Measurement Times | 53 |
| Table 5 – Digital Output States | 89 |
| Table 6 – Setting up a New Station via Airodis..... | 112 |
| Table 7 – Maintenance Schedule | 147 |
| Table 8 – Zero Air Scrubber Replacement Frequency | 158 |
| Table 9 – Common Errors and Troubleshooting | 167 |
| Table 10 – Dual Sample Filter Parts Added | 177 |
| Table 11 – Test Lamp Parts Added | 178 |
| Table 12 – Test Lamp Parts Removed | 178 |
| Table 13 – Network Port Parts Added | 178 |
| Table 14 – Network Port Parts Removed | 179 |
| Table 15 – Rack Mount Kit Parts Added | 179 |
| Table 16 – Internal Pump Parts Added..... | 184 |
| Table 17 – Internal Pump Parts Removed | 185 |
| Table 18 – IZS Parts Added..... | 187 |
| Table 19 – IZS Parts Removed | 187 |
| Table 20 – IZS Annual Maintenance Kit - (PN: E020212)..... | 192 |
| Table 21 – High Pressure Zero/Span Valves Parts Added..... | 195 |
| Table 22 – Trace Parts Added..... | 195 |
| Table 23 – Trace Parts Removed | 195 |
| Table 24 – Trace Parameter Value Changes..... | 197 |
| Table 25 – Maintenance Schedule | 198 |
| Table 26 – Serinus Accessories Kit (PN: H010136) | 199 |
| Table 27 – Serinus 50 Maintenance Kit - (PN: E020204) | 199 |
| Table 28 – Serinus 50 Consumables | 200 |
| Table 29 – Spare Parts List (Main Components) | 201 |
| Table 30 – Spare Parts List (Cables)..... | 202 |
| Table 31 – Spare Parts List (O-rings) | 202 |
| Table 32 – Spare Parts List (Fittings) | 203 |
| Table 33 – Spare Parts List (Miscellaneous) | 204 |
| Table 34 – Spare Parts List (Shipping) | 205 |
| Table 35 – Spare Part List (Test Lamp) | 206 |
| Table 36 – Spare Part List (Internal Pump)..... | 206 |
| Table 37 – Spare Part List (Metric Fittings Kit) | 206 |
| Table 38 – Spare Part List (IZS) | 207 |
| Table 39 – Spare Part List (High Pressure Zero/Span Valves)..... | 207 |
| Table 40 – Spare Part List (Trace Level Instrument)..... | 207 |
| Table 41 – Packet Format..... | 225 |
| Table 42 – Example: Primary Gas Request | 225 |
| Table 43 – Example: Primary Gas Response..... | 226 |
| Table 44 – Example: Primary Gas Response (Continued)..... | 226 |
| Table 45 – List of Errors..... | 226 |
| Table 46 – Example: Get IEEE Response data | 227 |
| Table 47 – Advanced Protocol Parameter List | 228 |
| Table 48 – Bayern-Hessen Data | 241 |
| Table 49 – Block Check Operation..... | 242 |
| Table 50 – Status Bit Map | 243 |

| | |
|---|-----|
| Table 51 – Failure Bit Map (Positive Logic) | 243 |
| Table 52 – Modbus Error Codes | 247 |

List of Appendices

| | |
|--|-----|
| Appendix A. Advanced Protocol | 225 |
| A.1 Command Format | 225 |
| A.2 Commands | 226 |
| A.3 List of Parameters | 228 |
| Appendix B. EC9800 Protocol | 239 |
| B.1 Command Format | 239 |
| B.2 Commands | 239 |
| Appendix C. Bayern-Hessen Protocol | 241 |
| C.1 Command Format | 241 |
| C.2 Commands | 242 |
| Appendix D. ModBus Protocol | 245 |
| D.1 Command Format | 245 |
| D.2 Commands | 246 |

Manufacturer's Statement

Thank you for selecting the Acoem Australasia Serinus® 50 Sulfur Dioxide Analyser.

The Serinus series is the next generation of Acoem Australasia designed and manufactured gas analysers. The Serinus 50 will perform sulfur dioxide (SO₂) measurements over a range of 0 - 20 ppm with a lower detectable limit of 0.3 ppb.

This User Manual provides a complete product description including operating instructions, calibration and maintenance requirements for the Serinus® 50 Sulfur Dioxide Analyser.

Reference should also be made to the relevant local standards which should be used in conjunction with this manual. Some of these standards are listed in this manual.

If, after reading this manual you have any questions or you are still unsure or unclear on any part of the Serinus® 50, please do not hesitate to contact Acoem Australasia or your local Acoem Australasia distributor.



Please help the environment and recycle the pages of this manual when you have finished using it.

Notice

The information contained in this manual is subject to change without notice. Acoem Australasia reserves the right to make changes to equipment construction, design, specifications and/or procedures without notification.

Ecotech Pty. Ltd. Has changed its trading name to Acoem Australasia.






Copyright © 2022. All rights reserved. Reproduction of this manual, in any form, is prohibited without the written consent of Acoem Australasia.

Safety Information

Read all the safety information in this section prior to using the equipment. To reduce the risk of personal injury caused by potential hazards, follow all safety notices and warnings in this documentation.

The following internationally recognised symbols are used on Acoem Australasia equipment:

Table 1 – Internationally Recognised Symbols

| | | |
|---|---|----------------|
|  | Protective conductor terminal | IEC 60417-5019 |
|  | Alternating current | IEC 60417-5032 |
|  | Caution, hot surface | IEC 60417-5041 |
|  | Caution, risk of danger to user and/or equipment Refer to any accompanying documents | ISO 7000-0434 |
|  | Caution, risk of electric shock | ISO 3864-5036 |

These symbols will also be found throughout this manual to indicate relevant safety messages.

Note: Notes are used throughout this manual to indicate additional information regarding a particular part or process.

If the equipment is used for purposes not specified by Acoem Australasia, the protection provided by this equipment may be impaired.

Important Safety Messages

| | |
|---|--|
|  | <p>Disconnect Power Prior to Service</p> <p>Hazardous voltages exist within the instrument. Do not remove or modify any of the internal components or electrical connections whilst the mains power is ON.</p> <p>Always unplug the equipment prior to removing or replacing any components.</p> |
|  | <p>Replacing Parts</p> <p>Replacement of any part should only be carried out by qualified personnel, using only parts specified by Acoem Australasia, as these parts meet stringent Acoem Australasia quality.</p> |
|  | <p>Mains Supply Cord</p> <p>Do not replace the detachable mains supply cord with an inadequately rated cord. Any mains supply cord that is used with the instrument must comply with the safety requirements (250 V/10 A minimum requirement). A mains power cord with a protective earth conductor must be used.</p> <p>Ensure that the mains supply cord is maintained in a safe working condition.</p> |
|  | <p>Do Not Expose Equipment to Flammable Gases</p> <p>This equipment is not intended for use in explosive environments, or conditions where flammable gases are present. The user should not expose the equipment to these conditions. Do not introduce any flammable gases into the instrument, otherwise serious accidents such as explosion or fire may result.</p> |
|  | <p>Electromagnetic Compliance</p> <p>The instrument lid should be closed when in normal operation, to comply with EMC regulations.</p> |
|  | <p>Means of Lifting/Carrying Instrument</p> <p>This instrument is a heavy and bulky object. Two persons should lift/carry the object, otherwise use proper lifting equipment. Proper lifting techniques should be used when moving the instrument.</p> |
|  | <p>Internal Components</p> <p>Do not insert a rod or finger into the cooling fans, otherwise injury may result.</p> <p>Do not energise the instrument until all conductive cleaning liquids, used on internal components, are dried up.</p> |

Warranty

This product has been manufactured in an ISO 9001 facility with care and attention to quality.

The product is subject to a 24-month warranty on parts and labour from the date of shipment. The warranty period commences when the product is shipped from the factory. Lamps, filters and other consumable items are not covered by this warranty.

Each instrument is subjected to a vigorous testing procedure prior to despatch and will be accompanied with a parameter list and a multipoint precision check, thereby enabling the instrument to be installed and ready for use without any further testing.

Service & Repairs

Our qualified and experienced technicians are available to provide fast and friendly service between the hours of 8:30 am - 5:00 pm AEST Monday to Friday. Please contact either your local distributor or Acoem Australasia regarding any questions you have about your instrument.

Service Guidelines

This manual is designed to provide the necessary information for the setup, operation, testing, maintenance and troubleshooting of your instrument.

Should you still require support after consulting the documentation, we encourage you to contact your local distributor for support.

To contact Acoem Australasia directly, please e-mail our Technical Support Specialist group at support@ecotech.com or to speak with someone directly:

Please dial 1300 364 946 if calling from within Australia.

Please dial +61 3 9730 7800 if calling from outside of Australia.

Please contact Acoem Australasia and obtain a Return Material Authorisation (RMA) number before sending any equipment back to the factory. This allows us to track and schedule service work and to expedite customer service. Please include this RMA number when you return the equipment, preferably both inside and outside the shipping packaging. This will ensure you receive prompt service.

When shipping instrumentation, please also include the following information:

- Name and phone number
- Company name
- Shipping address
- Quantity of items being returned
- Model number/s or a description of each item
- Serial number/s of each item (if applicable)
- A description of the problem and any fault-finding completed
- Original sales order or invoice number related to the equipment

Shipping Address:

Attention Service Department

Acoem Australasia

1492 Ferntree Gully Road,

Knoxfield, VIC Australia 3180

Product Compliance and Approvals

The Serinus® 50 Sulfur Dioxide Analyser, as manufactured by Acoem Australasia, complies with the essential requirements of the directives listed below (including CE compliance). The respective standards have been applied:



Low Voltage Directive (LVD) Directive 2014/35/EU

EN 61010-1:2010

Safety requirements for electrical equipment, for measurement, control and laboratory use - General requirements

Electromagnetic Compatibility (EMC) Directive 2014/30/EU

EN 61326-1:2013

Electrical equipment for measurement, control and laboratory use - EMC requirements - General requirements

Radio Equipment Directive (RED) 2014/53/EU

EN 300 328 V2.1.1

Wideband transmission systems - Data transmission equipment operating in the 2.4 GHz ISM band and using wide band modulation techniques



Regulatory Compliance Mark (RCM) - Australia

AS/NZS 4268:2017

Radio equipment and systems - Short range devices - Limits and methods of measurement

**ARPANSA
Radiation Protection Standard**

Maximum Exposure Levels to Radiofrequency Fields - 3 kHz to 300 GHz - Radiation Protection Series Publication No. 3: 2002

This analyser is also certified to a number of measurement standards - refer to Section 1.2.8.

Manual Revision History

Manual PN: M010029
Current revision: 3.3
Date released: 9 March 2022
Description: User Manual for the Serinus® 50 Sulfur Dioxide Analyser

This manual is the full user manual for the Serinus® 50 Sulfur Dioxide Analyser. This manual contains all relevant information on theory, specifications, installation, operation, maintenance and calibration. Any information that cannot be found within this manual can be obtained by contacting Acoem Australasia.

This manual uses cross reference links extensively throughout this manual. The hot keys below will greatly reduce the amount of time scrolling between references:

- You can access the links by pressing the following:
 - > CTRL + LEFT MOUSE CLICK: Move to the link location
- You can switch between links by pressing the following:
 - > ALT + LEFT ARROW KEY: Returns you to the previous Link
 - > ALT + RIGHT ARROW KEY: Swaps back

Table 2 – Manual Revision History

| Edition | Date | Summary |
|---------|----------------|---|
| 1.0 | October 2008 | Initial release |
| 1.1 | February 2009 | Communication update |
| 1.2 | February 2009 | New maintenance procedures and small corrections |
| 1.3 | November 2009 | Updated flow from 0.5 - 0.7 New internal pump added Serinus downloader added Advanced communication protocol added |
| 1.4 | September 2010 | CE conformity added Parts list updated Pressurised zero/span valve added Updates to rack mount option Updates to Serinus downloader Update to 25 pin I/O Update to network communications |
| 2.0 | July 2012 | New chassis Updated menu system |

| Edition | Date | Summary |
|---------|---------------|--|
| | | Added Bluetooth menu Serinus remote Android app Rack mount procedure updated Analog Output Calibration |
| 2.1 | March 2013 | Formatting updates |
| 2.2 | October 2013 | Formatting updates |
| 2.2 | November 2013 | Addition of Airodis installation steps |
| 3.0 | April 2014 | Auto-Ranging Power Supply Added Main Controller and Rear Panel PCAs changed. |
| 3.1 | April 2016 | IZS and Trace options added |
| 3.2 | June 2018 | Safety Information updated Product Compliance & Approvals updated |
| 3.3 | March 2022 | Manual update to firmware 4.12.0 Rev. Q board. A number of changes to descriptions, procedures and menu items. Standardization of naming convention applied. |

1. Introduction

1.1 Description

The Serinus 50 Sulfur Dioxide Analyser (SO₂) uses UV fluorescent radiation technology to detect sulfur dioxide in the range of 0 - 20 ppm.

The U.S. EPA has designated the Serinus 50 Sulfur Dioxide Analyser as an equivalent method and TÜV has designated it as an EN approved instrument.

This section will describe the specifications of the instrument as well as the main components and techniques used to obtain stable gas concentration readings.

1.2 Specifications

1.2.1 Measurement

Range

0 - 20 ppm (autoranging)

U.S. EPA designated range: 0 - 0.5 ppm

TÜV EN certification range: 0 - 400 ppb

Lower Detectable Limit

< 0.3 ppb 0.2% of concentration whichever is greater, with Kalman filter active

1.2.2 Precision/Accuracy

Precision

0.5 ppb or 0.5% of reading, whichever is greater

Linearity

± 1% of full scale (from best straight-line fit)

Noise at Zero

< 0.15 ppb

Response Time

60 seconds to 95%

Sample Flow Rate

0.750 slpm

1.2.3 Calibration

Zero Drift

Temperature dependant: 1.0 ppb per °C

24 hours: < 0.5 ppb

30 days: < 0.5 ppb

Span Drift

Temperature dependant: 0.1% per °C

24 hours: < 0.5% of reading or < 0.5 ppb whichever is greater

30 days: < 0.5% of reading

1.2.4 Power Requirements

Operating Voltage

100 - 240 VAC ($\pm 10\%$)

50 - 60 Hz (autoranging)

Overvoltage Category II

Power Consumption

250 VA max (typical at start up)

180 VA after warm up

1.2.5 Operating Conditions

Ambient Temperature: 0 - 40 °C (32 - 104 °F)

Relative Humidity: 10 - 80% (non-condensing)

Pollution Degree: 2

Sample Pressure Dependence: 5% change in pressure produces less than a 1% change in reading

Maximum altitude¹: 2000 m above sea level

¹ For higher altitude contact Acoem Australasia for support/assistance.

1.2.6 Communications

Analog Output

Three menu selectable current or voltage analog outputs:

- Current output of 0 - 20 mA, 2 - 20 mA or 4 - 20 mA.
- Voltage output of 0 - 5 V, with menu selectable zero offset of 0 V, 0.25 V or 0.5 V.
- Voltage output of 0 - 10 V (configured using jumpers (JP3) on rear panel PCA).
- Range: User scalable min and max range for analog output to suit application.

Analog Input

- Three analog voltage inputs (0 - 5 VDC) CAT I rated.

Digital Output

- RS232 port #1: Normal digital communication.
- RS232 port #2: Multidrop port used for multiple instrument connections on a single RS232.
- USB port connection on the rear panel.
- USB memory stick (front panel) for data logging, event logging, parameter and configuration storage.
- TCP/IP (optional)
- 25 pin connector with discrete status and user control.
 - Eight Digital Outputs, open collector max 400 mA each @ 12 VDC (max total output 2 A).
 - Eight Digital Inputs, 0 - 5 VDC, CAT I rated.

1.2.7 Physical Dimensions

Case Dimensions

| | |
|------------------------------------|-------------------------|
| Rack Length (front to rear): | 622 mm (24.5") |
| Total Length (with latch release): | 662 mm (26.1") |
| Chassis Width: | 418 mm (16.5") |
| Front Panel Width: | 429 mm (16.9") |
| Chassis Height: | 163 mm/Uses 4 RU (6.4") |
| Front Panel Height: | 185 mm (7.3") |
| Weight: | 21.4 kg |

1.2.8 Certifications

- US EPA approval (RFNA-0809-186)
- EN approval TÜV (0000040205-02)

- EN approval MCERTS (MC100167/07)
- Australian Standard (AS 3580.5.1-2011)
- Russian approval (56263-14)
- French approval LSCQA
- Ukraine approval (12/3/B/24/295-17)
- Chinese Pattern Approval (JJF1361-2012)
- Korean approval NIER (AACMS-2017-04)

1.3 Nomenclature

| | |
|-----------------------------------|---|
| SO₂ | This is the abbreviation for sulfur dioxide. |
| Span | A gas sample of known composition and concentration used to calibrate/check the upper range of the instrument (sulfur dioxide). |
| Zero | Zero calibration uses zero air (SO ₂ scrubbed ambient air) to calibrate/check the lower range of the instrument. |
| Background | This is the reading of the sample without sulfur dioxide present in the measurement cell. |
| Multipoint Precision Check | A procedure to verify the linearity of the response of the instrument. |
| Calibration | The process of adjusting the instrument to ensure that it is measuring the correct concentration. |
| Zero Drift | The change in instrument response to zero air over a period of continuous unadjusted operation. |
| Zero Air | Is purified air in which the concentration of SO ₂ is < 0.5 ppb with water vapour of less than 10% RH. Sufficient purified air can be obtained by passing dry ambient air through an activated charcoal filter and a particulate filter. |
| External Span Source | Span gas that is delivered via an external accredited cylinder (e.g. NATA/NIST). |
| Sample Air | Sample air is defined as the sample before it has entered the reaction cell, as distinguished from the exhaust air. |
| Exhaust Air | Exhaust air is the sample air after it has passed through the reaction/measurement/detection cell and is moving towards being expelled from the instrument. |
| ID and OD | These are measurements of tubing. ID is the internal diameter of tubing, OD is the outer diameter. |
| Multidrop | A configuration of multiple instruments connected via the same RS232 cable. |
| Photomultiplier Tube | A highly sensitive device which can detect extremely low levels of light (photons) and multiply the electrical signal to a point where it can be accurately measured. This is often referred to as a PMT. |
| Bootloader | A program that checks whether the current firmware is valid, executes the instrument warm-up. The bootloader can be entered by pressing the '+' key on the front keypad during the first 1/2 second |

| | |
|-------------|---|
| | after power ON and following the prompts. The bootloader enables various low level recovery tools, including updating the firmware from a USB stick. |
| PCA | Printed Circuit Assembly. An electronic circuit mounted on a printed circuit board to perform a specific electronic function. |
| Slpm | Standard litres per minute. This is the flow referenced to standard temperature and pressure conditions. For the purposes of this manual, all flows are referenced to 0 °C and 101.3 kpa (1 atm). |

1.4 Background/Theory

Sulfur dioxide (SO₂) is the product of the combustion of sulfur compounds and causes significant environmental pollution. The main sources of SO₂ in the environment are from various industrial processes such as the burning of coal in power stations, the extraction of metals from ore and combustion of fuel within automobiles.

Sulfur dioxide is a noxious gas that can cause respiratory damage as well as impairing visibility when in high concentrations. Sulfur dioxide also has the potential to form acid rain (H₂SO₄) which causes health, environmental and infrastructural damage.

1.4.1 Measurement Theory

The measurement of sulfur dioxide (SO₂) is based on classical fluorescence spectroscopy principles. SO₂ exhibits a strong ultraviolet (UV) absorption spectrum between 200 - 240 nm. When SO₂ absorbs UV at this wavelength, photon emission occurs (300 - 420 nm). The amount of fluorescence emitted is directly proportional to the SO₂ concentration.

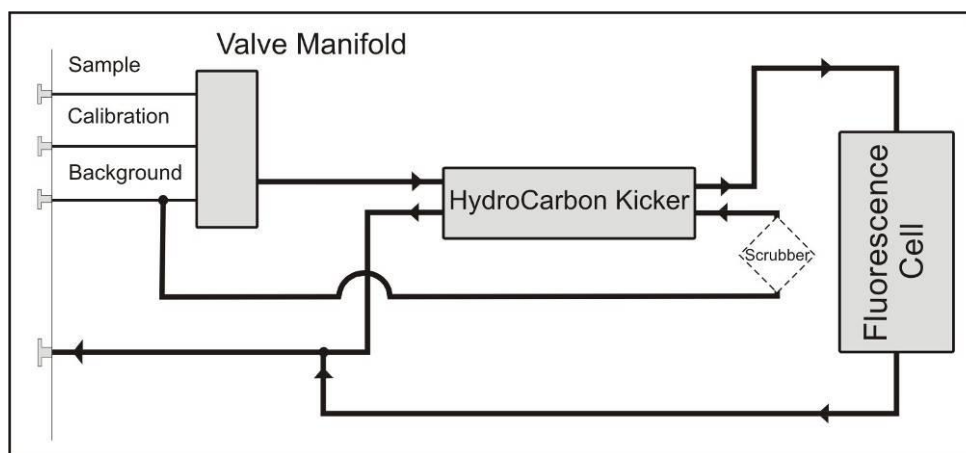


Figure 1 – Simple Pneumatic Diagram

The Serinus 50 follows these principles and measurement techniques:

- Sample air is passed through a hydrocarbon kicker which removes hydrocarbons (a common interferent).
- UV energy from a zinc discharge lamp is passed through a UV bandpass filter to produce radiation at 214 nm.

- The radiation is focused into the fluorescence cell where it is absorbed by the SO₂ molecules.
- The SO₂ molecules emit photons (fluoresce) uniformly in all directions.
- Wavelengths between 310 - 350 nm, which are specific to SO₂, pass through a bandpass filter where they reach the photomultiplier tube which measures the signal intensity.
- A reference detector monitors the emission from the zinc lamp and is used to correct for fluctuations in lamp intensity.

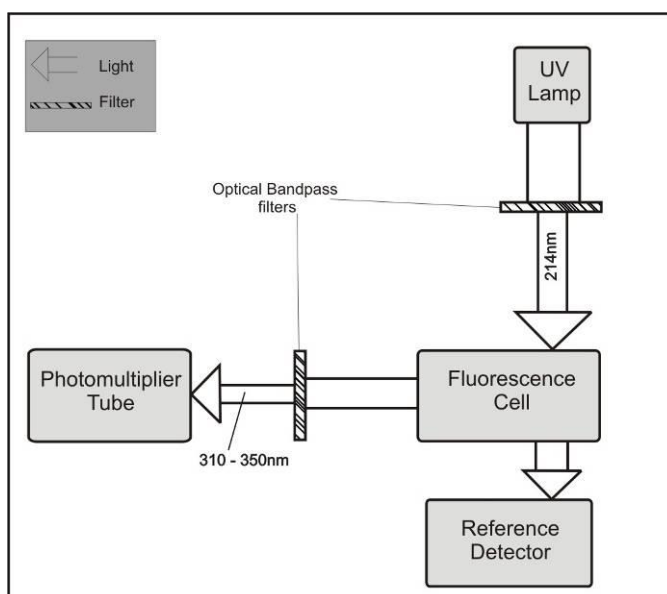


Figure 2 – Optical Measurement Theory

1.4.2 Kalman Filter Theory

The digital Kalman filter provides an ideal compromise between response time and noise reduction for the type of signal and noise present in ambient air analyser.

The Kalman filter enhances measurements by modifying the filter time base variable, depending on the change rate of the measured value. If the signal is changing rapidly, the instrument is allowed to respond quickly. When the signal is steady, a long integration time is used to reduce noise. The system continuously analyses the signal and uses the appropriate filtering time.

1.5 Instrument Description

The major components of the Serinus 50 are described below:

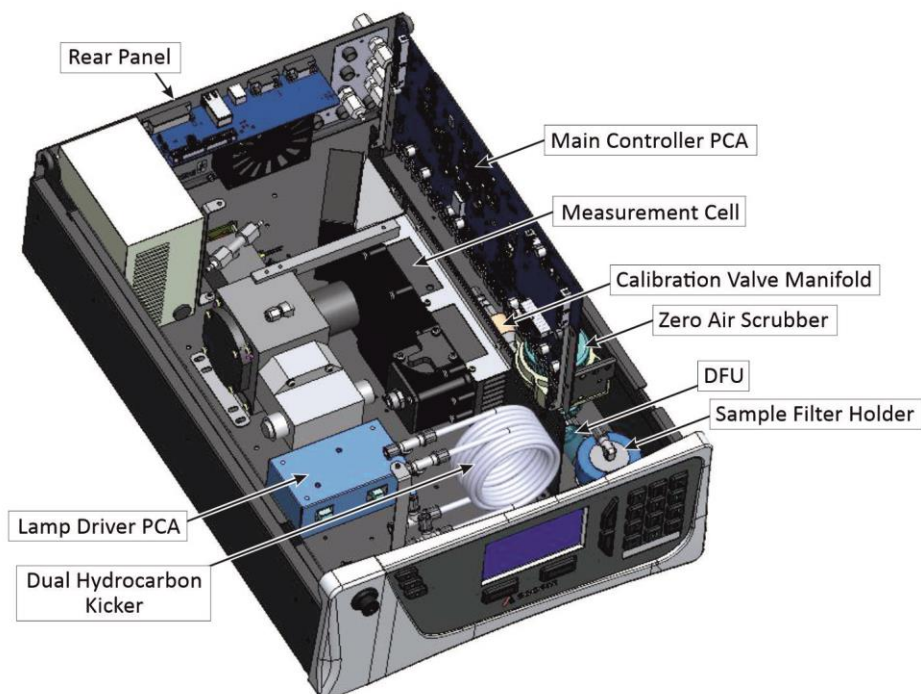


Figure 3 – Major Components of Serinus 50

1.5.1 Calibration Valve Manifold

Refer to Figure 3 for the location of calibration valve manifold. The calibration valve manifold switches between sample, calibration and background gas.

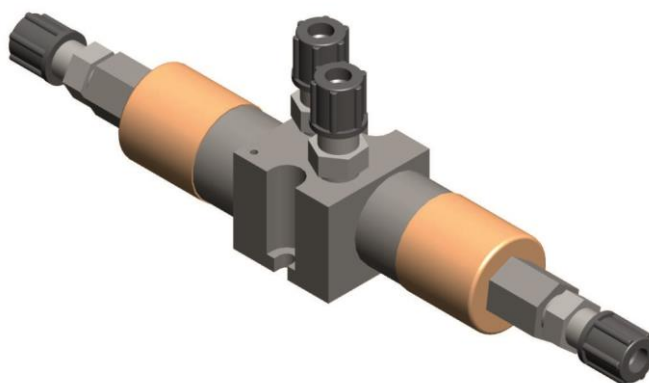


Figure 4 – Calibration Valve Manifold

1.5.2 Sample Filter Holder

Refer to Figure 3 for the location of sample filter holder. Within the sample filter holder there is a particulate filter. The particulate filter is a Teflon 5-micron (μm) filter with a diameter of 47 mm. This filter prevents all particles larger than 5 μm from entering the measurement system that could interfere with sample measurement.

Note: The 5-micron filter element should be replaced on a regular basis.

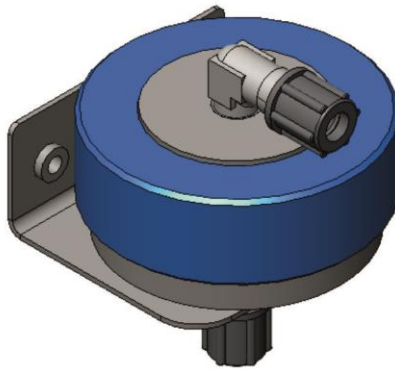


Figure 5 – Sample Filter Holder

1.5.3 Dual Hydrocarbon Kicker

Refer to Figure 3 for the location of dual hydrocarbon kicker. The dual hydrocarbon kicker removes interfering hydrocarbons from the sample air. This is achieved by using counter current exchange, where an air with a lower concentration of hydrocarbons moves in an opposite direction to air with a higher concentration. The high concentrations of hydrocarbons diffuse through a selective permeation membrane to the low concentration exhaust air and are removed. Increasing the flow of the low concentration air also increase the rate of diffusion.

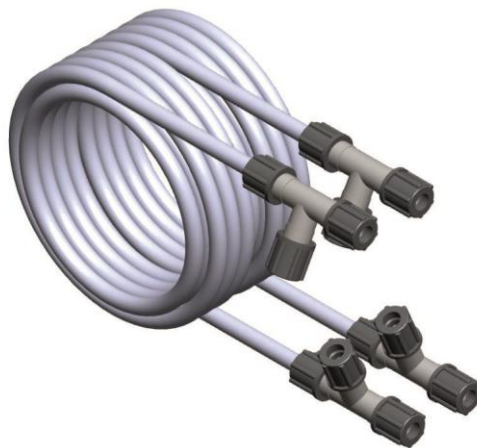


Figure 6 – Dual Hydrocarbon Kicker

1.5.4 Zero Air Scrubber

Refer to Figure 3 for the location of zero air scrubber. The zero air scrubber is an activated charcoal scrubber which draws in ambient air to create SO₂ free air used for background corrections, internal zero and bypass air for the dual hydrocarbon kicker, aiding in the removal of hydrocarbons from the sample stream prior to entering the measurement cell.



Figure 7 – Zero Air Scrubber

1.5.5 DFU

The Disposable Filter Unit (DFU) is a fine filter used to remove particulates down to 0.1 micron from the sample measurement.



Figure 8 – DFU

1.5.6 Main Controller PCA

Refer to Figure 3 for the location of main controller PCA. The main controller PCA controls all the processes within the instrument. As well as the on-board microprocessor, it contains a battery backed clock, calendar, analog to digital converters and many other circuits for signal processing and control. The ambient pressure and chassis temperature sensors are also located on this board. The main controller PCA is located above all other components within the instrument. It pivots on hinges to allow access to the components underneath.



CAUTION

Never place objects on top of the main controller PCA as it may result in damage.

1.5.7 Measurement Cell

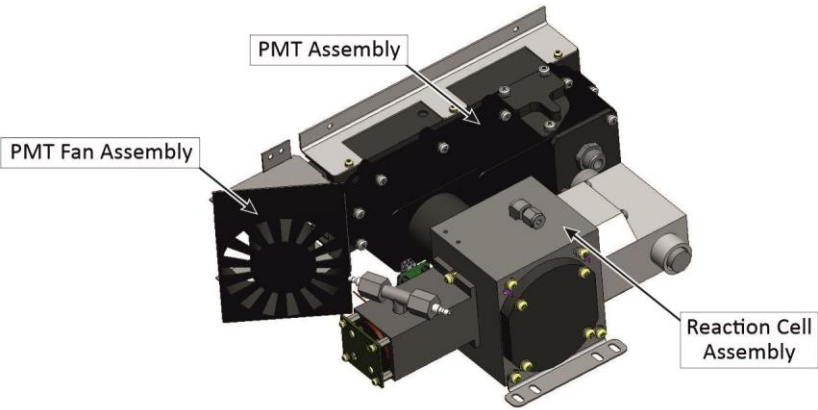


Figure 9 – Measurement Cell

1.5.7.1 PMT Assembly

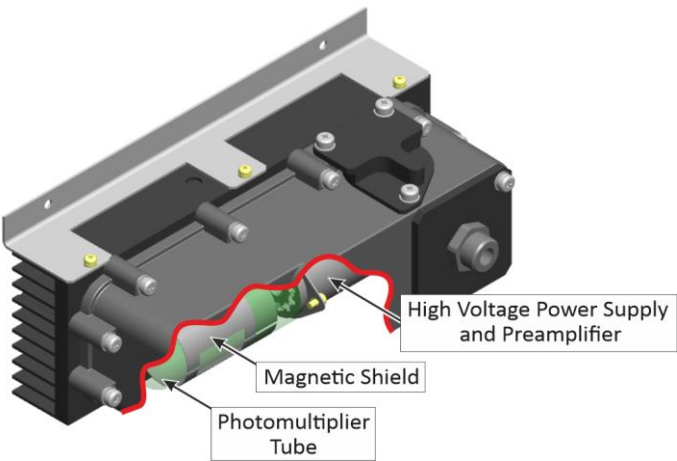


Figure 10 – PMT Assembly - 1

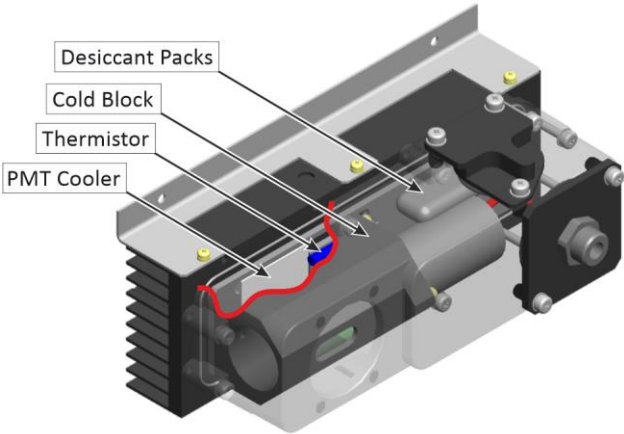


Figure 11 – PMT Assembly - 2

Photomultiplier Tube (PMT)

Refer to Figure 10 for the location of PMT. The PMT measures the amount of light reaching it. Filtered light from the reaction cell reaches the PMT, which allows for direct measurement of SO_2 .

High Voltage Power Supply and Preamplifier

Refer to Figure 10 for the location of high voltage power supply and preamplifier. This is a single component within the PMT housing. Its function is to supply high voltage to the PMT and to amplify the photocurrent signal from the PMT.

Magnetic Shield

Refer to Figure 10 for the location of magnetic shield. The magnetic shield is used to protect PMT from electromagnetic radiation. Which will reduce the amount of noise generated in the PMT.

PMT Cooler and Thermistor

Refer to Figure 11 for the location of PMT cooler and thermistor. The PMT cooler and thermistor are mounted below and in the cold block respectively. They ensure that the PMT is operated at a constant 13 °C. This reduces the measurement noise of the PMT.

Cold Block

Refer to Figure 11 for the location of cold block. The cold block is holding the PMT and maintaining the temperature of PMT at 13 °C.

1.5.7.2 Reaction Cell Assembly

Refer to Figure 9 for the location of reaction cell assembly. The reaction cell is where the UV radiation from the UV lamp is absorbed by the SO_2 molecules present in the sample. The SO_2 molecules enter an excited state then they release this energy in the form of a fluorescence reaction, emitting photons. A portion of this light is filtered to a specific wavelength in the region of 310 - 350 nm by the bandpass filter which is subsequently measured by the PMT.

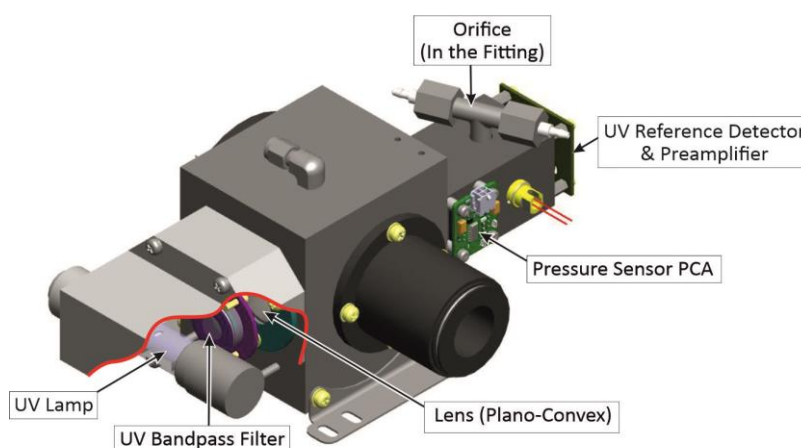


Figure 12 – Reaction Cell Assembly - 1

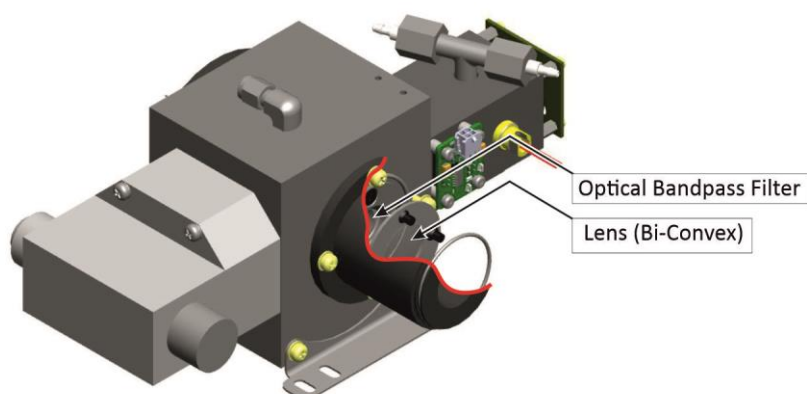


Figure 13 – Reaction Cell Assembly - 2

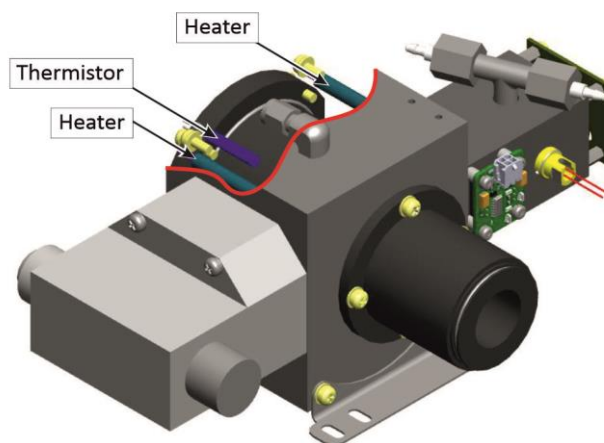


Figure 14 – Reaction Cell Assembly - 3

UV Lamp

Refer to Figure 12 for the location of UV lamp. The UV lamp is a discharge zinc lamp which emits UV radiation over a broad range.

UV Bandpass Filter

Refer to Figure 12 for the location of UV bandpass filter. The UV bandpass filter only allows UV at 214 nm through into the reaction cell.

Optical Bandpass Filter

Refer to Figure 13 for the location of optical bandpass filter. The optical bandpass filter is a coloured glass that only allows light of a specific wavelength through to the PMT (310 - 350 nm).

Lenses

Refer to Figure 12 and Figure 13 for the location of lenses. Two silica lenses are used in the optical path, the first (plano-convex) to focus UV radiation inside the reaction cell and the second (bi-convex) focuses the fluorescent light onto the PMT cathode from the SO₂ reactions.

UV Reference Detector & Preamplifier

Refer to Figure 12 for the location of UV reference detector & preamplifier. The UV reference detector monitors the intensity of UV radiation entering the reaction cell. This measurement is used to compensate for variations in UV lamp output. The preamplifier circuit board converts the current signal from reference detector to a voltage signal and provides amplification.

Orifice

Refer to Figure 12 for the location of orifice. The critical orifice is made of a high precision stainless steel and sapphire, which are located in the tee fitting on the top of the reaction cell. The critical orifice is a simple device that operates at a set temperature and requires minimal maintenance, it will passively keep the volume flow rate constant at a known value.

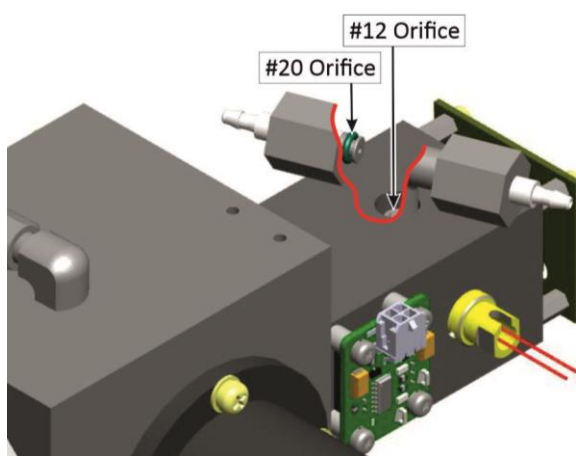


Figure 15 – Orifice

Pressure Sensor PCA

Refer to Figure 12 for the location of pressure sensor PCA. The pressure sensor PCA has an absolute-pressure transducer that is mounted on the reaction cell and sealed via a gasket. This allows the pressure sensor PCA to measure the sample air pressure in the reaction cell. This pressure reading is used to verify sample flow and correct measurement readings for pressure variations.

Heater and Thermistor

Refer to Figure 14 for the location of heater and thermistor. Heater and thermistor are mounted in the reaction cell. They are used in this instrument to keep the cell temperature at a stable and constant 50 °C.

1.5.7.3 PMT Fan Assembly

Refer to Figure 9 for the location of PMT fan assembly. The PMT fan assembly is mounted near the heatsink to remove the heat generated by PMT cooler and maintain the measurement cell temperature.

1.5.8 Lamp Driver PCA

Refer to Figure 3 for the location of lamp driver PCA. The lamp driver PCA generates a high-frequency voltage (800 - 1100 V) to start and maintain the UV lamp at a constant intensity. The lamp current is set by the Instrument and is maintained at 35 mA.



CAUTION

The lamp driver PCA contains high voltages. Ensure the instrument is turned OFF before accessing this component.

Note: The lamp driver PCA is the same type as used on the Serinus 10 O₃ Analyser. For the Serinus 50, with a REV D lamp driver PCA, set all the jumpers marked in red (JP1 - JP5) to the left (refer to Figure 16). The correct setting must be used or damage to the electronics may occur.

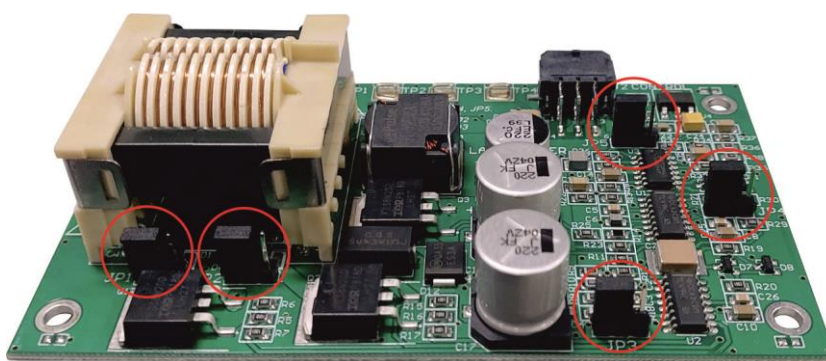


Figure 16 – Lamp Driver PCA Type Jumper Setting (REV D)

1.5.9 Pneumatic Tubing

The pneumatic tubing inside this instrument is specially designed for use in Acoem Australasia Serinus instruments. It is flexible like silicone tubing with the added inner sheath of PVDF to prevent contamination of the sample. Care should be taken when removing and inserting the tubing into the fittings.



Figure 17 – Ecotech Tubing

1.5.10 Rear Panel

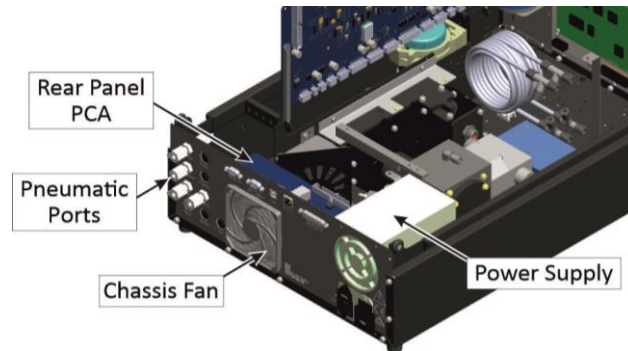


Figure 18 – Rear Panel

1.5.10.1 Rear Panel PCA

Refer to Figure 18 for the location of rear panel PCA. The rear panel PCA contains all the connections for external communications, including analog input, analog output, digital inputs, digital outputs, RS232, USB, and TCP/IP network connection (optional). Refer to Section 4.4.4 for details of all the jumper's function.

1.5.10.2 Chassis Fan

Refer to Figure 18 for the location of chassis fan. The chassis fan is assembled to the back side of the instrument to maintain the Serinus 50 temperature. Fan filter is also installed with the fan to prevent the instrument from dust.

Note: Clean the chassis fan filter on regular interval (refer to Section 6.4.2).

1.5.10.3 Power Supply

Refer to Figure 18 for the location of power supply. The power supply is a self-contained unit housed in a steel case designed to meet all the relevant safety and EMC requirements. This new revision of power supply is different to the previous revision as there is no need to set the operating voltage switch because it is autoranging.

The output of the power supply provides +12 V, +5 V, -12 V and +3.3 V to the instrument.

ON/OFF Switch

The ON/OFF switch is located on the rear panel (bottom right facing the rear of the instrument), refer to Figure 19. It is part of the power supply.



Figure 19 – Power ON/OFF Switch

1.5.10.4 Pneumatic Ports

Refer to Section 2.3.2 for pneumatic ports connection and detail.

1.5.11 Communications

Communication between the instrument and either a data logger, laptop or network can be performed with the following communication connections located on the rear panel (refer to Figure 20). These connections can be used for downloading data, onsite diagnostics, maintenance and firmware upgrades.

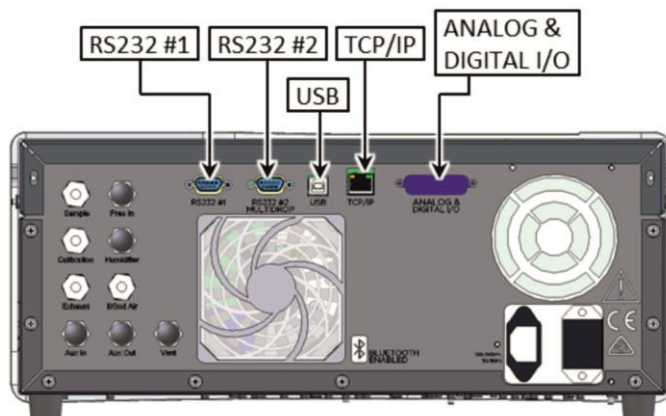


Figure 20 – Communication Connections

RS232 #1

This port is designed to be used for simple RS232 communication.

RS232 #2

This port is designed to be used for simple RS232 communication or in multidrop configuration.

USB

This port can be used for instrument communications with equipment through a standard USB port.

TCP/IP Network (optional)

This port is best used for remote access and real-time access to instruments when a network is available to connect with.

Analog & Digital I/O

The analog/digital port sends and receives analog/digital signals to other devices. These signals are commonly used to activate gas calibrators or for warning alarms.

Analog Outputs

The instrument is equipped with three user definable analog outputs. The outputs are menu selectable as voltage output 0 - 5, 0.25 - 5 or 0.5 - 5 VDC or current output 0 - 20, 2 - 20 or 4 - 20 mA. The current

output can also be configured as a voltage output of 0 - 10 V, by configuring the jumpers (JP3) on the rear panel PCA.

Refer to Section 4.4 for more detail.

Analog Inputs

The instrument is also equipped with three analog voltage inputs (0 - 5 VDC CAT 1) with resolution of 15 bits plus polarity.



CAUTION

Exceeding these voltages can permanently damage the instrument and void the warranty.

Digital Status Inputs

The instrument is equipped with eight logic level inputs (0 - 5 VDC CAT 1) for the external control of zero/span calibration sequences.



CAUTION

Exceeding these voltages can permanently damage the instrument and void the warranty.

Digital Status Outputs

The instrument is equipped with eight open collector outputs, which will convey instrument status conditions and warning alarms such as no flow, sample mode, etc.



CAUTION

Exceeding 12 VDC or drawing greater than 400 mA on a single output or a total greater than 2 A across the eight outputs can permanently damage the instrument and void the warranty.

Bluetooth

This allows for remote access of the instrument to any Android device with the **Serinus Remote Application** installed. It uses Bluetooth to control the instrument, view parameters, download data and construct real-time graphs.

This page is intentionally blank.

2. Installation

2.1 Initial Check

Packaging

The Serinus® 50 is transported in packaging specifically designed to minimise the effects of shock and vibration during transportation. Acoem Australasia recommends that the packaging be kept if there is a likelihood that the instrument is going to be relocated.

Note: The red plastic caps that seal the pneumatic connections during transport must be removed prior to operation.

Items Received

With the delivery of the Serinus 50, the user will receive the following:

Table 3 – List of Items Received

| Item Name | Part No. | Image |
|---------------------------------------|------------|---------------------------------|
| Acoem Australasia Serinus 50 analyser | E020050 | Refer to Figure 21, callout 7. |
| Green Ecotech Resources USB Stick | H030137-01 | Refer to Figure 21, callout 10. |
| Manual (hardcopy optional) | M010029 | - |
| USB Memory Stick | H030021 | Refer to Figure 21, callout 9. |
| USB Cable | COM-1440 | Refer to Figure 21, callout 8. |
| Keys for Slam Lock | - | Refer to Figure 21, callout 11. |
| Data Sheet | - | Refer to Figure 21, callout 12. |
| Power Lead (120 V)* | C040007 | Refer to Figure 21, callout 2. |
| Power Lead (240 V)* | C040006 | Refer to Figure 21, callout 1. |
| | C040008 | Refer to Figure 21, callout 3. |
| | C040009 | Refer to Figure 21, callout 4. |
| | C040010 | Refer to Figure 21, callout 5. |
| | C040054 | Refer to Figure 21, callout 6. |

*The power lead received depends on the power supply of the country (120 V or 240 V).

Note: Check that all these items have been delivered undamaged. If any item appears damaged, contact your supplier before turning the instrument ON.

Note: It is recommended to keep packaging material for transport or storage purpose.



Figure 21 – Received Item

Opening the Instrument

Check the interior of the instrument with the following steps:

1. Refer to Figure 22. Remove the thumb screws located on the rear panel.



Figure 22 – Opening the Instrument - 1

2. Refer to Figure 23. Unlocked the slam lock using keys provided with instrument.



Figure 23 – Opening the Instrument - 2

3. Refer to Figure 24. Open the chassis lid latch by pressing in the slam lock located on the front panel.



Figure 24 – Opening the Instrument - 3

4. Refer to Figure 25. To completely remove the lid, slide the lid backwards until the rollers line up with the gaps in the track and lift the lid upwards to remove from the instrument.



Figure 25 – Opening the Instrument - 4

5. Check that all pneumatic and electrical connectors are connected. If not, reconnect.
6. Check for any visible and obvious damage. If damage exists contact your supplier and follow the instructions in claims for Damaged Shipments and Shipping Discrepancies at the front of this manual.

2.2 Installation Notes

When installing the instrument the following points must be taken into account:

- The instrument should be placed in an environment with minimal dust, moisture and variation in temperature (refer to Section 2.4 and 2.5 for specific approval set-up).
- For best results the instrument should be located in a temperature and humidity controlled environment (air conditioned shelter). An enclosure temperature of 25 - 27 °C is optimum.
- Whether in a rack or placed on a bench, the instrument should not have anything placed on top of it or touching the case.
- Instruments should be sited with easy access to the front panel (instrument screen/USB memory stick) and to the rear panel (communication ports/pneumatic connections).
- It is recommended that the sample line be as short as possible and/or a heated manifold be used for sampling (minimising moisture condensation in the sample).
- Do not pressurise the sample line under any circumstances. Sample should be drawn through the instrument under atmospheric pressure. This should be achieved by either using the internal pump option (if installed) or an external vacuum pump connected to the exhaust port of the instrument.
- When supplying span gas, ensure the flow is approximately 1.1 slpm and excess is sufficiently vented.

Note: The power ON/OFF switch is accessible from the rear of the instrument only. Install the instrument so that the ON/OFF power switch is accessible.

2.3 Instrument Set-up

After installing the instrument the following procedures should be followed to ready the instrument for monitoring.

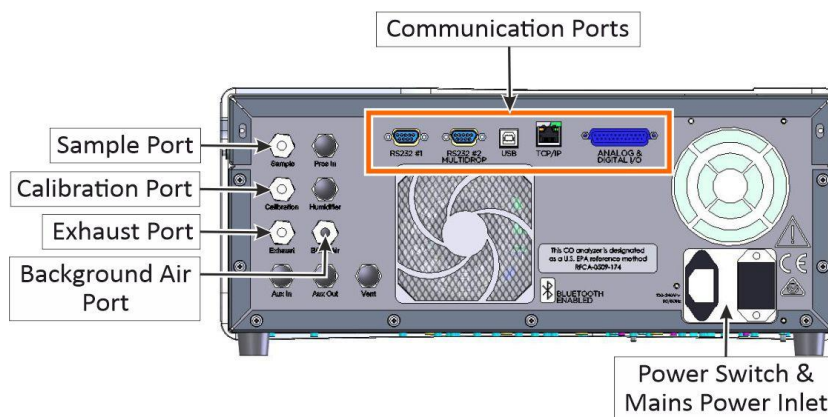


Figure 26 – Instrument Rear Panel

2.3.1 Power Connections



CAUTION

Hazardous voltages exist within the instrument. Do not remove or modify any of the internal components or electrical connections whilst the mains power is ON.



CAUTION

Always unplug the equipment prior to removing or replacing any components.



CAUTION

Do not replace the detachable mains supply cord with an inadequately rated cord. Any mains supply cord that is used with the instrument must comply with the safety requirements (250 V/10 A minimum requirement).



CAUTION

Ensure that the mains supply cord is maintained in a safe working condition.



CAUTION

When connecting the mains power to the instrument, the following must be adhered to otherwise the safety and the reliability of the instrument may be compromised.

- A three pin mains power lead with a protective earth conductor **MUST** be used.
- The mains power outlet (wall socket) must be in the range of 100 - 240 VAC, 50 - 60 Hz.
- The mains power outlet must be protected by an earth leakage protection circuit.

- Refer to Figure 27. Connect the instrument's power cord into the instrument and mains power outlet.



Figure 27 – Connect Power Cord

- Refer to Figure 28. Turn ON the power switch.

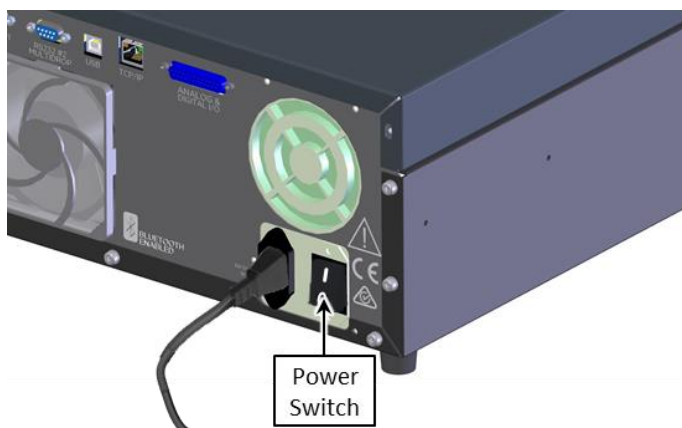


Figure 28 – Turn ON Power Switch

2.3.2 Pneumatic Connections

The Serinus® 50 has four pneumatic ports on the rear panel of the instrument; the **Sample Port**, the **Calibration Port**, the **Exhaust Port** and the **Background Air Port**. All tubing and fittings used should follow the instructions below:

- Must be made of Teflon® FEP material, Kynar®, stainless steel, glass or any other suitably inert material.
- Sample line should be no more than two meters in length with 1/8" ID and 1/4" OD.
- Sample inlet pressure should not exceed 5 kPa above ambient pressure.
- Tubing must be cut squarely and any burrs removed.

Procedure

1. Refer to Figure 29. Remove all the dust plugs.

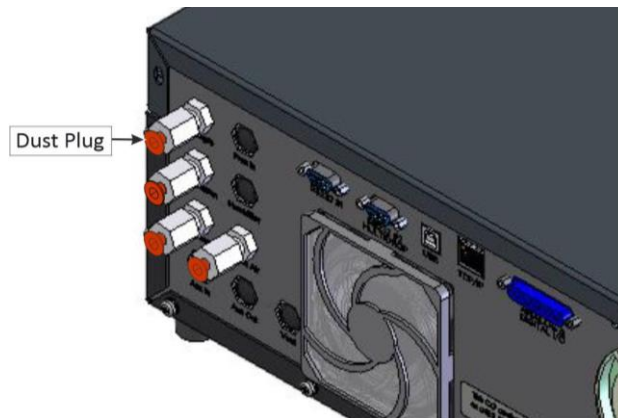


Figure 29 – Dust Plugs

2. Refer to Figure 30. Remove the sample port nut.



Figure 30 – Remove Nut

3. Refer to Figure 31. Inspect the ferrules inside the nut for correct orientation.



Figure 31 – Ferrules Correct Orientation

4. Refer to Figure 32. Replace the nut loosely, only 2 or 3 threads, on the sample port.

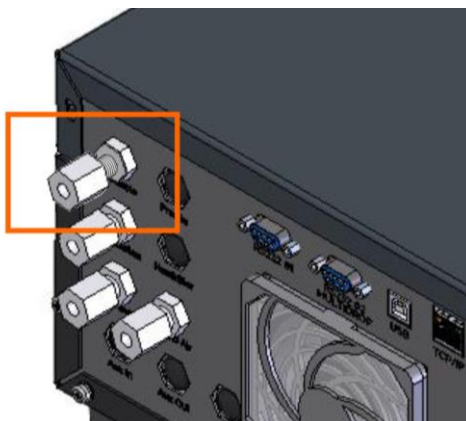


Figure 32 – Replace Nut Loosely

5. Refer to Figure 33. Push the tubing into the end of the nut until you hit the tube stop inside the fitting.



Figure 33 – Insert Tube

6. Refer to Figure 34. Tighten clockwise until finger tight.



Figure 34 – Tighten Nut

7. Nuts should be re-tightened when instrument reaches operating temperature.
8. Follow the same above procedure to connect calibration, exhaust line and background air line.

Sample Port

The sample port must be connected to an ambient source of sample air. When using a sample manifold the Serinus requires at least 1.1 slpm delivered to the sample manifold (0.73 slpm for measurement plus approximately 50% excess).

Calibration Port

The calibration port can be connected to the span/zero sources. It is recommended that a gas calibrator (Acoem Australasia's Serinus Cal 1000, 2000 and 3000) be used with a cylinder of sulfur dioxide to deliver precise concentrations of SO₂.

Note: All connections to this port should not exceed ambient pressure. A vent is required for excess span gas.

Exhaust Port

The exhaust port is where the measured sample, calibration gas, background air and kicker bypass air are exhausted from the instrument. The exhaust port should be connected to the vacuum pump using 1/4" OD tubing. The P030004 240 V vacuum pump (P030005 110 V) available from Acoem Australasia, can be used to provide the required vacuum and flow for one Serinus 50 analyser as well as two other instrument such as a Serinus 10 or Serinus 30.



CAUTION

Sulfur dioxide is a toxic gas. It is recommended that exhaust air is expelled into an unoccupied area, as it contains trace levels of sulfur dioxide. The exhaust must be a suitable distance from the sample inlet to avoid influencing the ambient measurements.

Background Air Port

The background air port is used to supply zero air to the instrument. The internal SO₂ scrubber is usually sufficient for this purpose. This air is used for background, internal zero calibration/check and hydrocarbon kicker air.

2.3.3 Communications Connections

There are a number of ways to communicate with the instrument, refer to Section 4 for detail.

2.3.4 Instrument Set-up

1. Refer to Figure 35. Open the lid and ensure the USB memory stick is installed.



Figure 35 – Installation of USB Memory Stick

2. Refer to Figure 36. Check the battery is turned ON at the main controller PCA.

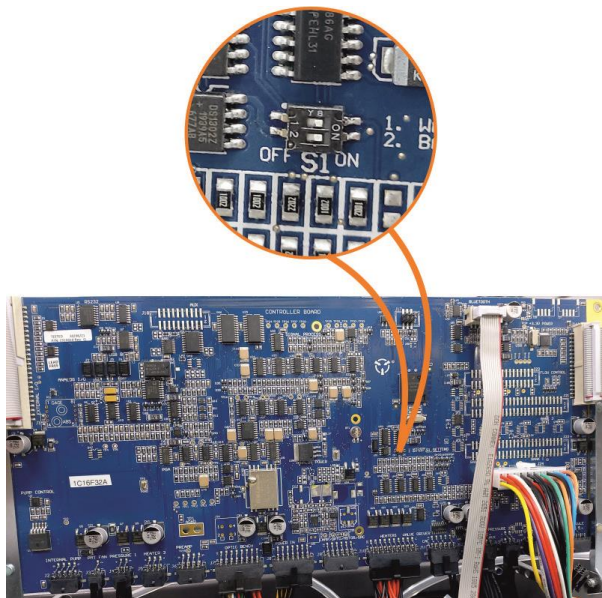


Figure 36 – Switching the Battery ON/OFF

3. Turn ON the instrument and allow the warm-up procedure to complete (refer to Section 3.1).
4. Set the time and date (refer to Section 3.4.8).
5. Set the digital filter to the desired setting (refer to Section 3.4.9).
6. Set the internal data logging options (refer to Section 3.4.23).
7. Set the analog and digital input and output settings (refer to Section 3.4.25, Section 3.4.26, Section 3.4.27 and Section 3.4.28).
8. Perform a pressure sensor check (refer to Section 6.4.10).
9. Perform a leak check (refer to Section 6.4.4).
10. Leave the instrument to warm-up and stabilise for two-three hours (if the user opted for the IZS option, refer to Section 8.7).

11. Perform a manual background (refer to Section 5.3).
12. Perform a zero precision check (refer to Section 5.4).
13. Perform a span calibration adjustment (refer to Section 5.5).
14. Follow the procedure for a multipoint precision check (refer to Section 5.7).
15. The instrument is now ready for operation.

2.4 U.S. EPA Equivalent Set-up

The Serinus 50 is designated as equivalent method EQSA-0509-188 by the U.S. EPA (40 CFR Part 53).

The instrument must be used under the following conditions to satisfy its equivalency:

Range

0 - 0.5 ppm

Ambient Temperature

20 - 30 °C

Line Voltage

105 - 125 VAC, 60 Hz

Pump

Acoem Australasia optional internal or external pump

Filter

Factory setup to meet requirement:

Instrument Settings

If the units in the Measurement Menu are changed from volumetric to gravimetric (or gravimetric to volumetric), the instrument must be calibrated.

The following menu selections must be used:

Measurement Settings

Background Interval: Enabled

Calibration Menu

Span Comp: Disabled

Diagnostics Menu

Press/Temp/Flow Comp: On

Diagnostic Mode

Operate

Control Loop

Enabled

The instrument must be operated and maintained in accordance with this user manual.

The Serinus 50 analyser is designated U.S. EPA Equivalent Method with or without the following options/items:

- Internal pump
- Rack mount assembly
- Optional Ethernet port

2.5 EN Type Approval Set-up

The Serinus 50 has been certified to TÜV Performance Standards for Continuous Ambient Air Quality Monitoring Systems, certificate number is TÜV 936/21221977/B. The Serinus 50 must be used under the following conditions to meet EN requirements:

Range

0 - 400 ppb

Ambient Temperature

0 - 30 °C

Instrument Settings

The instrument must be operated and maintained in accordance with this user manual.

The following menu selections must be used:

Calibration Menu

Span Comp: Disabled

Diagnostics Menu

Press/Temp/Flow Comp: On

Diagnostic Mode: Operate

Control Loop: Enabled

2.6 Transporting/Storage

Transporting the instrument should be done with great care. It is recommended that the packaging the Serinus was delivered in should be used when transporting or storing.

When transporting or storing the instrument the following points should be followed:

1. Turn OFF the instrument and allow it to cool down.
2. Remove all connections of pneumatic pipe, power cables and communication cables from the instrument.
3. Refer to Figure 36. If storing over a long period (six months) turn the battery OFF by the switch on the main controller PCA.
4. Remove the instrument from the rack.
5. Refer to Figure 37. Seal each pneumatic ports with a dust plug.

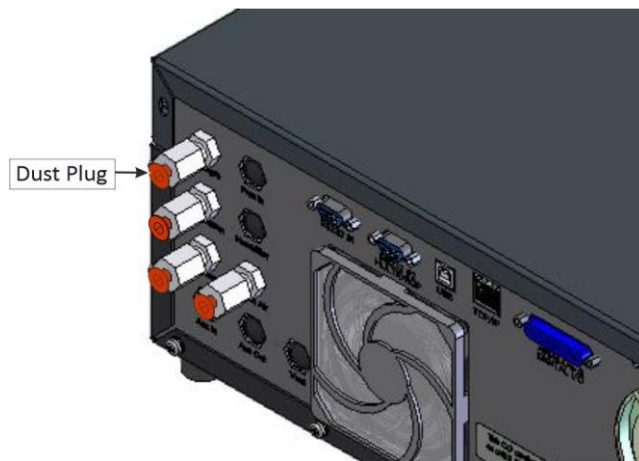


Figure 37 – Dust Plugs

6. Refer to Figure 35. Remove the USB memory stick and pack with instrument.
7. If you have the IZS option installed refer to Section 8.7.3 for specific transporting and storage instructions.
8. Place the instrument back into a plastic bag with desiccant packs and seal the bag (ideally the bag supplied upon delivery).
9. Refer to Figure 38. Place the instrument back into the original foam and box it was delivered in. If this is no longer available find some equivalent packaging that provides protection from damage.

Note: Acoem Australasia recommended to use the same packing material in which instrument is delivered.

10. The instrument is now ready for long term storage or transportation.

Note: After transport or storage the instrument must be set up and calibrated (refer to Section 2.3.4)

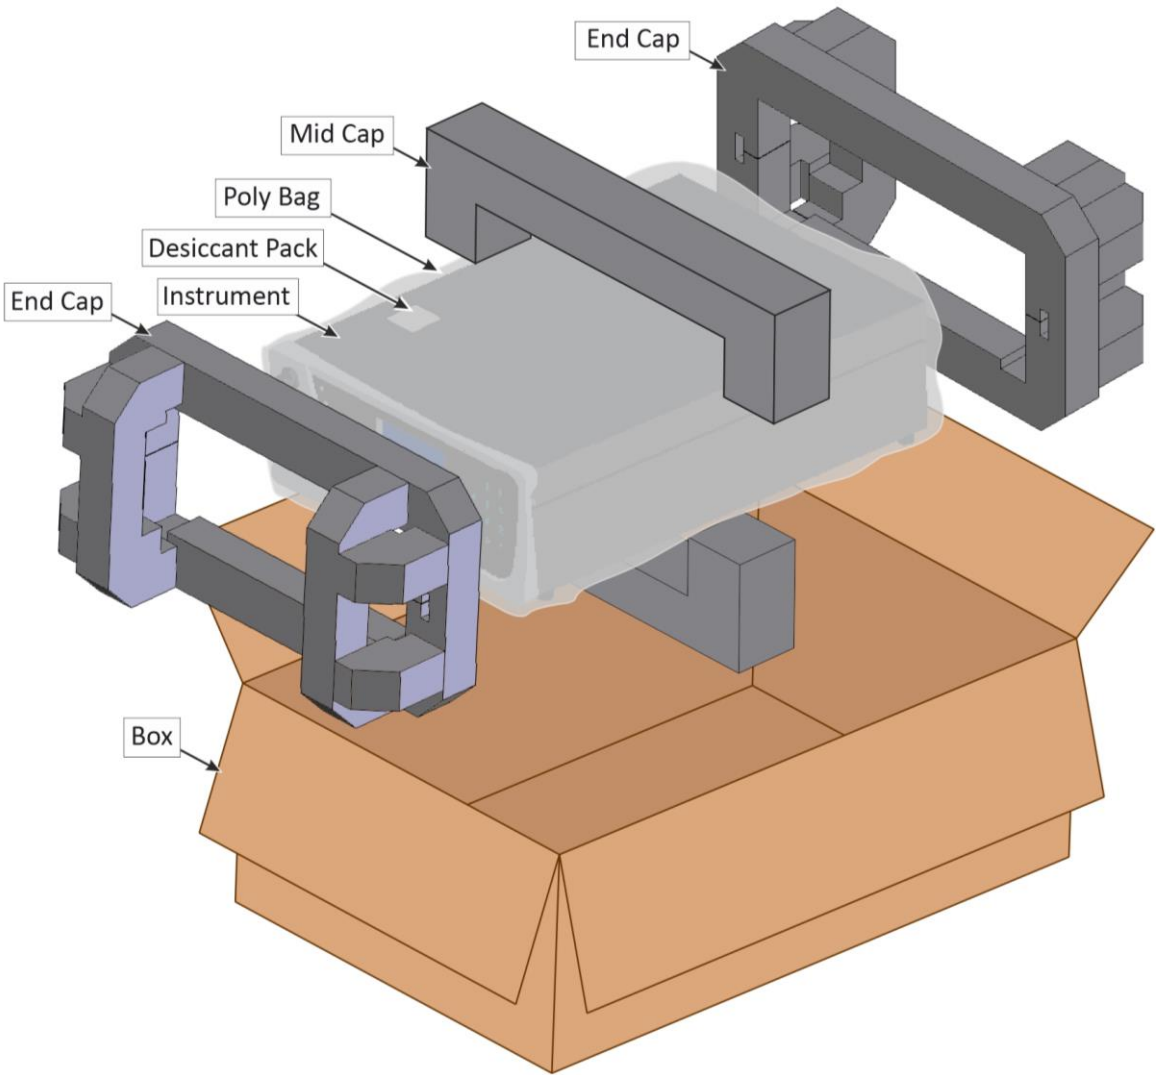


Figure 38 – Packing Instruction

3. Operation

3.1 Warm-Up

When the instrument is first turned ON it must go through a period of adjustment and calibration. No measurements are taken during this warm-up period.

The following activities occur during warm-up:

High Volt Check

Checks to see if the flag to run the high voltage tuning is active.

High Volt Adjust

The high voltage digital pot is adjusted to set the high voltage supply to the PMT for optimal range and performance.

Cell Temperature

Checks to see if the cell temperature has reached 90% of the target set point.

Lamp Stabilise

Adjusts the lamp current to 35 mA and waits for the output to stabilise.

Ref Stabilise

The instrument adjusts the reference voltage to between 2.3 and 2.7 V and waits for the reference voltage signal to stabilise.

Zero Adjust

Adjusts the measure zero pot until the concentration voltage reaches 0 V. Then it makes a small increase to the measure zero pot to bring just above zero.

After warm-up, the instrument will immediately begin making measurements (refer to Section 3.2).

3.2 Measurement

The Serinus 50 primarily operates in one continuous sample cycle. A background is performed after warm-up and once a day at 23:50. It is used to measure background fluorescence in the cell and is subtracted from sample measurements.

Table 4 – Measurement Times

| Instrument State | Duration (minutes) | Description |
|------------------|--------------------|---|
| Bkgnd Fill | 4 | Reaction cell fills with background air |
| Bkgnd Meas | 5 | Measurement of background air |
| SO2 Sample Fill | 3 | Reaction cell fills with sample air |

| Instrument State | Duration (minutes) | Description |
|------------------|--------------------|---------------------------|
| SO2 Sample Meas | continuous | Measurement of sample air |

3.3 General Operation Information

3.3.1 Keypad & Display

The instrument is operated with the use of four sets of buttons:

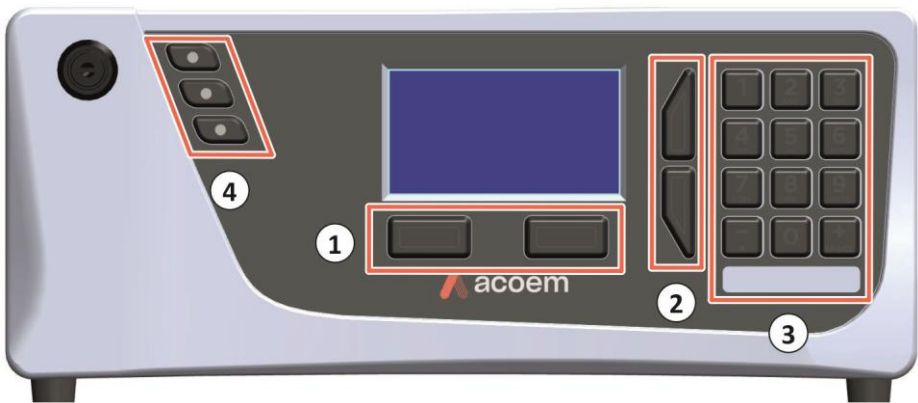


Figure 39 – Front Panel

Selection Buttons (1)

The selection buttons will perform the function specified directly above it on the screen. Generally this involves opening a menu, editing a value, accepting or cancelling an edit or starting an operation.

Scrolling Buttons (2)

The scrolling buttons allow the user to scroll up and down through menus or selection boxes. The scrolling buttons are also used to scroll side to side through editable fields such as: Dates, Times, Numbers etc.

On the home screen these buttons are used for adjusting the screen contrast. Press and hold the up button to increase contrast; press and hold the down button to decrease.

Keypad (3)

The keypad contains the numbers 0 - 9, a decimal point/minus key ($\bar{.}$) and a space/plus key ($\bar{+}$).

In the few cases where letters can be entered, the number keys act like a telephone keypad. Every time a number key is pressed, it cycles through its choices. The up/down arrow keys scroll through all the numbers and the entire alphabet.

| Button | Function |
|---|--|
| 1 | 1 or space, underline |
| 2 | 2, A, B, C, a, b, c |
| 3 | 3, D, E, F, d, e, f |
| 4 | 4, G, H, I, g, h, i |
| 5 | 5, J, K, L, j, k, l |
| 6 | 6, M, N, O, m, n, o |
| 7 | 7, P, Q, R, S, p, q, r, s |
| 8 | 8, T, U, V, t, u, v |
| 9 | 9, W, X, Y, Z, w, x, y, z |
| 0 | 0 or space, underline |
| (⁺ _{SPACE}) and key (⌵) | <p>When editing a floating point number:</p> <p>The key (⌵) inserts a negative sign if the editing cursor is at the start of the number and negative signs are allowed. Otherwise it moves the decimal place to the current cursor location.</p> <p>inserts a positive sign if the cursor is at the start of the number; otherwise it enters a space.</p> <p>For non-floating point numbers:</p> <p>These keys usually increment or decrement the current value by 1. When editing the month field of a date, the (⁺_{SPACE}) and (⌵) key change the month.</p> |

Instrument Status Light Buttons (4)

Located in the top left corner, these lights indicate the status of the instrument:

- A red light indicates that the instrument has a major failure and is not functioning.
- An orange light indicates there is a minor problem with the instrument, but the instrument may still take measurements reliably.
- A green light indicates that the instrument is working and there are no problems.

In the case of an illuminated orange or red status light, go to the **Status Menu** to find which components are failing (refer to Section 3.4.4) or press the orange or red status light button to see a pop-up box with a full list of current faults.

Press the green status light button at any time to close any open edit box or menu and come back to the home screen.

If none of instrument status lights are ON and the keypad is backlit, this indicates that the instrument is running the bootloader. The screen will also indicate that it is in bootloader menu.

3.3.2 Home Screen

The home screen is composed of seven parts: readings (1), error/status line (2), instrument activity line (3), selection buttons (4), time/date (5), concentration units (6) and USB status (7).

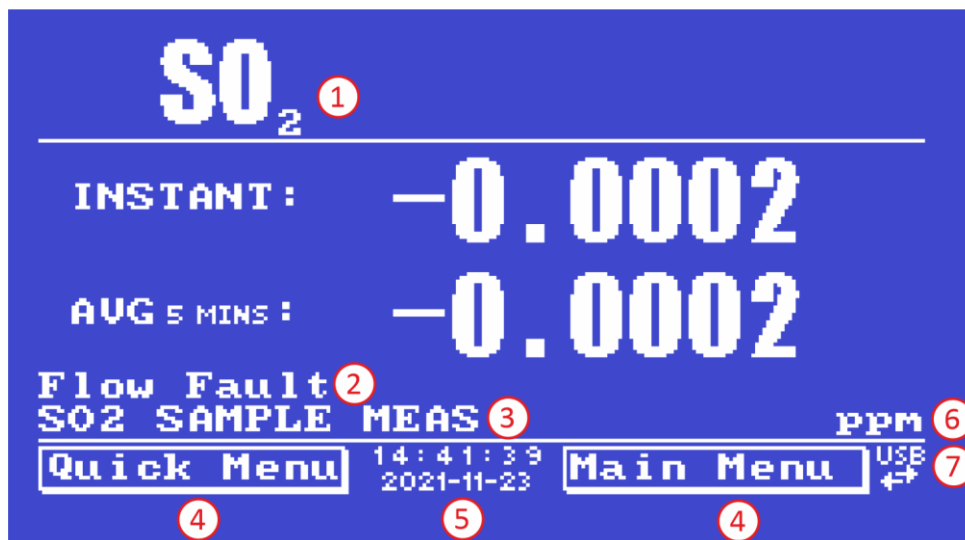


Figure 40 – Home Screen

Readings (1)

Displays the concentration being measured in real-time. The display can be configured to show just the instantaneous data or the instantaneous and average data (refer to Section 3.4.8).

Error/Status Line (2)

The error/status line provides the user with information on any problems the instrument may have. It displays the highest priority error or status condition contained in the **Status Menu** (refer to Section 3.4.4).

Instrument Activity (3)

This line shows what function the instrument is currently performing. Generally, it will show three groups of actions: Warm-up, Measurement or Calibration.

Selection Buttons (4)

These buttons are used on the home screen to enter one of two menus. The **Quick Menu** (refer to Section 3.4.1) contains all information and features necessary for scheduled maintenance. The **Main Menu** (refer to Section 3.4.2) contains all information and fields available to the user and is generally only used during initial set-up and diagnostics.

Time and Date (5)

The time and date are displayed in between the menu buttons at the bottom of the screen.

Concentration Units (6)


The instrument units are displayed in the bottom right corner of the display.

USB Detection (7)

A USB symbol will be displayed in the bottom right corner when the USB memory stick is plugged in (the USB socket is behind the front panel). If the USB symbol is not shown the USB memory stick should be inserted. Underneath the USB symbol arrows may be displayed which indicates data transfer. The USB memory stick must not be removed whilst the arrows are visible.

Note: To safely remove the USB memory stick, navigate to the **Quick Menu** and use the **Safely Remove USB Stick** function (refer to Section 3.4.1).

3.4 Menus & Screens

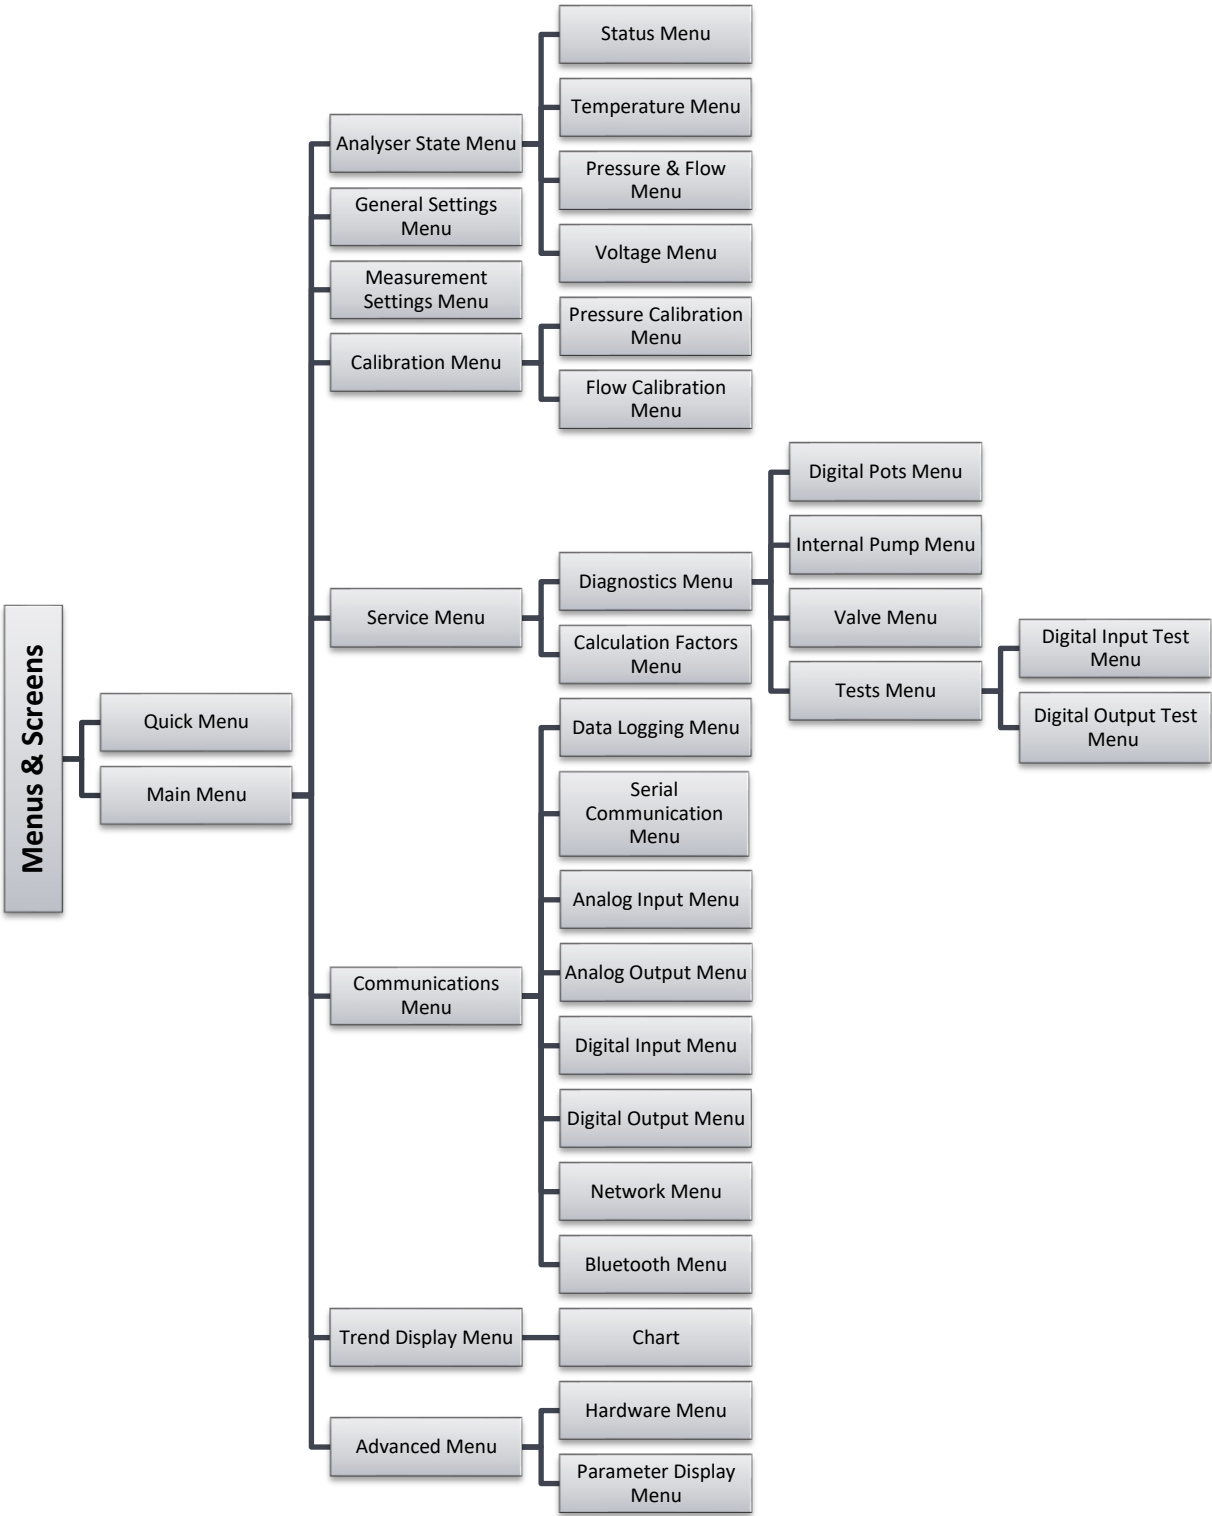

The menu system is divided into two sections selectable from the **Home Screen**: The **Quick Menu** and the **Main Menu**. The **Quick Menu** contains all information and operations necessary during scheduled maintenance visits. The **Main Menu** contains all fields that are accessible to users. It provides information on component failures and measurement parameters as well as editable fields and test procedures.

In general, editable parameters are displayed in bold font. Non-editable information is displayed in a thin font. Some parameters may become editable based on the state of the instrument.

For example, the manual calibration type and mode can only be changed when the instrument has finished the warm-up process.

3.4.1 Quick Menu

The **Quick Menu** contains all the maintenance tools in one easy to use screen. It allows operators to perform calibrations, check important parameters and review the service history.

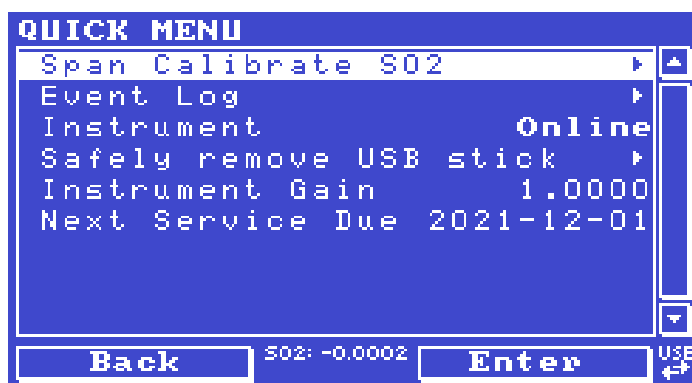


Figure 41 – Quick Menu Screen

| | |
|--------------------------------|--|
| Span Calibrate SO2 | <p>This field is used to perform a span calibration adjustment and should only be used when a known concentration of span gas is being drawn through the reaction cell and the reading is stable.</p> <p>Activating the span calibrate field for a named gas will open a dialog box. Enter the concentration of the span gas that the instrument is sampling and press Accept.</p> |
| Event Log | <p>This field enters a screen with a log of all the events that the instrument has performed. These events include errors and warnings. This log is stored on the removable USB memory stick.</p> <p>The log is organised by month. When the user enters this screen, they will be prompted to enter the month for which they wish to view events.</p> |
| Instrument | <p>This field allows the instrument to be set to either Online (normal instrument operation) or In Maintenance (data is flagged as invalid).</p> |
| Safely Remove USB Stick | <p>Always select this menu item before removing the USB memory stick or select the same menu item from the Service Menu (refer to Section 3.4.13). Failure to do this may cause corruption of the memory stick.</p> |
| Instrument Gain | <p>This is a multiplication factor which is used to adjust the concentration measurement to the appropriate level (set by performing a Span</p> |

| | |
|-------------------------|--|
| | Calibrate). This should be recorded after each calibration in the station log book. |
| Next Service Due | A field that notifies the user when the next instrument service is due. This value is editable in the Next Service Due field of the Advanced Menu (refer to Section 3.4.31). This field is only displayed in the two weeks prior to the date displayed in this field or after the date has occurred. |

3.4.2 Main Menu

There are seven menus on the **Main Menu** screen.

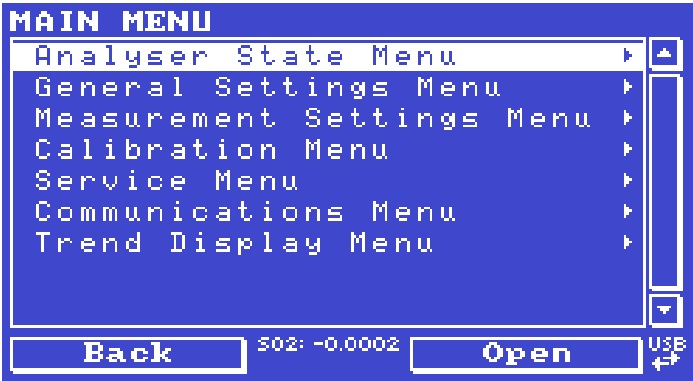


Figure 42 – Main Menu Screen

| | |
|----------------------------------|--------------------------|
| Analyser State Menu | Refer to Section 3.4.3. |
| General Settings Menu | Refer to Section 3.4.8. |
| Measurement Settings Menu | Refer to Section 3.4.9. |
| Calibration Menu | Refer to Section 3.4.10. |
| Service Menu | Refer to Section 3.4.13. |
| Communications Menu | Refer to Section 3.4.22. |
| Trend Display Menu | Refer to Section 3.4.31 |

3.4.3 Analyser State Menu

Main Menu → Analyser State Menu

This displays the status of various parameters that affect instrument measurements.

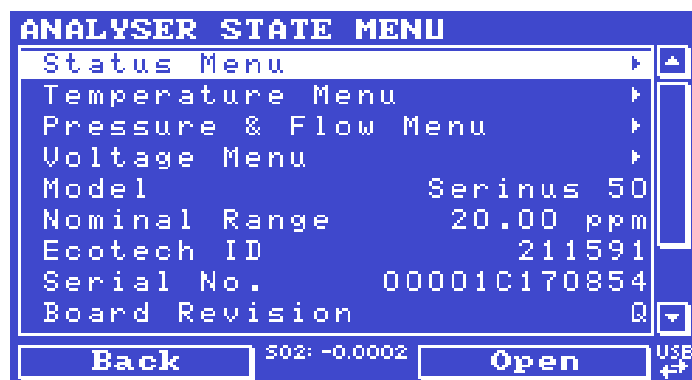


Figure 43 – Analyser State Menu Screen

| | |
|---------------------------------|---|
| Status Menu | Refer to Section 3.4.4. |
| Temperature Menu | Refer to Section 3.4.5. |
| Pressure & Flow Menu | Refer to Section 3.4.6. |
| Voltage Menu | Refer to Section 3.4.7. |
| Model | This field will display the instrument model (e.g. Serinus 50). |
| Nominal Range | The measurement range of the instrument. |
| Ecotech ID | The Ecotech ID number. |
| Serial No. | The main controller PCA serial number. |
| Board Revision | The main controller PCA version. |
| Firmware Ver. | This field displays the firmware version currently in use on this instrument. This can be important when performing diagnostics and reporting back to the manufacturer. |
| Power Failure | This field displays the time and date of the last power failure or when power was disconnected from the instrument. |

3.4.4 Status Menu

Main Menu → Analyser State Menu → Status Menu

The **Status Menu** presents a list of the current **Pass/Fail** status of the main components. During warm-up, the status of some parameters will be a dashed line.

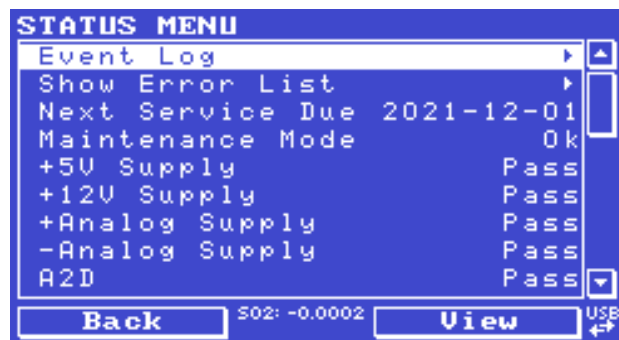


Figure 44 – Status Menu Screen

| | |
|---|--|
| Event Log | This field enters a screen with a log of all the events that the instrument has performed. These events include errors and warnings. This log is stored on the USB memory stick. The log is organised by month. When the user enters this screen they will be prompted to enter the month for which they wish to view events. |
| Show Error List | This field allows the user to display the list of current errors and warnings on the screen. Pressing either of the selection buttons will clear the screen. |
| Next Service Due | This field is visible with the next service due date if the service is due within the next two weeks. |
| Maintenance Mode | Error if the system is “ In Maintenance ” (refer to Section 3.4.13). |
| +5V Supply | Pass if the +5 V power supply is within the acceptable range. |
| +12V Supply | Pass if the +12 V power supply is within the acceptable range. |
| + Analog Supply | Pass if the analog power supply is within the acceptable range (+12 V). |
| - Analog Supply | Pass if the analog power supply is within the acceptable range (-12 V). |
| A2D | Fail only if a problem is detected with the analog to digital conversion. |
| Cell Temp. | Pass if the cell heater temperature is within $\pm 10\%$ of the heater set point (refer to Section 3.4.5). |
| Lamp/Source | Pass if the lamp current is between 15 - 50 mA. |
| Perm Tube Oven [IZS Internal Span Enabled] | Pass if the Perm Tube Oven heater temperature is within $\pm 10\%$ of the Perm Tube Oven set point in the Hardware Menu (refer to Section 3.4.34). |
| Cooler | Status of the PMT cooler. It must be $13\text{ }^{\circ}\text{C} \pm 10\%$ to pass. |

| | |
|---|--|
| Ref Voltage | Pass if the reference voltage is within acceptable limits (1 - 4 V). |
| High Voltage | Fail if the high voltage value is < 20 or > 30 from the target. Target is 700 V. |
| System Power | Pass if the system has an adequate electrical supply. |
| Diagnostic Mode | Error if the electronics are in Diagnostic Mode (refer to Section 3.4.14). |
| Diagnostic PTF Comp | Error if the Pres/Temp/Flow Comp. is disabled (refer to Section 3.4.14). |
| Diagnostic Control | Error if the control loop is disabled (refer to Section 3.4.14). |
| Valve Manual Control | Error if the valve sequencing is disabled (refer to Section 3.4.17). |
| SO2 Conc V Saturated | Indicates if the voltage of the concentration during measurement is within the limits of the analog to digital converter (-0.26 V to 3.29 V). |
| Bkgnd Conc V Saturated | Indicates if the voltage of the concentration during background measurement is within the limits of the analog to digital converter (-0.26 V to 3.29 V). |
| Pressure Calibration | Error if the user is performing a pressure calibration. |
| Flow Calibration [Internal Pump Enabled] | Error if the user is performing a flow calibration |
| Flow Fault | Ok when the instrument has acceptable sample flow based on the difference between cell and ambient pressures. With the internal pump option this fault is monitored by a flow sensor. |
| Flow Block Temp. [Internal Pump Enabled] | Pass if the flow block temperature is within 10% of the heater set point (to keep a constant accurate flow). |
| Cell Press > Ambient | This error occurs when the pressure inside the instrument exceeds the ambient pressure. |
| Chassis Temp. | Pass if the chassis temperature is within the acceptable limits (0 - 50 °C). |
| USB Stick Disconnected | Detects whether a USB memory stick is plugged into the front USB port. |
| Instrument Warmup | Ok once the instrument is out of warm-up status. |
| Backgrounds Disabled | Ok if the menu item Backgrounds in the measurement settings menu is enabled. |

3.4.5 Temperature Menu

Main Menu → Analyser State Menu → Temperature Menu

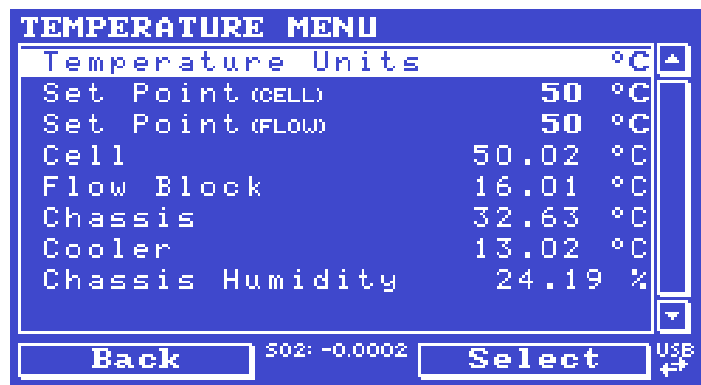


Figure 45 – Temperature Menu Screen

| | |
|---|--|
| Temperature Units | The current temperature units of the instrument (Celsius , Fahrenheit or Kelvin). |
| Set Point (CELL) | The temperature set point of the reaction cell. The factory default is 50 °C. |
| Set Point (FLOW) [Internal Pump Enabled] | The temperature set point of the flow block heater. The factory default is 50 °C. |
| Cell | Displays current temperature of the reaction cell. |
| Flow Block [Internal Pump Enabled] | Displays the current temperature of the flow block. |
| Perm Tube Oven [IZS Internal Span Enabled] | Displays current temperature of the permeation tube oven. |
| Chassis | Displays the temperature of air inside the chassis, measured on the main controller PCA board. |
| Cooler | Temperature of the PMT cold block. |
| Chassis Humidity | Displays the humidity percentage of air inside the chassis, measured on the main controller PCA board. |

3.4.6 Pressure & Flow Menu

Main Menu → Analyser State Menu → Pressure & Flow Menu

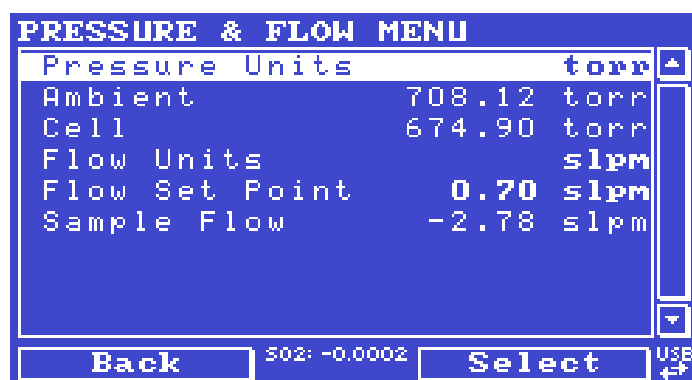


Figure 46 – Pressure & Flow Menu Screen

| | |
|--|--|
| Pressure Units | Select the units that the pressure will be displayed in (torr , PSI , mBar , ATM or kPa). |
| Ambient | Current ambient pressure. |
| Cell | Current pressure within the reaction cell. |
| Flow Units | Select the units that the sample flow will be displayed in (slpm or L/min). |
| Flow Set Point [Internal Pump Enabled] | User selectable instrument sample flow target. |
| Sample Flow | Indicates the gas flow through the sample port of the instrument. The value should be ~0.73 slpm. If there is an error with the sample flow, it will read 0.00 slpm. |

Note: It is the user's responsibility to select the correct **Flow Units** when calibrating the flow.

3.4.7 Voltage Menu

Main Menu → Analyser State Menu → Voltage Menu

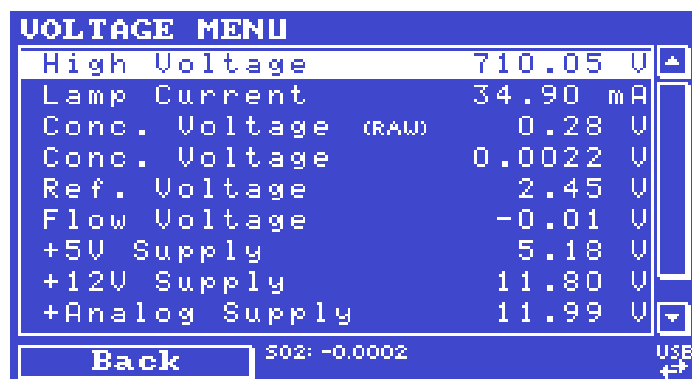


Figure 47 – Voltage Menu Screen

| | |
|---|--|
| High Voltage | The voltage applied to the PMT (normally set to 700 volts \pm 15 V for ambient applications). |
| Lamp Current | Displays the UV lamp current in mA. |
| Conc. Voltage (RAW) | Voltage from the sensor proportional to the detected signal from the reaction cell. This voltage represents the actual measurement of gas. |
| Conc. Voltage | Displays the detector voltage after PGA scaling. |
| Ref. Voltage | Displays the detector voltage after PGA scaling. |
| Flow Voltage [Internal Pump Enabled] | The current voltage measured from the sample flow. |
| +5V Supply | +5 V power supply. |
| +12V Supply | +12 V power supply. |
| + Analog Supply | +12 V (primary) power supply. The value should be within \pm 2 V. |
| - Analog Supply | -12 V (primary) power supply. The value should be within \pm 2 V. |

3.4.8 General Settings Menu

Main Menu → General Settings Menu



Figure 48 – General Settings Menu Screen

| | |
|--|--|
| Decimal Places | Select the number of decimal places (0 - 5) used for the concentration displayed on the home screen. |
| Conc. Units | Sets the concentration units (ppm , ppb , ppt , mg/m3 , µg/m3 or ng/m3). |
| Reference Temperature [Gravimetric Units] | This option only appears if concentration units are set to gravimetric (mg/m3 , µg/m3 or ng/m3). Select either 0 °C, 20 °C or 25 °C as the reference temperature to be used for the conversion of the measured volumetric values to mass values. |
| Temperature Units | Select the units that temperature will be displayed in (Celsius , Fahrenheit or Kelvin). |
| Pressure Units | Select the units that the pressure will be displayed in (torr , PSI , mBar , ATM or kPa). |
| Flow Units | Select the units that the sample flow will be displayed in (slpm or L/min). |

| | |
|-------------------------|--|
| Date | Displays the current date and allows users to edit if required. |
| Time | Displays the current time and allows users to edit if required. |
| Backlight | Select the length of time the screen and keypad backlight remain ON after a button press. The setting Always Off means the backlight never turns ON; the setting Always On means the backlight never turns OFF and the setting Daytime means the backlight will turn ON from 7 am to 7 pm or 30 minutes after any operation. |
| Home Screen | This field allows the user to display concentrations on the home screen in two formats. The first is Inst. only which displays only the instantaneous concentration reading, the second is Inst & Avg which displays both instantaneous and average concentration on the home screen. The average is measured over the time period set in Measurement Settings Menu (refer to Section 3.4.9). |
| Char 0 has Slash | When enabled, the instrument will display the zero character with a slash (0) to differentiate it from a capital 'O'. |

3.4.9 Measurement Settings Menu

Main Menu → Measurement Settings Menu

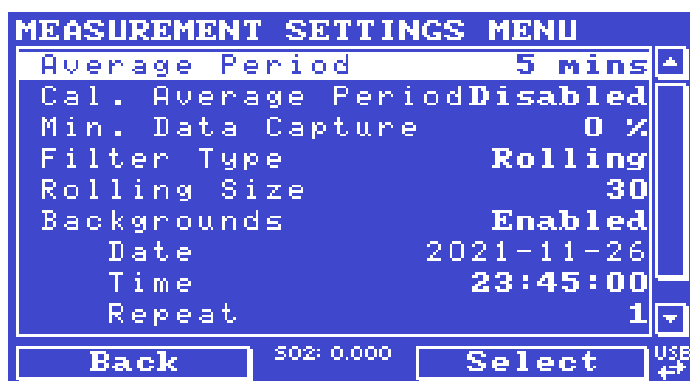


Figure 49 – Measurement Settings Menu Screen

| | |
|----------------------------|--|
| Average Period | Set the time period over which the average will be calculated: Minutes (1, 2, 3, 4, 5, 6, 10, 12, 15, 20 or 30) or hours (1, 2, 4, 6, 8, 12 or 24) or rolling hourly averages over the last (4 or 8) hours |
| Cal. Average Period | When Enabled can set the time period over which the calibration average will be calculated when the system is in Cal. Mode SPAN or ZERO : Minutes (1, 2, 3, 4, 5, 6, 10, 12, 15, 20 or 30) or hours (1, 2, 4, 6, 8, 12 or 24) or rolling hourly averages over the last (4 or 8) hours. Default is Disabled. |
| Min. Data Capture | Controls how much of the previous time period needs to be included before the average yields a number. The default is 0%, which reflects past behaviour of the instrument: turning on a machine with 15 |

| | |
|---|--|
| | <p>minute averaging any time between 1:01 - 1:14 with a setting of 0% would produce ##### until 1:15 (because by 1:15, there was at least 1 valid measurement to construct the average from). However, a setting of 100% would mean the value stayed ##### until 1:30 (because there needs to be a complete 15 minutes worth of measurements to construct the average from).</p> |
| Filter Type | <p>Sets the type of digital filter used (None, Kalman, 10 sec, 30 sec, 60 sec, 90 sec, 300 sec or Rolling).</p> <p>The Kalman filter is the factory default setting and must be used when using the instrument as a U.S. EPA equivalent method or to comply with EN certification. The Kalman filter gives the best overall performance for this instrument.</p> |
| Rolling Size [Rolling Filter] | Sets the number of measurements included in the rolling average. Only available if the Filter Type is set to Rolling . |
| Backgrounds | <p>The default setting is enabled. When enabled it allows the user to edit the background interval via the following fields Time, Repeat and Units.</p> <p>When any of the backgrounds fields are edited the instrument will automatically calculate the date and time the next background is due to run and display under each relevant field.</p> |
| Date [Backgrounds Enabled] | Displays the date that the next background is due to run. |
| Time [Backgrounds Enabled] | Edit and display the time that the next background will run. The time is set using a 24 hour clock. |
| Repeat [Backgrounds Enabled] | Defines an interval value for the repeat of the background based on the Units selected. This field indicates the delay period; once the specified amount of time has lapsed the background will automatically run again. The user can edit this field but some restriction applies depending on the Units selected. Default is "1". |
| Units [Backgrounds Enabled] | This is where the user can define the type of units for the Repeat delay period. For example: A Repeat of "1" and Units of "Days" means that a calibration will automatically run every day at the defined time. Default is "Days". |

3.4.10 Calibration Menu

Main Menu → Calibration Menu

Calibrating the instrument should be done with care (refer to Section 5 before using these menus).



Figure 50 – Calibration Menu Screen

| | |
|---|--|
| Cal. Type | <p>Depending on the selection in this field, a number of extra menu items will be displayed. These are separately documented in Manual Mode (refer to Section 3.4.10.1) and Timed Mode (refer to Section 3.4.10.2).</p> <p>Select the Cal. Type field and select either Timed or Manual.</p> <p>Timed mode is an automatic calibration controlled by the:</p> <ul style="list-style-type: none"> Interval between cycles Length of each calibration cycle Time when the calibration will begin Check only or automatic compensation <p>Timed calibration with span compensation enabled does not fulfil U.S. EPA approval.</p> <p>Manual mode allows the user to choose the type of calibration they wish to perform and will open the appropriate valves in preparation for the user to perform a manual calibration. The setup used will depend on the Cal. Mode selected.</p> <p>Manual mode is set as default.</p> |
| Zero Source | Select whether the instrument will sample from the external calibration port or from the internal zero source when zero gas is requested. |
| Span Source [IZS Internal Span Enabled] | Select whether the instrument will sample from the external calibration port or from the internal IZS source when span gas is requested. |
| Cycle Time | The duration of each Cal. Mode (span and zero) when performing Cycle Mode (refer to 3.4.10.1) or Cal. Type is set to Timed (refer to Section 3.4.10.2). |
| Span Calibrate SO2 | <p>This field is used to perform a span calibration and should be only used when a known concentration of span gas is running through the reaction cell and the reading is stable.</p> <p>Activating the span calibrate field for a named gas will open a dialog box. Enter the concentration of the span gas that the instrument is sampling and press Accept.</p> |

| | |
|---|--|
| Perm Conc [IZS Internal Span Enabled] | This is the calculated concentration of the gas being released from the permeation oven based on the user settings defined in the Hardware Menu . This value should be referred to when selecting internal span mode. |
| Zero Calibrate SO2 | This command is used to correct the zero calibration setting. This option should be used only when zero gas is running through the reaction cell (refer to Section 5 before using this command). |
| Manual Background | Selecting start will immediately perform a background. |
| Pressure Calibration Menu | Refer to Section 3.4.11. |
| Flow Calibration Menu [Internal Pump Enabled] | Refer to Section 3.4.12. |
| Pressure SO2 | This field displays the reaction cell pressure measured during the last calibration. |
| Temperature | Reaction cell temperature when the last span calibration was performed. |

3.4.10.1 Manual Mode

These items appear in the **Calibration Menu** when **Cal. Type** is set to **Manual**.

| | |
|------------------|--|
| Cal. Mode | <p>When calibration type is set to Manual the instruments operational mode can be chosen from the following:</p> <ul style="list-style-type: none"> ▪ Measure (default): Is the normal measurement through the sample port. ▪ Zero: This mode will take air through the calibration port so that a zero calibration can be performed. Data is flagged as zero data. ▪ Span: This mode will take air through the calibration port so that a span calibration can be performed. Data is flagged as span data. ▪ Cycle: Performs a zero and a span Cal. Mode and then returns to measure mode. The length of time spent measuring each calibration mode is set in Cycle Time (refer to Section 3.4.10.1). <p>While the instrument is still in the warm-up period (refer to Section 3.1) the Cal. Mode cannot be changed from Measure mode.</p> |
|------------------|--|

3.4.10.2 Timed Mode

These items appear in the **Calibration Menu** when **Cal. Type** is set to **Timed**.

| | |
|---------------|--|
| Date | Enter the date for the next calibration to start. |
| Time | Enter the time that calibration will be performed. The time is set using a 24 hour clock. |
| Repeat | This field indicates the delay period; once the specified amount of time has lapsed the calibration will automatically run again. The user can edit this field (from 1 - 20,000 units). |
| Units | This is where the user can define the type of units for the Repeat delay period. For example: A repeat of “3” and units of “Days” means that a calibration will automatically be performed every three days. |

| | |
|--------------------------|---|
| Span Compensation | <p>When Enabled the instrument will automatically perform a Span Calibrate SO2 at the end of the Cycle Time and adjust the gain based on the Span Level.</p> <p>When Disabled it will do a precision check only, no adjustment is made.</p> <p>Timed mode with span compensation enabled does not fulfil U.S. EPA approval or EN certification.</p> |
| Span Level | Enter the concentration of span gas expected. Used when the Span Compensation is Enabled . |

3.4.11 Pressure Calibration Menu

Main Menu → Calibration Menu → Pressure Calibration Menu

Entering this menu will set the valves to the pressure calibration configuration; leaving the menu will restore the valves to normal operation (Refer to Section 5.2).

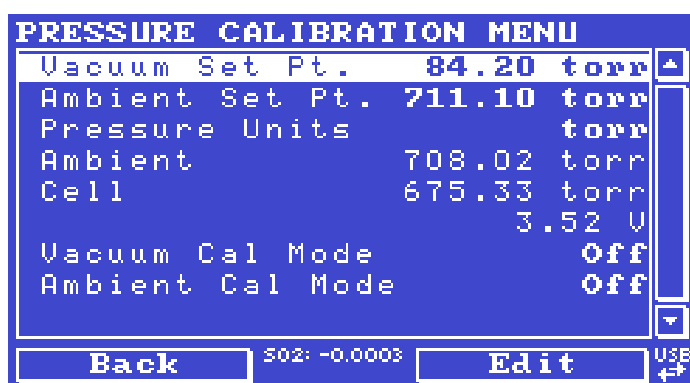


Figure 51 – Pressure Calibration Menu Screen

| | |
|-------------------------|--|
| Vacuum Set Pt. | The zero point for the calibration. Activating this item will open a dialog box of instructions. |
| Ambient Set Pt. | The high point for the calibration. Activating this item will open a dialog box of instructions. |
| Pressure Units | Select the units that the pressure will be displayed in (torr , PSI , mBar , ATM or kPa). |
| Ambient | The current ambient pressure. |
| Cell | The current pressure in the reaction cell. |
| | The current reaction cell pressure displayed as a raw voltage. |
| Vacuum Cal Mode | Defaults to Off. When turned On, the valves will be set to the same state as during a Vacuum Set Pt. adjustment, but there is no adjustment. Used for checking the accuracy of the vacuum pressure calibration. There are no dialog boxes or prompts, so the user needs to follow similar steps and precautions as during Vacuum Set Pt. |
| Ambient Cal Mode | Defaults to OFF. Similar to Vacuum Cal Mode , except the valves are set to check the ambient calibration. |

3.4.12 Flow Calibration Menu (Optional)

Main Menu → Calibration Menu → Flow Calibration Menu

This menu only appears when the internal pump option is installed. Refer to Section 5.8 for the calibration procedure. Setting the **Pump Control** to **Manual** will automatically disable the valve sequencing ready for flow calibration.

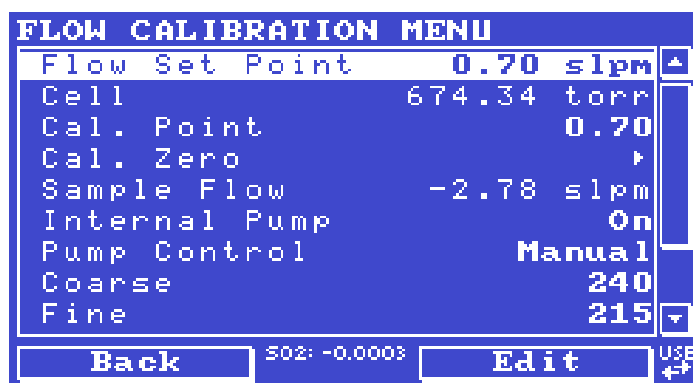


Figure 52 – Flow Calibration Menu Screen

| | |
|-----------------------|---|
| Flow Set Point | The desired sample flow target. |
| Cell | The current pressure in the reaction cell. |
| Cal. Point | The flow at which the last flow calibration was performed. If Pump Control is set to Manual and Internal Pump is ON , this field can be edited to calibrate the current flow against a reference. Calibration must be done at or near the flow set point for best results (refer to Section 5.8). |
| Cal. Zero | If Pump Control is set to Manual and Internal Pump is Off , activating this command will calibrate the flow sensor zero point (refer to Section 5.8). |
| Sample Flow | Current sample flow through the instrument. This is only accurate when reading close to the flow calibration point. |
| Internal Pump | This field allows the internal pump to be turned ON or OFF. This field is only editable when the Pump Control field is set to Manual . |
| Pump Control | Set to Manual to disable the automatic Pump Control . Auto allows the flow PID to modify the pump coarse and fine settings. START will transition to Auto after one second. |
| Coarse | Internal pump speed control (Coarse). This field is only editable when the Pump Control field is set to Manual . |
| Fine | Internal Pump speed control (Fine). This field is only editable when the Pump Control field is set to Manual . |
| Valve Menu | Refer to Section 3.4.17. |

3.4.13 Service Menu

Main Menu → Service Menu



Figure 53 – Service Menu Screen

| | |
|---------------------------------|--|
| Diagnostics Menu | Refer to Section 3.4.14. |
| Calculation Factors Menu | Refer to Section 3.4.21. |
| Load Auto-Backup Config. | Loads the auto-backup configuration file. The configuration is automatically backed up every night at midnight. |
| Load Configuration | Loads a user selectable configuration file from the USB memory stick. |
| Save Configuration | Saves all of the EEPROM-stored user-selectable instrument configurations to the USB memory stick (calibration and communication settings, units, instrument gain, etc.). If there are problems with the instrument use this function to save settings to the removable USB memory stick and send this file (together with the parameter list save) to your supplier with your service enquiry. |
| Save Parameter List | Saves a text file of various parameters and calculation factors. If the user has problems with the instrument use this function to save settings to the removable USB memory stick and send this file (together with the configuration save) to your supplier with your service enquiry. |
| Instrument | This field allows the instrument to be set to either Online (normal instrument operation) or In Maintenance (data is flagged as invalid). |
| Next Service Due | Displays when the next scheduled service is due. |
| Safely Remove USB Stick | This command must be activated to safely remove the USB memory stick. |
| System Restart | Activating this will restart the instrument. |

3.4.14 Diagnostics Menu

Main Menu → Service Menu → Diagnostics Menu



Figure 54 – Diagnostics Menu Screen

| | |
|---|--|
| Digital Pots Menu | Refer to Section 3.4.15. |
| Internal Pump Menu [Internal Pump Enabled] | Refer to Section 3.4.16. |
| Valve Menu | Refer to Section 3.4.17. |
| Tests Menu | Refer to Section 3.4.18. |
| Pres/Temp/Flow Comp. | On (default): Is used to compensate instrument measurements for environmental fluctuations that might affect readings (pressure, temperature and flow). Off : Is used only when running diagnostics. |
| Control Loop | Enabled (default): Allows the instrument to automatically adjust digital pots and other outputs. Disabled : Prevents the instrument from changing most outputs so the service technician can manually control them. |

3.4.15 Digital Pots Menu

Main Menu → Service Menu → Diagnostics Menu → Digital Pots Menu

Digital pots are electronically controlled digital potentiometers used for adjustments to operations of the instrument. Each of the digital pots can go from 0 - 255. This menu should be accessed only during diagnostics.

Unless the **Control Loop** is **Disabled** (refer to Section 3.4.14), changes to the pots may be modified by the instrument. This is intentional; some diagnostics are best done with instrument feedback and some are best done without.

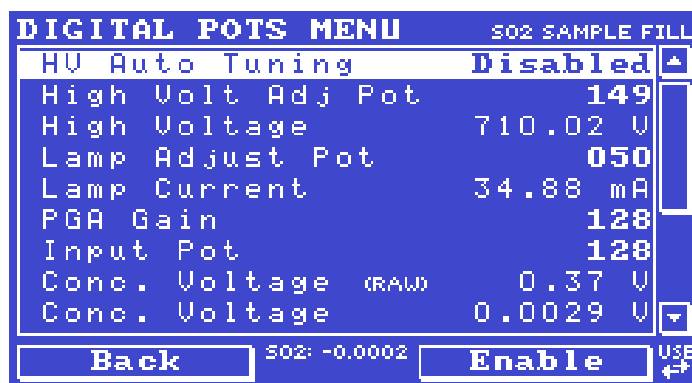


Figure 55 – Digital Pots Menu Screen

| | | |
|---------------------|-----------|--|
| HV Auto Tuning | Disabled | When the instrument first starts it will tune the high voltage supply by automatically setting the High Volt Adj Pot . After a stable value is reached the instrument will Disable the HV Auto Tuning . You can force the instrument to re-tune the high voltage supply by setting this field to Enabled and rebooting the instrument. |
| High Volt Adj Pot | 145 - 165 | Allows manual adjustment of the PMT high voltage supply. |
| High Voltage | 690 - 715 | The voltage applied to the PMT. |
| Lamp Adjust Pot | 20 - 200 | Adjusts the UV lamp current. |
| Lamp Current | 34 - 36 | Displays the UV lamp current in mA. |
| PGA Gain | 1 - 128 | Displays the gain of the PGA. |
| Input Pot | 128 | Reduces the raw signal to measurable level. |
| Conc. Voltage (raw) | 0 - 3.1 | The concentration voltage measured by the analog to digital converter. |
| Conc. Voltage | 0 - 3.1 | The concentration voltage after adjustment for the PGA gain factor. |
| Meas. Zero Pot | 25 - 220 | Maintains the electronic zero adjustment. |
| Ref. Zero Pot | 128 | Offset adjustment for the reference voltage. |

| | | |
|---------------------|-----------|--|
| Ref. Gain Pot | 10 - 100 | Adjusts the reference voltage. Occurs at start up and when the reference voltage is too far from the target voltage (2.5 V). |
| Ref. Voltage | 1.5 - 3.5 | The reference voltage of the detector. |
| Diagnostic Mode | Operate | <p>Operate (default): Puts the instrument in normal operation mode.</p> <p>Preamp: Injects an artificial test signal into the Preamplifier module mounted in the optical bench to verify that the Preamplifier, cabling and electronic circuitry on the main controller PCA is operating correctly. When in this Diagnostic Mode, adjust the Diagnostic Test Pot from 0 - 255. This will produce a change in the concentration voltage as well as the indicated gas concentration.</p> <p>Electrical: Injects an artificial test signal into the electronic processing circuitry on the main controller PCA to verify that the circuitry is operating correctly. When in this Diagnostic Mode, adjust the Diagnostic Test Pot from 0 - 255. This will produce a change in the concentration voltage as well as the indicated gas concentration.</p> <p>Optic [Optional]: Emits artificial light into the Reaction Cell to simulate a real fluorescence emission. This will verify that the PMT, Preamp and electronic circuitry on the main controller PCA is operating correctly. When in this Diagnostic Mode, adjust the Diagnostic Test Pot from 0 - 255. This will produce a change in the concentration voltage as well as the indicated gas concentration. This menu item is only available if you have installed the optical test lamp (refer to Section 3.4.34).</p> |
| Diagnostic Test Pot | 0 | This Digital Pot is used for diagnostics only. When in the Electrical , Preamp or Optic Diagnostic Mode , this Digital Pot should be adjusted from 0 - 255. This will produce a change in the concentration voltage as well as the indicated gas concentration. |

3.4.16 Internal Pump Menu (Optional)

Menu → Service Menu → Diagnostics Menu → Internal Pump Menu

This menu only appears when the internal pump option is installed. Setting the **Pump Control** to Manual will automatically disable the valve sequencing.

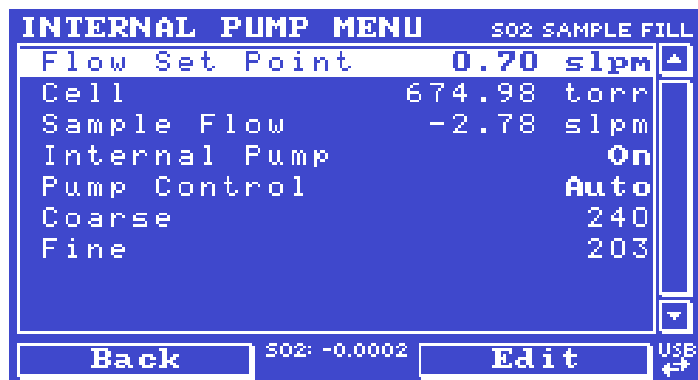


Figure 56 – Internal Pump Menu Screen

| | |
|-----------------------|--|
| Flow Set Point | The desired sample flow target. |
| Cell | The current pressure in the measurement cell. |
| Sample Flow | Current gas flow. This is only accurate when reading close to the flow calibration point. |
| Internal Pump | This field allows the internal pump to be turned ON or OFF. If the user adjusts this field the Pump Control will automatically change to Manual . |
| Pump Control | Set to Manual to disable the automatic flow control. Auto allows the flow PID to modify the pump coarse and fine settings. START will transition to Auto after one second. |
| Coarse | Internal pump speed control (Coarse). This field is only editable when the Pump Control field is set to Manual . |
| Fine | Internal Pump speed control (Fine). This field is only editable when the Pump Control field is set to Manual . |

3.4.17 Valve Menu

Main Menu → Service Menu → Diagnostics Menu → Valve Menu

The **Valve Menu** allows the user to observe the instrument controlled switching of the valves. If the valve is **On** it means the valve is energised. When a three way valve is in the **On** state it will now be in the NC (normally closed) position as shown in the plumbing schematic. When the **Valve Sequencing** is **Disabled** the user has the ability to turn the valve **Off** and **On** manually. It is recommended that the **Valve Menu** be used by a trained technician following the plumbing schematic (refer to Section 9.5).

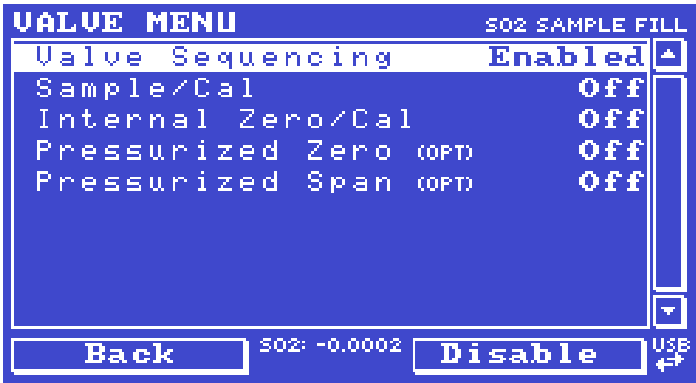


Figure 57 – Valve Menu Screen

Note: When interpreting the information below regarding the flow path through the valve note that (NC = Normally Closed), (NO = Normally Open) and (C = Common).

| | |
|------------------------|--|
| Valve Sequencing | <p>When Enabled the valves will turn ON and OFF under the instruments control (even if the user has manually turned Off or On a valve).</p> <p>When Disabled the valves will change only in response to a user's action.</p> |
| Sample/Cal | <p>Indicates if the Sample/Cal valve on the Calibration Valve Manifold is Off or On. This will determine the port the instrument draws its sample from.</p> <p>Off = Flow from NO to C (drawing sample from the Sample Port).</p> <p>On = Flow from NC to C (drawing sample from the Calibration Port).</p> |
| Internal Zero/Cal | <p>Indicates if the Internal Zero/Cal valve on the Calibration Valve Manifold is Off or On. This will determine the port the instrument draws its sample from, when selecting Cal. Mode → Zero.</p> <p>Off = Flow from NO to C (drawing sample from the BGnd Air Port).</p> <p>On = Flow from NC to C (drawing sample from the Calibration Port).</p> |
| Pressurised Zero (OPT) | <p>Indicates if the optional pressurised zero port valve is Off or On (refer to Section 8.8).</p> |

| | |
|--|--|
| Pressurised Span (OPT) | Indicates if the optional pressurised span port valve is Off or On (refer to Section 8.8). |
| Internal Span A [IZS option] | When Internal Span A and B are On the instrument will sample from the BGnd Air Port drawing internal zero or internal span depending on the Internal Zero/Cal valve (refer to Section 8.7). |
| Internal Span B [IZS option] | Same as Internal Span A above (refer to Section 8.7). |

3.4.18 Tests Menu

Main Menu → Service Menu → Diagnostics Menu → Tests Menu

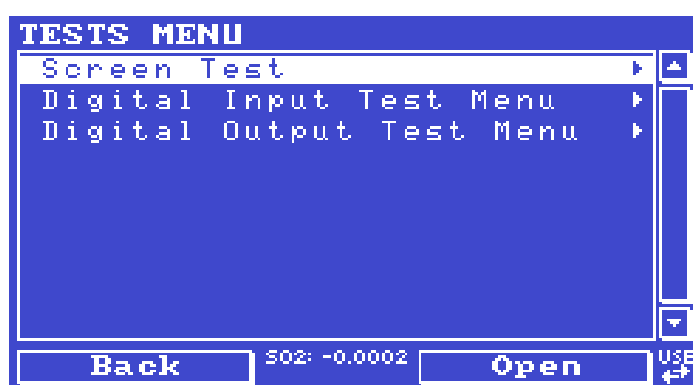


Figure 58 – Tests Menu Screen

| | |
|---------------------------------|---|
| Screen Test | Performs a screen test by drawing lines and images on the screen so that the operator can determine if there are any faults in the screen. Press a keypad key to step through the test. The up and down arrow keys will adjust the contrast. |
| Digital Input Test Menu | Refer to Section 3.4.19. |
| Digital Output Test Menu | Refer to Section 3.4.20. |

3.4.19 Digital Input Test Menu

Main Menu → Service Menu → Diagnostics Menu → Tests Menu → Digital Input Test Menu

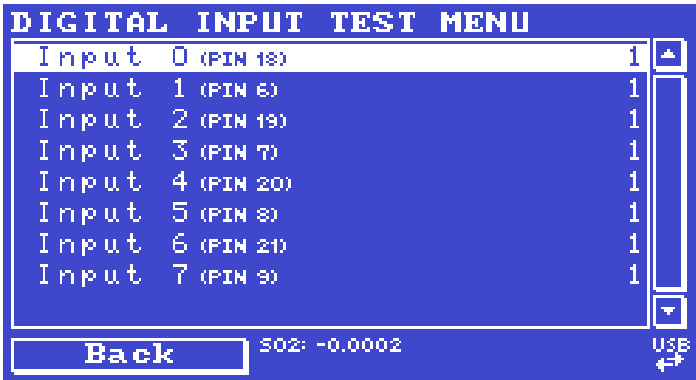


Figure 59 – Digital Input Test Menu Screen

| | |
|------------|--|
| Input 0..7 | Displays the status of the 0 - 7 digital input pins and their corresponding pin out on the analog & digital I/O socket (refer to Figure 84). Value will be 0 or 1. |
|------------|--|

Note: Entering the Digital Inputs Menu will temporarily disable all digital and analog input/outputs. This will affect logging via these outputs. Exiting the menu restores automatic control.

3.4.20 Digital Output Test Menu

Main Menu → Service Menu → Diagnostics Menu → Tests Menu → Digital Output Test Menu

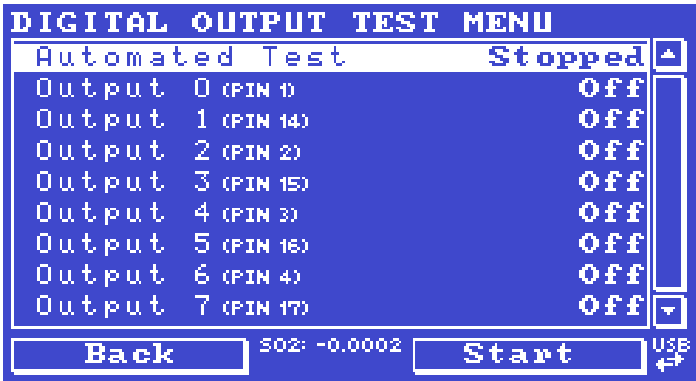


Figure 60 – Digital Output Test Menu Screen

| | |
|----------------|---|
| Automated Test | When started will automatically step through each output, turning it On and Off . |
| Output 0..7 | Displays the state of the output pin (On or Off) and allows the user to manually set the state. |

Note: Entering the **Digital Outputs Menu** will temporarily disable all digital and analog input/outputs. This will affect logging via these outputs. Exiting the menu restores automatic control.

3.4.21 Calculation Factors Menu

Main Menu → Service Menu → Calculation Factors Menu

The **Calculation Factors Menu** provides the user with the values used to calculate different aspects of measurement and calibration.

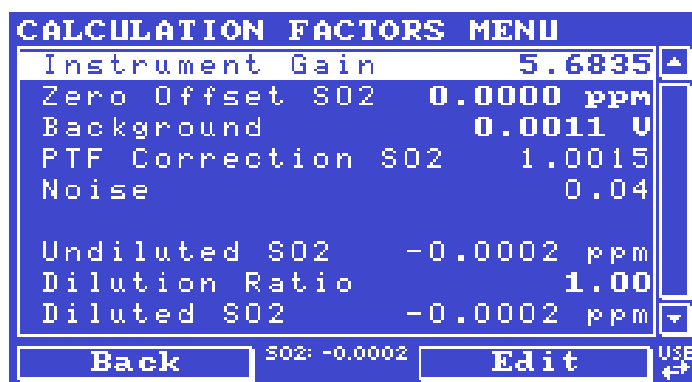


Figure 61 – Calculation Factors Menu Screen

| | |
|---------------------------|--|
| Instrument Gain | A multiplication factor used to adjust the concentration measurement to the appropriate level (set at calibration). |
| Zero Offset SO2 | This field displays the offset created from a zero calibration. This is the concentration measured from zero air and is subtracted from all readings. |
| Background | The correction factor calculated from the background cycle (used to eliminate background interferences). |
| PTF Correction SO2 | Displays the correction factor applied to the concentration measurement. This correction is for changes in pressure, temperature and flow since the last calibration. |
| Noise | <p>The standard deviation of the concentration. The calculation is as follows:</p> <p>Take a concentration value once every two minutes. Store 25 of these samples in a first in, last out buffer. Every two minutes, calculate the standard deviation of the current 25 samples. This is a microprocessor-generated field and cannot be set by the user.</p> <p>This reading is only valid if zero air or a steady concentration of span gas has been supplied to the instrument for at least one hour.</p> |
| Undiluted SO2 | <p>Displays the actual reading on the analyser before the dilution ratio is applied. If the Dilution ratio is 1 both Undiluted SO2 and Diluted SO2 field will be the same value.</p> |

| | |
|----------------|--|
| Dilution Ratio | Entering a value here will multiply the displayed and recorded measurements by the dilution amount. For example, if the instrument is measuring a source where the average concentration is above the upper limit of the measurement range, a dilution probe with a fixed dilution ratio can be used to reduce the level measured by the instrument, so for a 4:1 dilution ratio, enter a value of 4. Enter the ratio here so the analyser can display the correct value on the instrument. The default value is 1.00 (this indicates no dilution is applied). |
| Diluted SO2 | Displays the current reading on the analyser after the dilution ratio is applied. If the Dilution ratio is 1 both Undiluted SO2 and Diluted SO2 field will be the same value. |

3.4.22 Communications Menu

Main Menu → Communications Menu

Configures how the instrument communicates with external instrumentation and data loggers.



Figure 62 – Communications Menu Screen

| | |
|---------------------------|--------------------------|
| Data Logging Menu | Refer to Section 3.4.23. |
| Serial Communication Menu | Refer to Section 3.4.24. |
| Analog Input Menu | Refer to Section 3.4.25. |
| Analog Output Menu | Refer to Section 3.4.26. |
| Digital Input Menu | Refer to Section 3.4.27. |
| Digital Output Menu | Refer to Section 3.4.28. |
| Network Menu (Optional) | Refer to Section 3.4.29. |
| Bluetooth Menu | Refer to Section 3.4.30. |

3.4.23 Data Logging Menu

Main Menu → Communications Menu → Data Logging Menu

When editing the numeric or text menus, the “-” key will delete the current parameter and move the others up to take its place; the “+” key will insert a parameter at the current location and move the ones below it down. The internal logger can log a maximum of 12 parameters.



Figure 63 – Data Logging Menu Screen

| | |
|--------------------------------|---|
| Data Log Interval | Displays the interval at which the data is saved to the USB memory stick. Selecting a 1 sec interval may result in occasional measurements not being logged or slow response to serial commands. |
| Cal. Log Interval | When enabled displays the interval at which the data is saved to the USB memory stick for the calibration time period. This occurs when the system is in Cal. Mode SPAN or ZERO . Selecting a 1 sec interval may result in occasional measurements not being logged or slow response to serial commands. Seconds (1, 2, 5, 10, 15, 30) or Minutes (1, 2, 3, 5, 10, 15, 20 or 30) or hours (1, 2, 4, 6, 8, 12 or 24). Default is Disabled . |
| Data Log Setup –Numeric | Numeric list of the parameters logged. This is a quicker way to enter parameters (for lists of parameters refer to Table 47). |
| Data Log Setup –Text | Select from a list of loggable parameters by name. |

3.4.24 Serial Communication Menu

Main Menu → Communications Menu → Serial Communication Menu



Figure 64 – Serial Communication Menu Screen

| | |
|--|---|
| Serial ID | This is the ID of the instrument when using multidrop RS232 communications. This ID can be changed to support multiple instruments on the same RS232 cable. |
| Bayern-Hessen ID [Bayern-Hessen Protocol] | This is the Bayern-Hessen ID used by the Bayern-Hessen Protocol. |
| SO2 ID [Bayern-Hessen Protocol] | This is the ID of the SO ₂ gas used by the Bayern-Hessen Protocol. |
| Service port (RS232 #1) Multidrop port (RS232 #2) | The port parameters below are repeated for each serial port. |
| Serial Delay | Some older communication systems require a delay before the instrument responds to a serial command. The number of milliseconds of delay required (0 - 1000). The default is 0, meaning the instrument responds as quickly as possible to any serial request. |
| Baudrate | Sets the baud rate for this serial port (1200, 2400, 4800, 9600, 14400, 19200, 38400 or 115200). |
| Parity | This controls the Parity of RS232 communication. This should be left at the default None , unless your system requires otherwise. |
| Protocol | Sets the protocol used for this serial port (Advanced, ModBus, EC9800 or Bayern-Hessen). The protocol must be set to Advanced for Acoem Australasia supplied software. |
| Endian [Modbus Protocol] | Select Little or Big endian mode for ModBus protocol. |

3.4.25 Analog Input Menu

Main Menu → Communications Menu → Analog Input Menu

The Serinus supports three analog inputs from the analog & digital I/O port. Each input is a 0 - 5 volt CAT 1 input that can be scaled and logged to the USB memory stick or accessed remotely as parameters 199 - 201.



CAUTION

Exceeding these voltages can permanently damage the instrument and void the warranty.

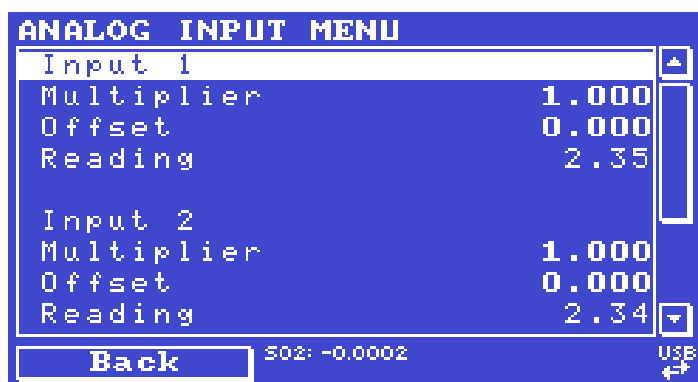


Figure 65 – Analog Input Menu Screen

| Input 1/2/3 | The sections below are repeated for each analog input. |
|-------------------|--|
| Multiplier | The input voltage will be multiplied by this number. For example, if a sensor has a 0 - 5 V output for a temperature of -40 °C to 60 °C, the multiplier would be $(60 - (-40))/5 = 20$. |
| Offset | This value will be added to the above calculation. Continuing the example in the multiplier description, the offset should be set to -40, so that a voltage of 0 V will be recorded as -40 °C. |
| Reading | The current reading from the analog input, after the multiplier and offset are applied. This is the value that is logged or reported as parameter 199 - 201. |

3.4.26 Analog Output Menu

Main Menu → Communications Menu → Analog Output Menu

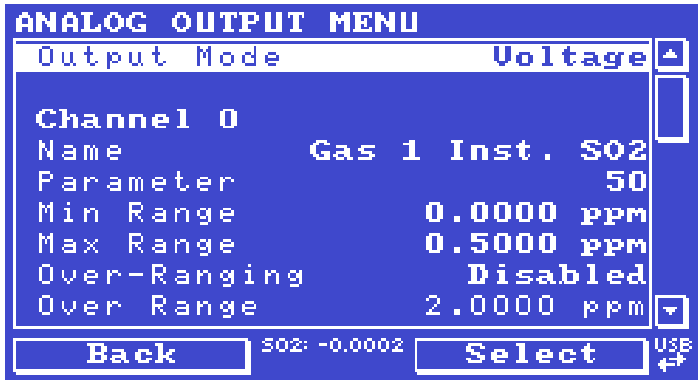


Figure 66 – Analog Output Menu Screen

| | |
|---------------|---|
| Output Mode | The analog output can be set to be either Current or Voltage . Different fields will be displayed depending on which analog output type is selected. |
| Channel 0/1/2 | Channel 0 as default will be setup to be Parameter 50, which is primary gas instantaneous reading. All three channels can be user defined to any of the available parameters (for a list of parameters refer to Table 47). All the labels below are repeated for each Channel. |
| Name | Text list of the parameter defined to output through the analog output (for a list of parameters refer to Table 47). |
| Parameter | Numeric list of the parameter defined to output through the analog output. This is a quicker way to enter parameters (for a list of parameters refer to Table 47). |
| Min Range | Set the lower range limit (in concentration units). This is the value at which the analog output should be at its minimum. For example, 4 mA for a 4 - 20 mA current output. |
| Max Range | Set the upper range limit (in concentration units). This value can be edited but cannot exceed the Over-Range value. This is the value at which the analog output should be at its maximum. For example, 20 mA for a current output. |
| Over-Ranging | Set to Enabled or Disabled to turn the over-ranging feature ON or OFF. |
| Over-Range | This field is only editable when Over-Ranging is set to Enabled . Set to the desired over range value. This value cannot be set below the Max Range value. This is the alternate scale the used for the analog output when over-ranging is active and enabled. When 90% of the standard range is reached, this over range is automatically entered. When 80% of the original range is reached, it returns to the original range. |
| Hold for Cal. | When Enabled , putting the instrument into any calibration state other than MEASURE will cause it to continue reporting the last reported value. |

3.4.26.1 Analog Output Menu - Voltage

Main Menu → Communications Menu → Analog Output Menu

These items appear when **Output Mode** is set to **Voltage**.

| | |
|-------------------------|---|
| Voltage Offset | Choices are 0 V , 0.25 V or 0.5 V . This offsets the voltage for a concentration reading of 0. Since the output cannot go negative, this offset can be used to record negative readings. |
| 0.5V Calibration | Enables the user to calibrate the analog voltage output at a low point. Edit the value against a reference volt meter until the connected equipment reads 0.5 V (refer to Section 4.4.1.1). |
| 5.0V Calibration | Enables the user to calibrate the voltage output at a full scale point (5 V). Edit the value against a reference volt meter until the connected equipment reads 5 V (refer to Section 4.4.1.1). |

3.4.26.2 Analog Output Menu - Current

Main Menu → Communications Menu → Analog Output Menu

These items appear when **Output Mode** is set to **Current**.

| | |
|-------------------------|---|
| Current Range | Enables the user to set their desired current range. The user's choices are 0 - 20 mA , 2 - 20 mA or 4 - 20 mA . |
| 4mA Calibration | Enables the user to calibrate the current output at a low point. Edit the value against a reference amp meter until the connected equipment reads 4 mA (refer to Section 4.4.1.2). |
| 20mA Calibration | Enables the user to calibrate the current output at a full scale point (20 mA). Edit the value against a reference volt meter until the connected equipment reads 20 mA (refer to Section 4.4.1.2). |

3.4.27 Digital Input Menu

Main Menu → Communications Menu → Digital Input Menu

This menu is used to remotely trigger zero and span calibrations. This is done by assigning the eight digital inputs with one of the following commands.

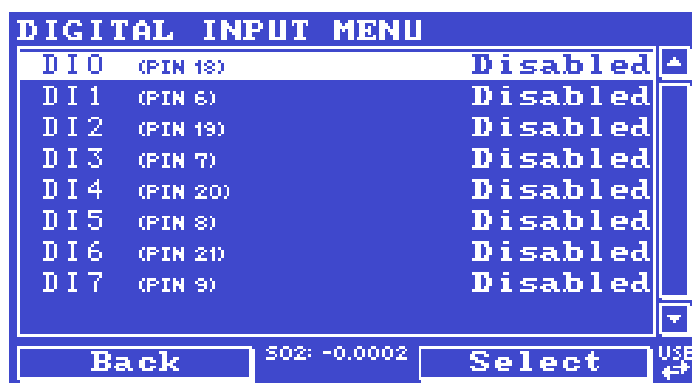


Figure 67 – Digital Input Menu Screen

| | |
|---------------------|---|
| DI N (Pin X) | <p>Associates an action with a digital input. There are eight digital inputs (the pin numbers are for the 25 pin connector). Each one can have one of the following associated actions, triggered when the corresponding digital input goes to the Active state:</p> <ul style="list-style-type: none"> ▪ Disabled: No action (this digital input does nothing). ▪ Do Span: Used to perform a span precision check. When activated the instrument sets the Cal. Mode to Span (refer to Section 3.4.10.1). ▪ Do Zero: Used to perform a zero precision check. When activated the instrument sets the Cal. Mode to Zero (refer to Section 3.4.10.1). |
| Active | <p>Each pin can be set to be active High or Low. Active High means that the event will be triggered when the line is pulled to 5 V. Active Low means that the event will be triggered when the line is pulled to 0 V.</p> |

Example

Here is a typical configuration between an instrument and either a data logger or calibrator (master device):

1. Set the jumper JP1 to 5 V position (refer to Section 4.4.3).
2. Connect one of the master devices digital output signals to pin 18 and the ground signal to pin 5 of the instrument's analog/digital 25 pin female connector (refer to Figure 84).
3. Program master device to output 0 volts to pin 18 when a span is desired.
4. In the instrument's **Digital Input Menu** assign **DI 0 → Do Span** - Accept.
5. The same procedure can be followed to also activate zero calibrations. Pin 6 of the instrument's analog/digital 25 pin female connector can be connected to one of the other master devices digital outputs and the instrument can be set so **DI 1** is assigned to **Do Zero**.

3.4.28 Digital Output Menu

Main Menu → Communications Menu → Digital Output Menu

This allows the instrument to trigger external alarms in response to certain events. There are eight different pins available, which will be set high during an associated event:

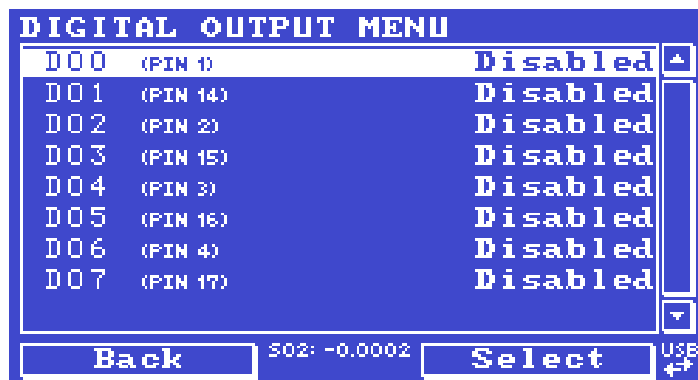


Figure 68 – Digital Output Menu Screen

| | |
|---------------------|--|
| DO N (Pin X) | Associates a state with a digital output. There are eight digital outputs (the pin numbers are for the 25 pin connector). Each one can have one of the associated states listed in Table 5. The pin will be driven to the active state while the instrument state is true. |
| Active | Each pin can be set to be active High or Low . Active High means that the pin will be pulled to 5 V when the associated event occurs. Active Low means the pin will be pulled to 0 V when the associated event occurs. |

Table 5 – Digital Output States

| Digital Output State | Description |
|----------------------|--|
| Disabled | No state (this state is never Active). |
| High Volt. Fail | High voltage fault. |
| Pwr Supply Fail | Power supply fault. |
| Ref Volt. Fail | Reference voltage fault. |
| A2D Fail | Analog to digital fault. |
| Lamp Fail | Lamp fault |
| Flow Fail | Sample flow fault. |
| Cell Heat Fail | Cell heater fault. |
| Flow Heat Fail | Flow block heater fault. |
| Lamp Heat Fail | Lamp heater fault. |
| Chassis Tmp Fail | Chassis temperature fault. |
| Cooler Fail | Cooler temperature fault. |

| Digital Output State | Description |
|----------------------|--|
| USB Disconnected | The USB memory stick is disconnected. |
| Background | Performing a background. |
| Span | Performing a span check. |
| Zero | Performing a zero check. |
| System Fault | Any system fault (the red light is ON). |
| Maintenance Mode | User has activated maintenance mode. |
| Over Range AO 0 | Over range for the analog output when channel 0 is active. |
| Over Range AO 1 | Over range for the analog output when channel 1 is active. |
| Over Range AO 2 | Over range for the analog output when channel 2 is active. |

3.4.29 Network Menu (Optional)

Main Menu → Communications Menu → Network Menu

The **Network Menu** only appears when the **Network Port** is enabled in the **Hardware Menu** (refer to Section 3.4.34). The **Network Menu** allows the user to view or set the IP Address, Netmask and Gateway if the optional network port is installed.



Figure 69 – Network Menu Screen

| | |
|---------------|---|
| Start-up Mode | <p>The following modes are available:</p> <p>Normal: In this mode nothing is done with the network port during boot-up. It is assumed to be configured correctly or unused.</p> <p>Read IP: This mode interrogates the network port for its IP address. The menu will display the network address after boot-up.</p> <p>Set IP: The user may enter an IP address, Netmask and Gateway address (following the usual rules for formatting these addresses). At this time the instrument does not validate the correctness of these entries. When you cycle power, the instrument will first instruct the network port on its new address. It will switch to Read IP mode and read back the address it just set so the user may verify it in the menu.</p> |
|---------------|---|

| | |
|--|---|
| | Set DHCP: This sets the network port into DHCP mode, allowing the network to assign the instrument an IP address. |
| IP Address [Read IP or Set IP Start-up Mode] | This is the current IP address of the instrument. |
| Netmask [Read IP or Set IP Start-up Mode] | This is the subnet mask of the network the instrument is connected to. |
| Gateway [Read IP or Set IP Start-up Mode] | This is the IP address of the router to access addresses not on the same subnet. |
| ID [Set DHCP Start-up Mode] | This is the ID of the instrument. Use the keypad to edit this field. The default ID setting is Serinus(Ecotech ID) . The word Serinus is always the first part of the name and cannot be edited. The second part is the Ecotech ID . |
| Adaptor is in DHCP mode [Set DHCP Start-up Mode] | In this mode the instrument will ask for its network parameters from a DHCP server on your network. |
| Protocol | Sets the protocol used for the network port (Advanced, ModBus, EC9800 or Bayern-Hessen). This must be set to Advanced for Acoem Australasia supplied software. |
| Endian [Modbus Protocol] | Select Little or Big endian mode for ModBus protocol. |
| Bayern-Hessen ID [Bayern-Hessen Protocol] | This is the Bayern-Hessen ID used by the Bayern-Hessen Protocol. |
| SO2 ID [Bayern-Hessen Protocol] | This is the ID of the SO ₂ gas used by the Bayern-Hessen Protocol. |

To read the IP address, refer to Section 4.3.1.

To set the IP address, refer to Section 4.3.2.

3.4.30 Bluetooth Menu

Main Menu → Communications Menu → Bluetooth Menu

This instrument supports Bluetooth communication through the Serinus Remote Android Application (refer to Section 4.7).



Figure 70 – Bluetooth Menu Screen

| | |
|-----------|--|
| Bluetooth | This field indicates whether the instrument is remotely connected to an Android device. |
| Reset | After changing the ID or PIN, it is necessary to reboot the Bluetooth module. This is done by resetting the instrument or by using this menu item to reboot only the Bluetooth. |
| ID | <p>This is the Bluetooth ID of the instrument. Use the keypad to edit this field.</p> <p>The default ID setting is Serinus(Ecotech ID).</p> <p>The word Serinus is always the first part of the name and cannot be edited. The second part is the Ecotech ID.</p> |

3.4.31 Trend Display Menu

Main Menu → Trend Display Menu



Figure 71 – Trend Display Menu Screen

| | |
|------|--|
| Name | Displays the name of the Parameter the user has selected. |
|------|--|

| | |
|--------------------------|--|
| Parameter | Allows the user to select any loggable (refer to Table 47) parameter to graph on the trend display. |
| Autoscale | Autoscale can be ON or OFF . When it is “ ON ” the parameter will be scaled automatically for user convenience based on the current values logged. |
| Min | This is the minimum scale of the chart as defined by the Autoscale or the user. |
| Max | This is the maximum scale of the chart as defined by the Autoscale or the user. |
| Clear | Clears the current data points in the Chart. |
| Data Log Interval | The data log interval can be user set from 1 sec interval up to 24 hours . |
| Chart | This field enters a screen with a graph of the user selected Parameter (refer to Section 3.4.32). |

3.4.32 Chart

Main Menu → Trend Display Menu → Chart

The chart allows the user to select a parameter and view it in a real time chart. The user can select from any loggable parameter (refer to Table 47). Changing the logged parameter will reset the chart. Pressing the Up or Down buttons will change between the selected parameter and the instantaneous SO₂ gas value. Changing the Data Log Interval resets all charts.

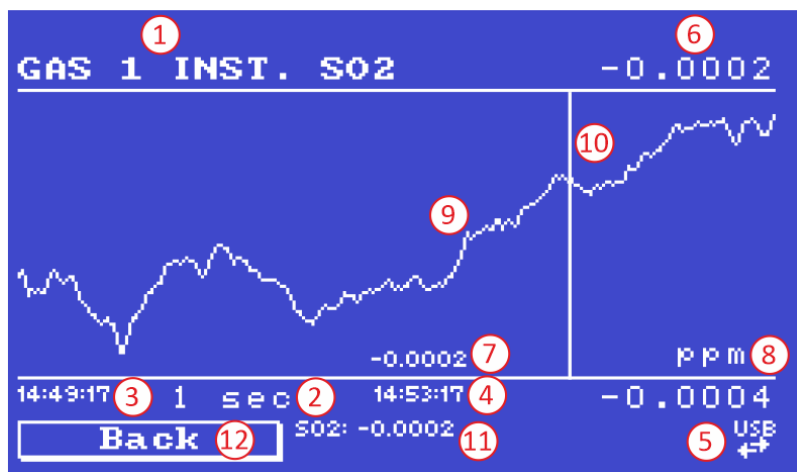


Figure 72 – Chart Screen

Chart Title (1)

Displays the name of the parameter as it would be displayed on the advanced protocol parameter list.

Data Log Interval (2)

Displays the value of the data logging interval as determined by the user in the Trend Display Menu (refer to Section 3.4.31).

Chart X-Axis (3 & 4)

(3) Displays the time stamp for the oldest data point (left hand side).

(4) Displays the time stamp for the newest data point (right hand side) or if the cursor is active it displays the current cursor data point time stamp.

Chart Y-Axis (5 & 6)

(5) This is the minimum scale as defined by the autoscale or the user (refer to Section 3.4.31).

(6) This is the maximum scale as defined by the autoscale or the user (refer to Section 3.4.31).

Current Data Point Value (7)

Displays the current value of the newest data point unless the **cursor** is active then it displays the current cursor data point value.

Units (8)

Displays the units of measure for the parameter that the user has selected.

Data Points (9)

Displays the last 240 data points recorded for the selected parameter.

Chart Cursor (10)

If the user wishes to know the value at any at a particular data point on the chart, the cursor can be used. The cursor is activated by pressing the (-) key on the keypad and is represented by a vertical line on the chart. The cursor can be moved left or right by the (-) or (+) key respectively. This cursor location now represents the current data point value of interest. The cursor will stay with the chosen data point and move with the updating chart. When the cursor finally hits the end of the chart it deactivates and the current data point value will now be the latest data point entering the chart.

Mode (11)

This field indicates the SO₂ concentration being measured in real-time.


Back (12)

Pressing back allows the user to access other menu items while the chart is still logging in the background.

| Digital Output State | Description |
|-----------------------|--|
| Left Selection Button | Returns the user back to the trend display menu. |
| Scrolling Buttons | Using the scrolling buttons will cycle through the user selected parameter as well as any default gas(es) currently logging. |
| - Button | Pressing the (-) button will bring up the cursor and move it to the left. |

| Digital Output State | Description |
|----------------------|---|
| + Button | Pressing the (+) button will move the cursor to the right. When the cursor moves all the way to the right due to the chart moving it will deactivate. |

3.4.33 Advanced Menu

This menu is accessed via a different method than the other menus. From the **Home Screen** press the following keys: 

This menu contains technical settings, diagnostics and factory hardware installations. No items in this menu should be accessed without authorisation and supervision of qualified service personnel.



Figure 73 – Advanced Menu Screen

| | |
|---------------------------|---|
| Language | Select a language. |
| Hardware Menu | Refer to Section 3.4.34. |
| Service Displays | When set to On , new items appear on many different menus. These fields are for diagnostic and service personnel only. Default is Off . |
| Next Service Due | Enables the user to edit the next service due date. |
| Jump to Next State | Moves the sequence to the next state (e.g. from Fill to Measure). This command is most commonly used to force an instrument out of the warm-up sequence early. |
| Parameter Display Menu | Refer to Section 3.4.35. |
| Reset to Factory Defaults | Reset the configuration to factory defaults. This will erase all calibrations and user configuration information. |
| Rebuild Index | If a data log becomes corrupted it may be possible to restore it by rebuilding its index file. This command will ask the user to specify a month and will rebuild the index for that month. This operation can take many minutes and it should not be interrupted. While the file is rebuilding any data logging will be suspended. |



CAUTION

No items in this menu should be accessed without authorization and supervision of qualified service personnel.

3.4.34 Hardware Menu

Advanced Menu → Hardware Menu

This menu contains factory hardware installations. If the user reset to factory defaults, then they may need to revisit this menu to enable their installed optional features.

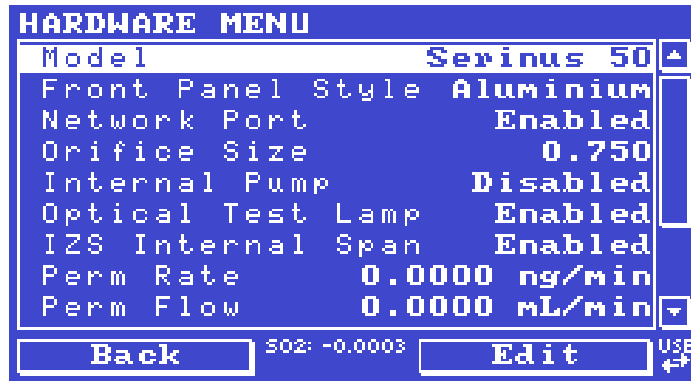


Figure 74 – Hardware Menu Screen

| | |
|--|---|
| Model | Select the instrument model. Normally this only needs to be reset when the configuration is corrupted. The selections available will depend on licensing. It is not recommended to run an instrument with firmware set to an incorrect model. |
| Front Panel Style | Choosing the incorrect front panel will result in the traffic lights behaving inconsistently. Default is Aluminium . |
| Network Port | When Enabled indicates the instrument has a network port installed. Default is Disabled . |
| Orifice Size [Internal Pump Disabled] | Specify the input orifice for instruments without an internal pump. Default is 0.75 . |
| Internal Pump | When Enabled indicates the instrument has an Internal pump installed. Default is Disabled . |
| Optical Test Lamp | Allows optical diagnostic tests. Default is Disabled . |
| IZS Internal Span | When Enabled indicates the IZS option is installed. |
| Perm Rate [IZS Internal Span Enabled] | User should enter the value as found on the permeation tube specification sheet. |
| Perm Flow [IZS Internal Span Enabled] | Total flow past the permeation chamber during an activated internal span mode. |
| Perm Tube Oven [IZS Internal Span Enabled] | Set target temperature for the permeation oven. User definable range from 47 - 53 °C. Default is 50 °C. |
| SO2 Lamp Target | Allows the user to adjust the lamp current target. The default is 35 mA. |
| HV Target | Set target voltage for the high voltage power supply. User definable range from 400 - 800 V. Default is 700 V. |

External Bkgnds

When **Enabled** the system will not perform automatic backgrounds and it will not warn the user that it is not doing backgrounds. Rather it is the responsibility of the operator to remotely trigger the backgrounds. Default is **Disabled**.



CAUTION

No items in this menu should be accessed without authorization and supervision of qualified service personnel.

3.4.35 Parameter Display Menu

Advanced Menu → Parameter Display Menu

Used to display a logged parameter on the screen (refer to Table 47 for a list of parameters).

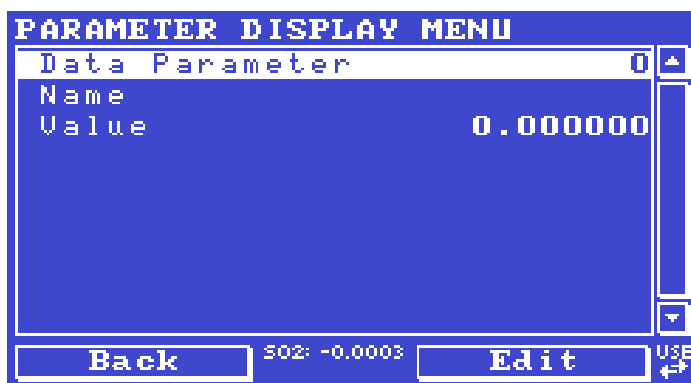


Figure 75 – Parameter Display Menu Screen

| | |
|-----------------------|--|
| Data Parameter | This is an editable field. Enter the parameter number the user wishes to view (refer to Table 47). |
| Name | Displays the name of the selected parameter. |
| Value | Displays the current value of the selected parameter. |

This page is intentionally blank.

4. Communications

The Serinus has a number of different interfaces for communication with other equipment (RS232, USB, 25 pin digital/analog input/output, TCP/IP network (optional) and Bluetooth). A demonstration version of Acoem Australasia's **Airodis** software is included with the instrument, enabling basic data downloads and remote operation from a PC running a supported MS Windows operating system. The full version of Airodis is available separately and includes automated data collection, data validation and complex reporting by multiple users. Refer to the Airodis Manual and Section 4.6 of this manual for details on setting up and communicating with the instrument.

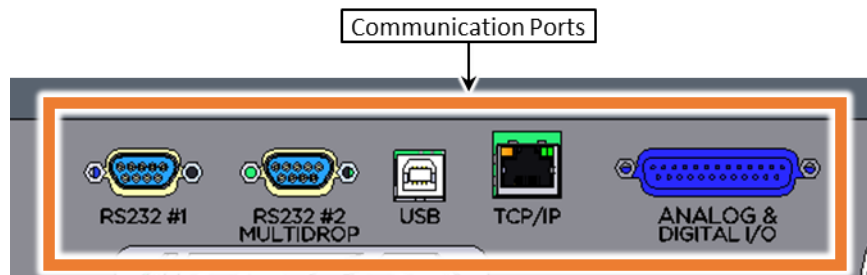


Figure 76 – Communication Ports

4.1 RS232 Communication

RS232 communication is a very reliable way to access data from the instrument and is recommended for use in connection to a data logger for 24/7 communication. Both RS232 ports are configured as DCE and can be connected to DTE (Data Terminal Equipment such as a data logger or computer).

Port #2 also supports a multidrop arrangement (a configuration of multiple instruments connected via the same RS232 cable where the transmit signal is only asserted by the instrument that is spoken to).

For reliable multidrop RS232 communications follow these guidelines:

- Verify that the Serial ID is set to a unique value which is different to the other instruments in the chain (refer to Section 3.4.24).
- All of the instruments in the multidrop chain must have the same baud rate and communication protocol settings. A maximum of 9600 baud rate is recommended.
- The multidrop RS232 cable should be kept to less than three meters in length.
- A 12K ohm terminating resistor should be placed on the last connector of the cable (connect from pin 2 to pin 5 and from pin 3 to pin 5 - refer to Figure 77).
- The shielding of the multidrop cable must be continuous throughout the cable.
- The shielding of the multidrop cable must only be terminated at one end. It should be connected to the metal shell of the DB 9 way connector.

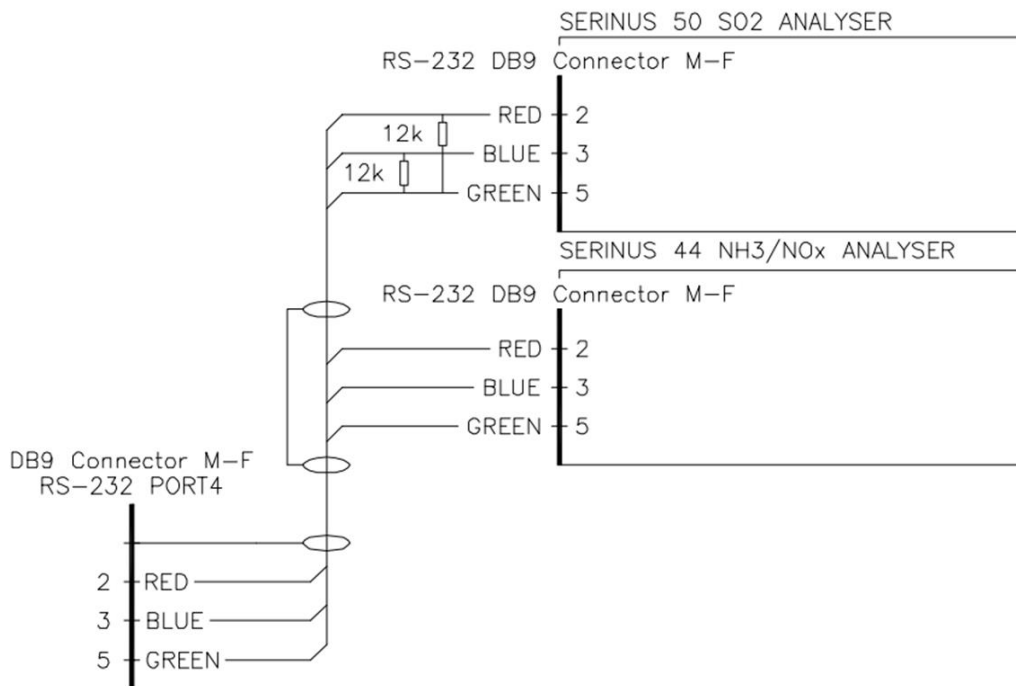


Figure 77 – Multidrop RS232 Cable Example

4.2 USB Communication

This is ideal for irregular connection to a laptop running Acoem Australasia's Airodis software to download logged data and remotely control the instrument. Due to the nature of USB, this is a less reliable permanent connection as external electrical noise can cause USB disconnection errors on a data logger.


For more information on regarding connecting over USB, making connections refer to Section 4.6.1.1.

Note: Only the Advanced protocol is supported for USB communication.


4.3 TCP/IP Network Communication (Optional)

Instruments with the optional network port installed can be accessed using a TCP/IP connection. Figure 78 shows examples of some possible configurations for remote access.


Direct Connection

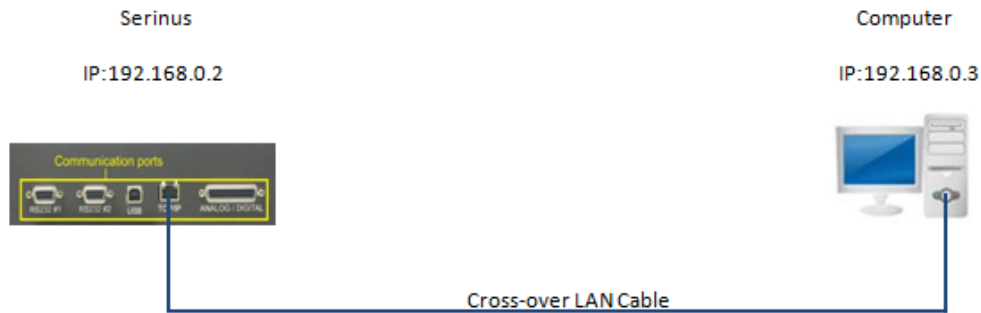

LAN

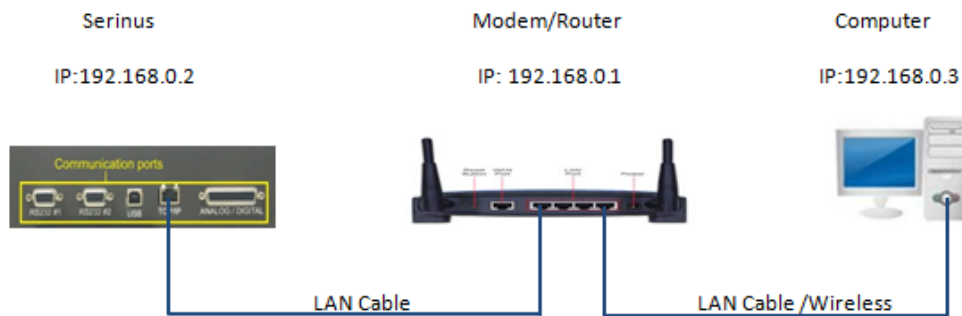

WAN

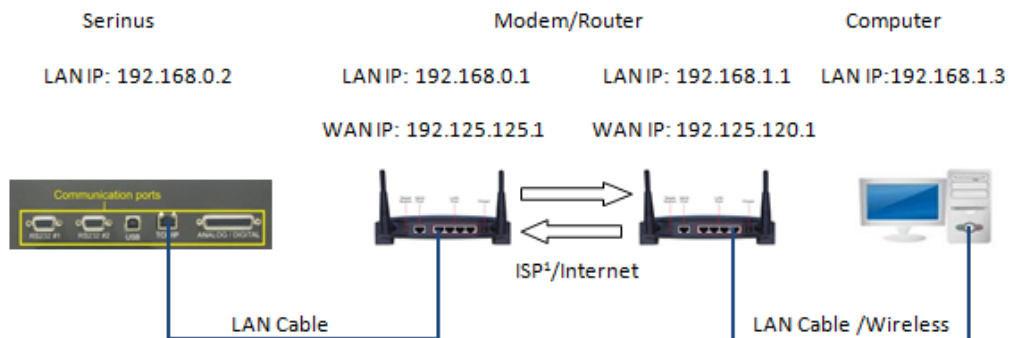

¹ ISP: Internet Service Provider

Figure 78 – Example of Typical Network Setups

Note: In Figure 78 all the IP addresses are taken as an example. The WAN IP addresses are normally provided by your ISP. Whereas, the LAN IP addresses can be set manually to any range which is within the subnet of the Modem/Router/switch.

Use a cross-over LAN cable to connect the instrument directly to a computer, or a standard LAN cable for connection to a Modem/Router/Switch as shown in Figure 78. The computer could be connected to the Modem/Router using either CAT5 cable or a wireless connection, but the instrument must be connected using CAT5/6 cable.

4.3.1 Reading Network Port Setup

To read the current network port settings perform the following steps:

Procedure

1. Open - **Main Menu** → **Communications Menu** → **Network Menu**.
2. Select - **Start-up Mode** → **Read IP** - Accept.
3. Manually use the power switch on the rear of the instrument to turn the power OFF. Leave the instrument OFF for 10 seconds before turning the power back ON.
4. Open - **Main Menu** → **Communications Menu** → **Network Menu**.
5. The current network port settings will now be displayed on the screen.
6. When viewing is complete select - **Start-up Mode** → **Normal** - Accept.

4.3.2 Setting Network Port Setup

Below is an example of how to setup the network port:

Procedure

1. Open - **Main Menu** → **Communications Menu** → **Network Menu**.
2. Select - **Start-up Mode** → **Set IP** - Accept.
3. Edit - **IP Address** - (Change the IP address to the address you wish to use within the Modem/Router/Switch Subnet).
4. Edit - **Netmask** - (Change the Netmask to the setup specified by the Modem/Router).
5. Edit - **Gateway** - (Change the Gateway to the setup specified by the Modem/Router).
6. Select - **Protocol** → **Advanced** - Accept.



Figure 79 – Example of Network Menu Setup

7. Once completed, use the power switch on the rear of the instrument to turn the power OFF. Leave the instrument OFF for 10 seconds before turning the power back ON.

Note: Manually perform a hardware power cycle every time the IP address is changed for it to take effect.

8. Open - **Main Menu** → **Communications Menu** → **Network Menu**.
9. The **Start-up Mode** automatically changes to **Read IP** and the current network port settings will be displayed on the screen.
10. When viewing is complete select - **Start-up Mode** → **Normal** - Accept.

4.3.3 Port Forwarding on Remote Modem/Router Setup

When using the network port to connect to the router / modem with NAT enabled, the user will need to add IP mapping to ensure that data is forwarded through to the desired port. This is known as port forwarding. To set-up the port for the instrument, the user needs to go into the modem/router configuration. Normally, the user will see the port forwarding setup under Port Forwarding, NAT or Port Mapping menu. Below is an example port forwarding setup.

The default port for the Serinus range of instruments is **32783**. The destination address is the instrument IP address setup in the **Network Menu**.

| Item | Protocol | Incoming Address | Incoming Port | Destination Address | Destination Port |
|------|----------|------------------|---------------|---------------------|------------------|
| 1 | tcp | 0.0.0.0 | 32783 - 32783 | 192.168.0.2 | 32783 - 32783 |

Figure 80 – Port Forwarding Example

4.3.4 Setup Airodis to Communicate with Serinus

LAN

Below is an example of Airodis setup for a LAN network. Ensure the IP address is set to the same as on the instrument **Network Menu**.

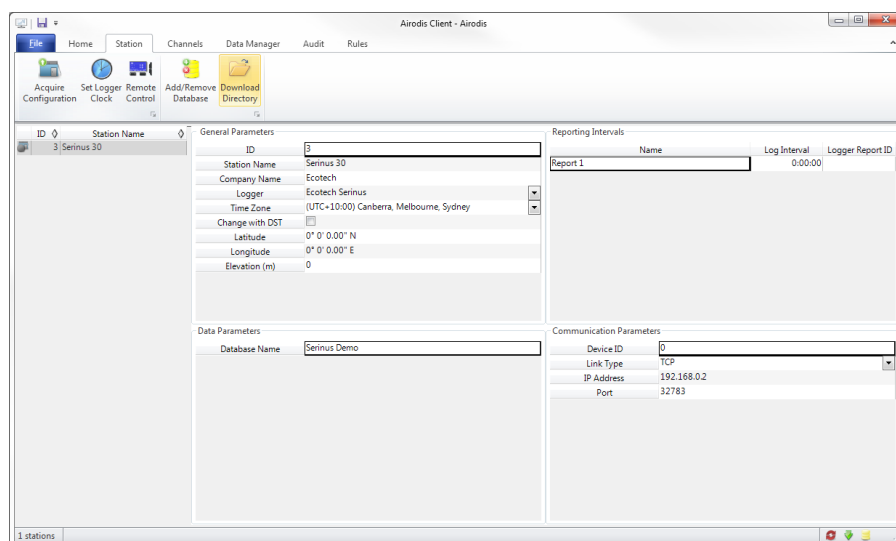


Figure 81 – LAN Network Set-Up (Airodis)

WAN

Below is an example of Airodis setup for a WAN network. Ensure the IP address is set the same as on the remote modem/router.

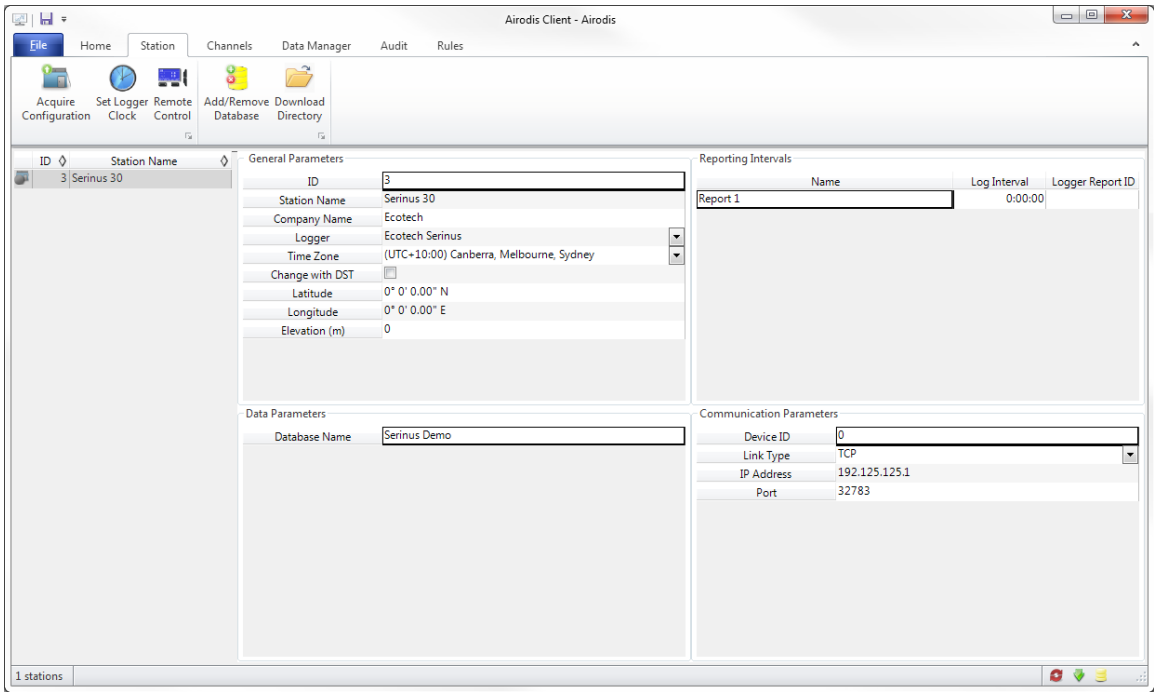


Figure 82 – WAN Network Set-Up (Airodis)

4.4 Analog and Digital Communication

The 25 Pin analog and digital I/O port on the rear panel of the instrument sends and receives analog and digital signals to other devices. These signals are commonly used to activate gas calibrators or for warning alarms.

4.4.1 Analog Outputs

The instrument is equipped with three analog outputs that can be set to provide either voltage (0 - 5, 0.25 - 5 or 0.5 - 5 V) or current (0 - 20, 2 - 20 or 4 - 20 mA) output. The analog outputs are tied to user selected parameters (refer to Table 47).

For 0 - 10 V analog output operation, set the output mode to current and move the jumpers (JP3) on the rear panel PCA to 0 - 10 V (refer to Figure 83). Ensure the Current Range is set to 0 - 20 mA to obtain the 0 - 10 V range. When calibrating the (current) analog output with the jumper set to 0 - 10 V, the 4 mA calibration target is now a 2 V target and 20 mA calibration target is now a 10 V target.

4.4.1.1 Analog Outputs Voltage Calibration

Equipment Required

- Multimeter (set to volts)
- Male 25 pin connector with cable

Procedure

1. Open - **Main Menu** → **Communications Menu** → **Analog Output Menu** (refer to Section 3.4.26).
2. Select - **Output Mode** → **Voltage**.
3. Connect a multimeter (using an appropriate adaptor or probes on the multimeter) to the ground (pin 24) and the relevant output pin (pin 10).
4. Edit - **0.5V Calibration** - (until the multimeter reads $0.500\text{ V} \pm 0.002$) - Accept.
5. Edit - **5.0V Calibration** - (until the multimeter reads $5.00\text{ V} \pm 0.002$) - Accept.

4.4.1.2 Analog Outputs Current Calibration

Equipment Required

- Multimeter (set to mA)
- Male 25 pin connector with cable

Procedure

1. Open - **Main Menu** → **Communications Menu** → **Analog Output Menu** (refer to Section 3.4.26).
2. Select - **Output Mode** → **Current**.
3. Connect a multimeter (using an appropriate adaptor or probes on the multimeter) to the ground (pin 24) and the relevant output pin (pin 10).
4. Edit - **4mA Calibration** - (until the multimeter reads $4\text{ mA} \pm 0.01$) - Accept.
5. Edit - **20mA Calibration** - (until the multimeter reads $20\text{ mA} \pm 0.01$) - Accept.

4.4.2 Analog Inputs

The instrument is also equipped with three analog inputs with resolution of 15 bits plus polarity, accepting a voltage between 0 - 5 V. These go directly to the microprocessor and should be protected to ensure static/high voltage does damage the main controller PCA (instrument warranty does not cover damage from external inputs).

4.4.3 Digital Status Inputs

The instrument is equipped with eight logic level inputs for the external control of the instrument such as Zero or Span sequences. Each input has a terminating resistor which can be either PULL UP or PULL DOWN. This is set using the jumper JP1 on the rear panel PCA (refer to Figure 83).

4.4.4 Digital Status Outputs

The instrument is equipped with eight open collector outputs which will convey instrument status condition warning alarms such as no flow, sample mode, etc. Two of the digital outputs can be set so that there is +5 V and +12 V available on the 25 pin connector for control purposes, instead of digital outputs 0 and 1.

In the default jumper locations (refer to Figure 83) these two outputs will function normally as open collector outputs. If moved to the position closer to the 25 pin connector then the DO 0 will supply +12 V and DO 1 will supply +5 V.

The +12 V and +5 V supplies are limited to about 100 mA each.

Each digital output is limited to a maximum of 400 mA. The total combined currents should not exceed 2 A.

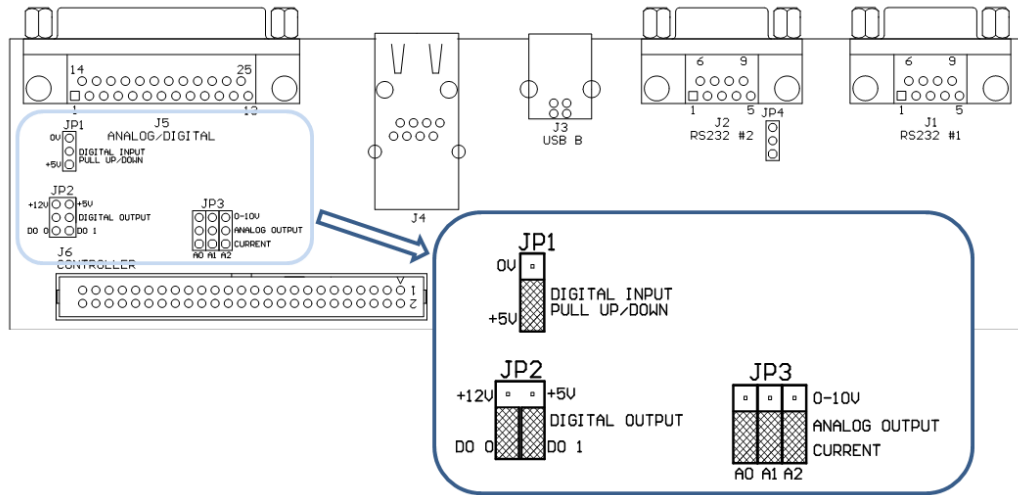


Figure 83 – Rear Panel PCA (Default Jumpers Highlighted)

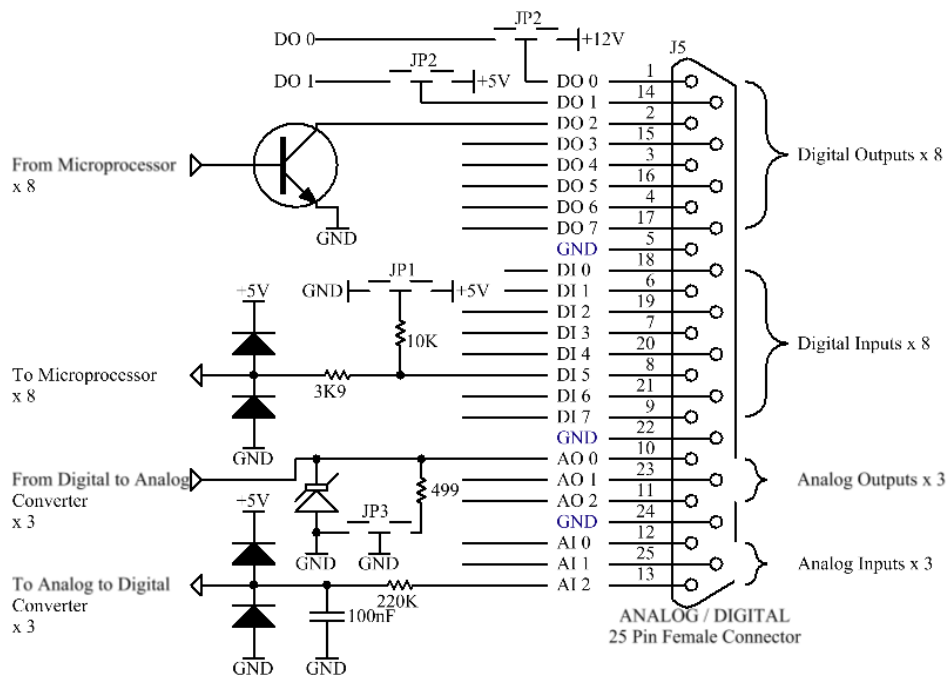


Figure 84 – Analog & Digital I/O Individual Pin Descriptions



CAUTION

The analog and digital inputs and outputs are rated to CAT I. Exceeding 12 VDC or drawing greater than 400 mA on a single output or a total greater than 2 A across the eight outputs can permanently damage the instrument and void the warranty.

4.5 Logging Data

When the user receives the instrument from the factory it will have a default set of parameters already setup in the internal data logger. These select few parameters have been chosen for their relevance in assisting in troubleshooting the instrument.

4.5.1 Configure Instrument Internal Logging

In order to log data the user must first specify a data logging interval. This is how often data will be logged to the USB memory stick. It is possible to log a maximum of 12 parameters. These parameters can be selected by name or by parameter number using the parameter list as a reference (refer to Table 47).

4.5.1.1 Data Log Setup –Numeric

Procedure

1. Open - **Main Menu → Communications Menu → Data Logging Menu** (refer to Section 3.4.23).
2. Select - **Data Log Interval** - (adjust to the desired value) - Accept.
3. Open - **Data Log Setup –Numeric** - (select the storage location to edit).
4. Edit - (Change the value in the selected storage location “Parameter n” to the preferred parameter to be logged) - Accept.

4.5.1.2 Data Log –Text

Procedure

1. Open - **Main Menu → Communications Menu → Data Logging Menu** (refer to Section 3.4.23).
2. Select - **Data Log Interval** - (adjust to the desired value) - Accept.
3. Open - **Data Log Setup –Text** - (select the storage location).
4. Select - (Change the name in the selected storage location “Parameter n” to the preferred parameter to be logged) - Accept.

4.6 Using Airodis Software to Download Data

4.6.1 Connecting the Instrument to a PC

This instrument can communicate with a PC using RS-232 (Serial), TCP/IP (Network), Bluetooth or USB. Serial, Bluetooth and network communications do not require additional drivers. When using a USB connection, the driver must be installed first.

4.6.1.1 Connecting Over USB

Before connecting the USB cable from a PC to the instrument, the Serinus USB driver must be installed.

Power ON the instrument and connect it to a PC with a USB cable. The user should receive a prompt if the driver needs to be installed. If not, open Device Manager (Under “System” in Control Panel), find the device and select “Update Driver Software”.

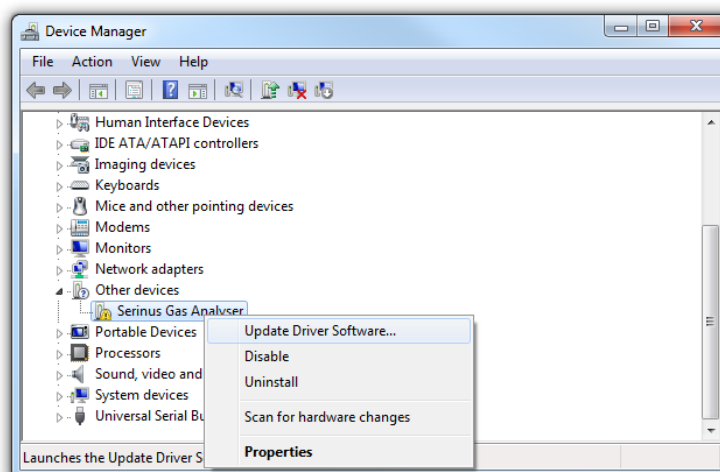


Figure 85 – Installing Driver Software (Device Manager)

When prompted where to search for the driver, select “**Browse my computer for driver software**”.

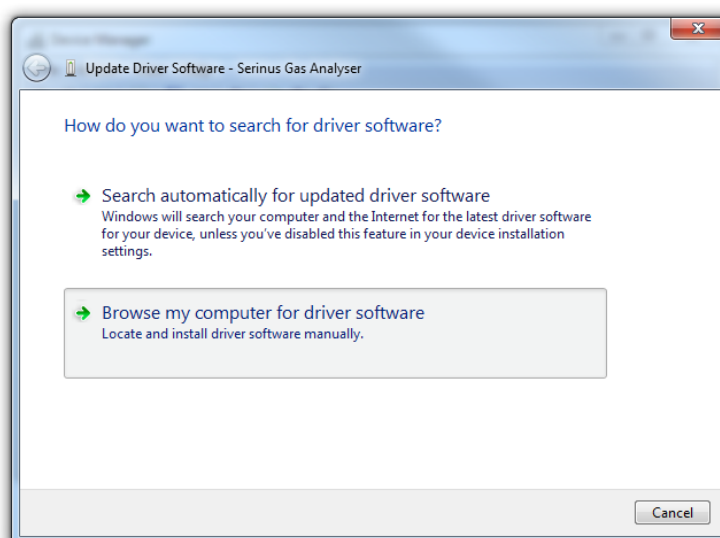


Figure 86 – Update Driver Popup

The Serinus USB driver is located on the green Ecotech resources USB stick under “\Drivers\Ecotech Analyser”. Select this directory and click **Next**.

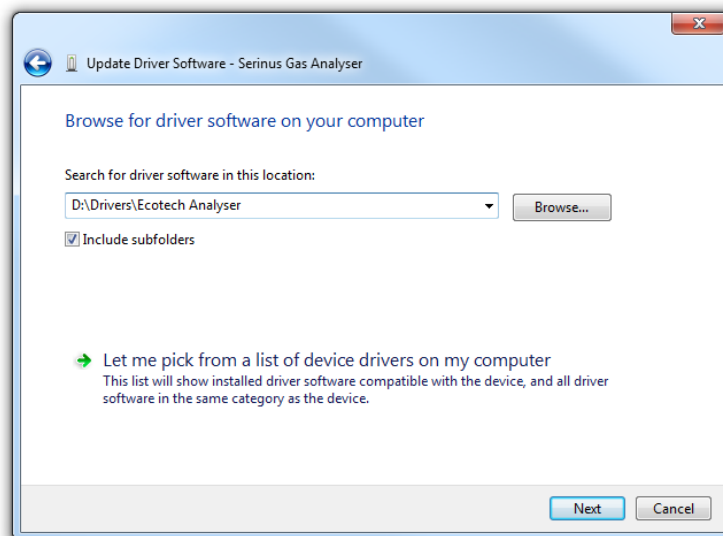


Figure 87 – Update Driver Popup (Directory Location)

If the user receives a confirmation prompt to install the driver, select **Install**.

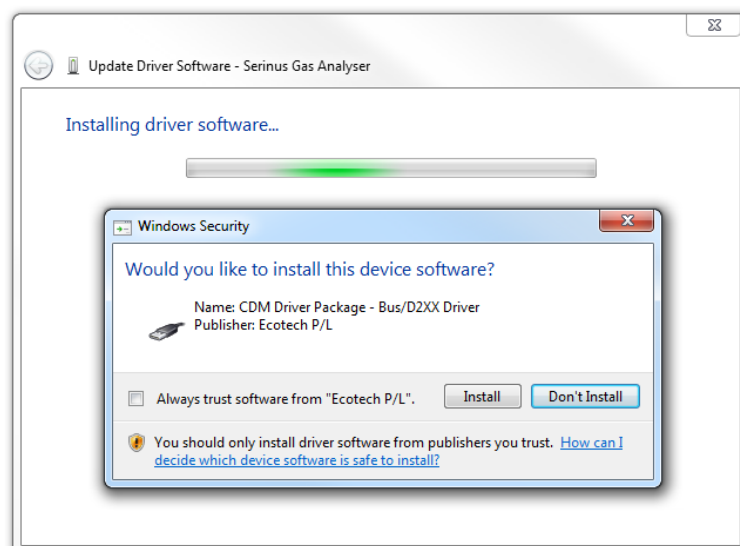


Figure 88 – Installing Driver Confirmation Prompt

If everything went smoothly, Windows will inform the user that the driver was successfully installed.

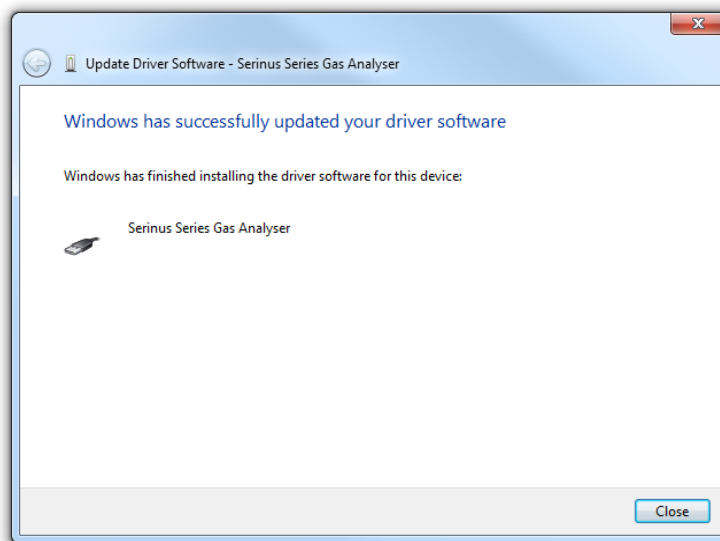


Figure 89 – Successful Driver Installation

4.6.1.2 Connecting Over Serial (RS-232)

The following steps outline how to setup the instrument for connection to a PC or datalogger (refer to Section 3.4.24):

Procedure

1. Open - **Main Menu** → **Communication Menu** → **Serial Communication Menu**.
2. Determine which RS232 Port the user is physically making the connection with. Remember, multidrop is only supported on RS232 #2.
3. Select - **Baudrate** → **38400** - Accept (Set an appropriate baud rate, default is 38400).
4. Select - **Protocol** → **Advanced** - Accept.

If the user is running Airodis in a multidrop configuration, ensure that the **Serial ID** is unique for each instrument on the chain.

4.6.1.3 Connecting Over Network (TCP/IP)

Refer to Section 4.3.2 to setup the instrument for connection to a PC or datalogger using a static IP address.

4.6.2 Installing Airodis

The user can download data from the instrument using either a full retail (paid) version of Airodis or with the demo version which is included on the green Ecotech resources USB stick. The demo version has limited functionality, but will allow the user to download and export data from up to three instruments. If the user doesn't have Airodis Installed, they can obtain it from the following address:

<http://www.airodis.com.au>

The installer is straightforward: Ensure the user selects the correct version of software to install for their operating system. If they are running 64-bit windows, install the 64-bit (x64) version. Otherwise, install the 32-bit (x86) version.

4.6.3 Configuring Airodis

Procedure

1. Once installed, double click on the Airodis shortcut on the desktop to start Airodis Workspace Manager. The user will be presented with the default workspace options. These will suffice for downloading data from the instrument.

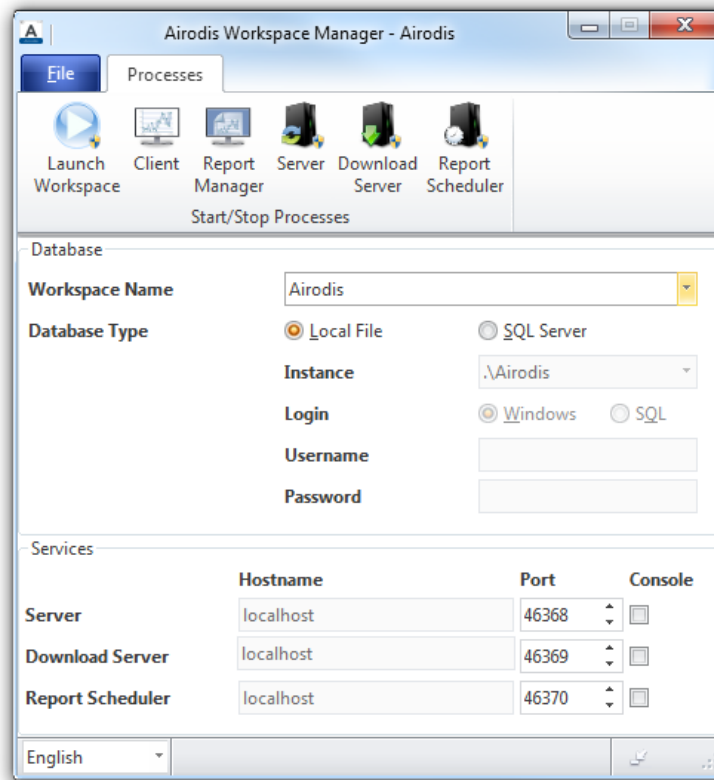


Figure 90 – Airodis Workspace Manager

2. Start the Client, Server and Download Server by single-clicking the toggle button for each. The client may prompt to register with Acoem Australasia or install an update. Follow the prompts if it does.
3. Once the Client application has loaded, click **Home→Add Station→New Physical Station**.

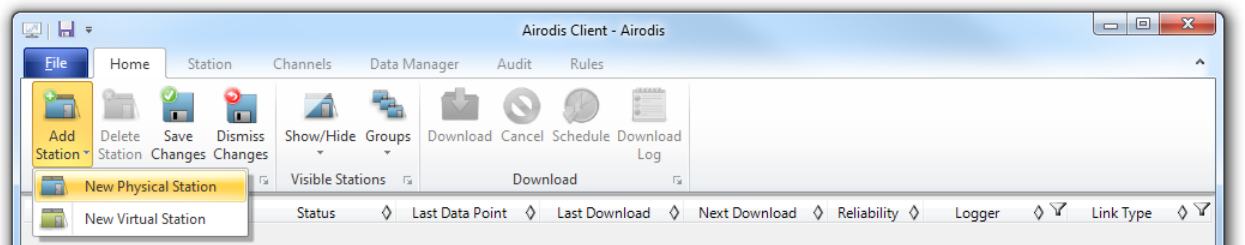


Figure 91 – Adding a New Station

4. This automatically brings the user to the **Station** tab on the ribbon. Enter the communication details to connect to the instrument.

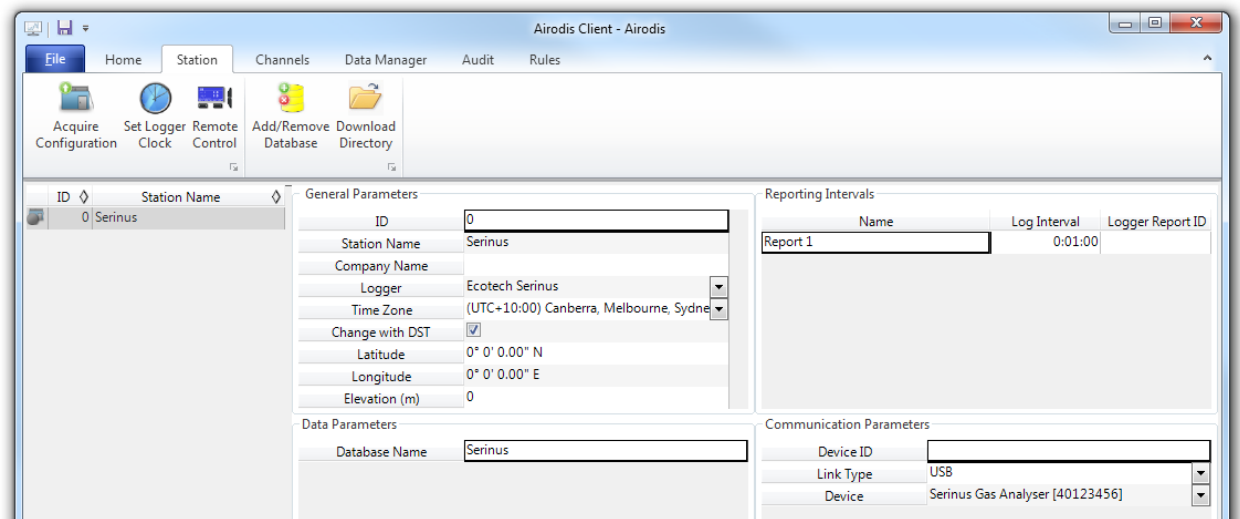


Figure 92 – New Station Connection

Table 6 – Setting up a New Station via Airodis

| Property | Description |
|---------------|--|
| Station Name | The name of the station. If you have other loggers, the name is used to distinguish them. |
| Logger | Set this to “Ecotech Serinus” when downloading from any Serinus series instrument. This will communicate with the instrument via the Advanced protocol. If using a network or serial connection, ensure that the Advanced protocol has also been selected on the instrument itself. |
| Time Zone | Set this to the time zone that the instrument is located in. |
| DST | Enable this option if you plan on changing the clock on the instrument with daylight savings. Leave this disabled if the clock does not shift during DST. The instrument will need to be adjusted manually for DST - it will not happen automatically. |
| Database Name | This is the name to be used for the table in the SQL database containing this station’s data. It must be unique for each station. |
| Device ID | Enter the Serial ID of the instrument. If you are not using multidrop; this can be set to “0” or left blank. |
| Link Type | Select the type of connection used to connect to the instrument. Different properties will appear depending on the link type selected. Align these settings with those of the instrument. |
| Log Interval | This needs to be the same as the Data Log Interval setting on the instrument. |

Note: The available fields for communication parameters will change when you change the link type. the user will need to set the communication parameters that have been defined on the instrument.

- Once the station has been created, save the station by clicking the Save shortcut icon or **File→Save**.

6. Click Acquire Configuration. This will probe the instrument for a channel list. After a few seconds, the channel list should be visible in the Channels tab.

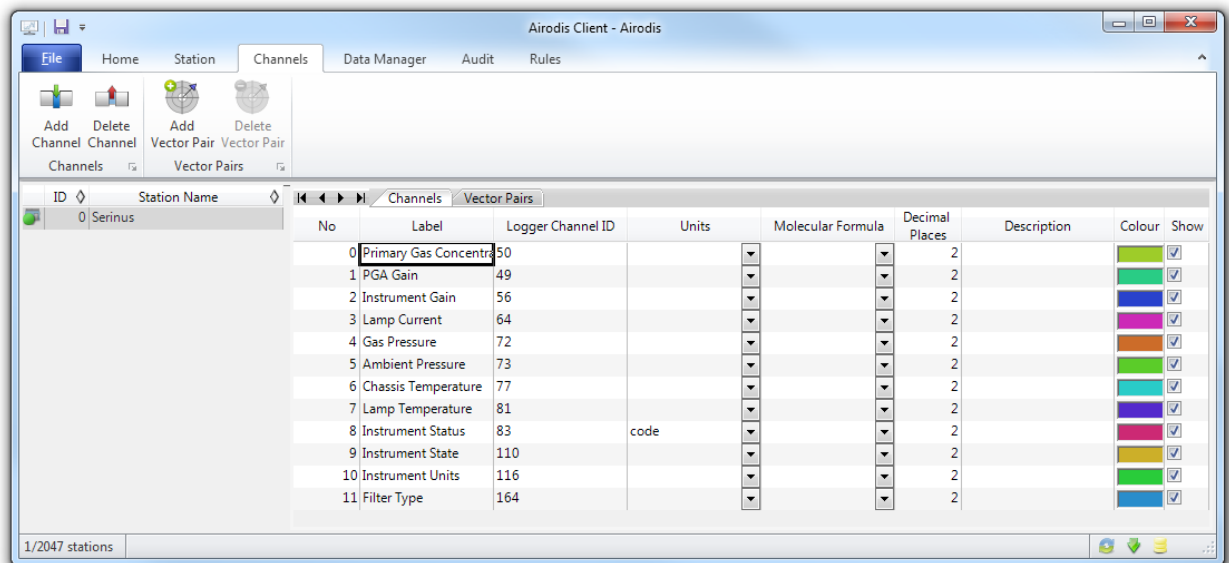


Figure 93 – Station Configuration (Channel List)

Note: If there was an error connecting to the instrument, a red dot will appear next to the station name in the station list (on the far left hand side). Hovering over the red dot will present the user with an error message (refer to Figure 94).

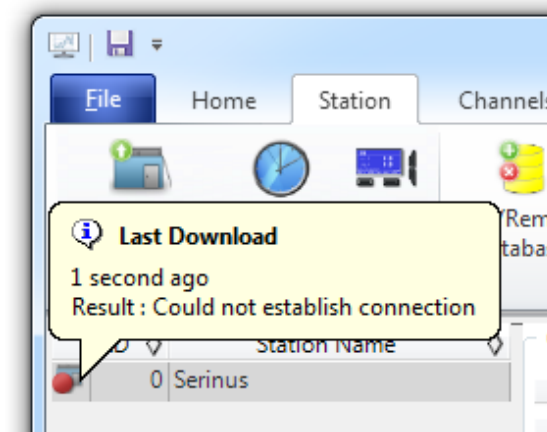


Figure 94 – Error Status Notification

7. Select the Data Manager tab, click download. The Download Data window will appear. Select the appropriate time period that the user wishes to download and click Download.

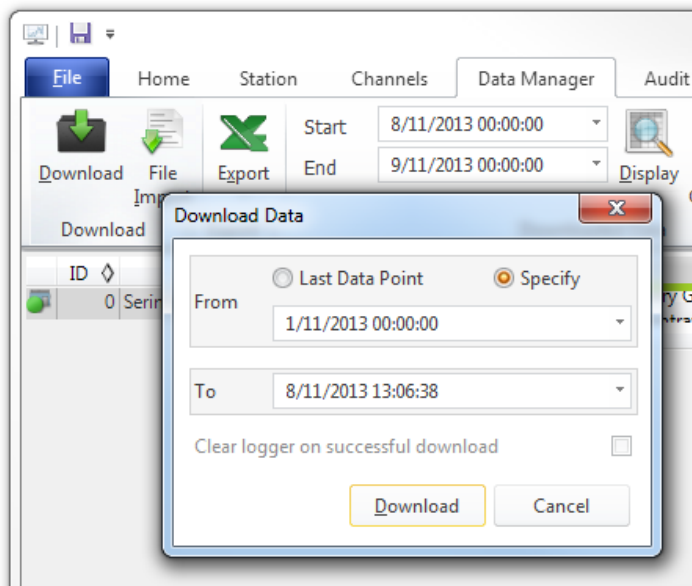


Figure 95 – Downloading Data

8. The status of the download will appear in the bottom-left corner of the window. The user can also monitor the status of the download from the Home tab.

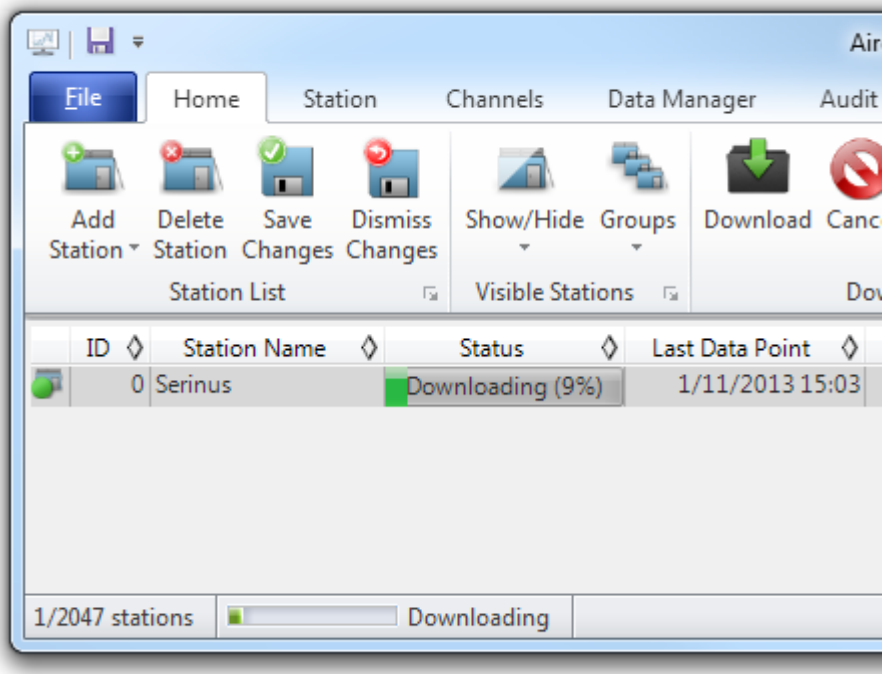


Figure 96 – Download Data Status

9. Data will become available in the data manager as it is downloaded. The user can load data for a date range by entering the start and end dates and clicking Display. The selected data will be loaded into the data manager.

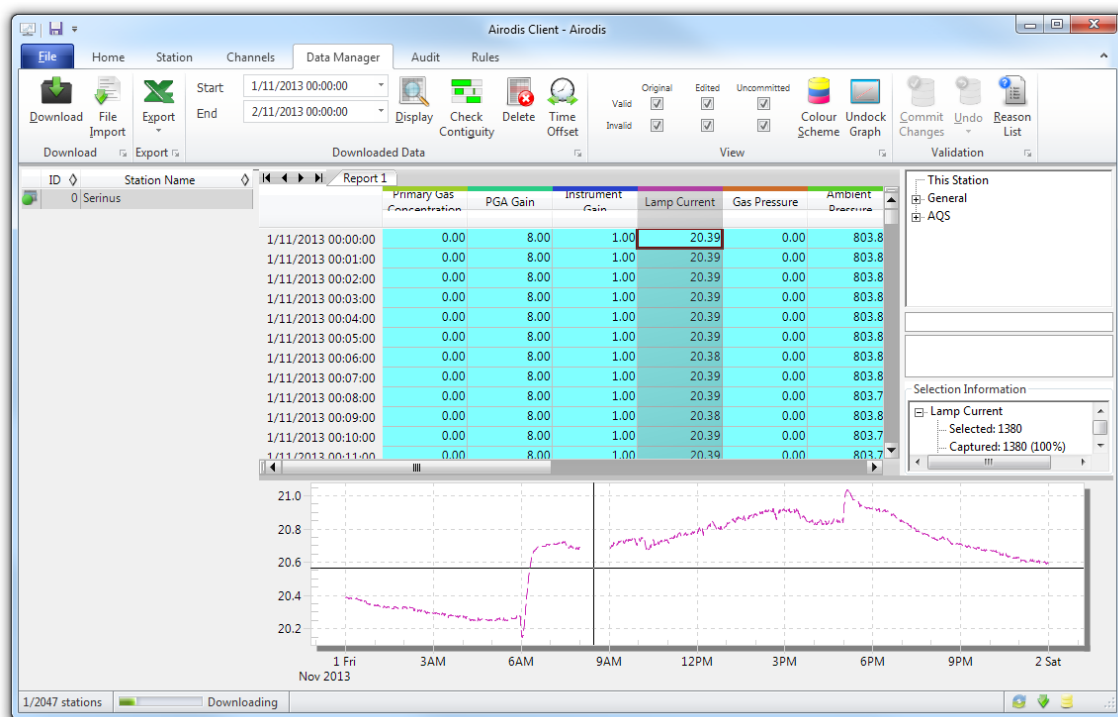


Figure 97 – Data Visibility

10. Data can be exported by clicking the Export function. This will allow the user to save their data in CSV format, which can be loaded into another program such as Microsoft Excel. It is also possible to copy/paste (Ctrl + C / Ctrl + V) data directly from the Airodis data manager.


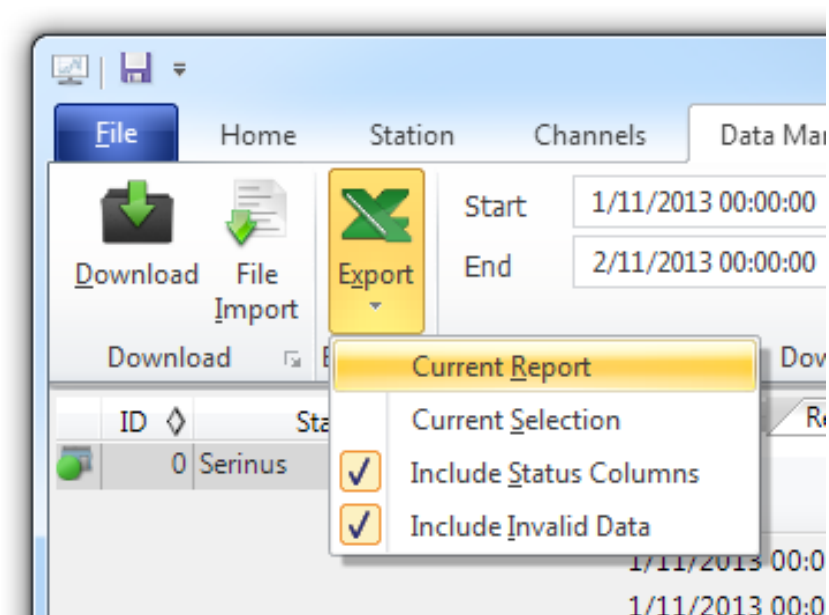


Figure 98 – Exporting Data

11. That's it! The data has been downloaded from the instrument and exported to a standard CSV file.

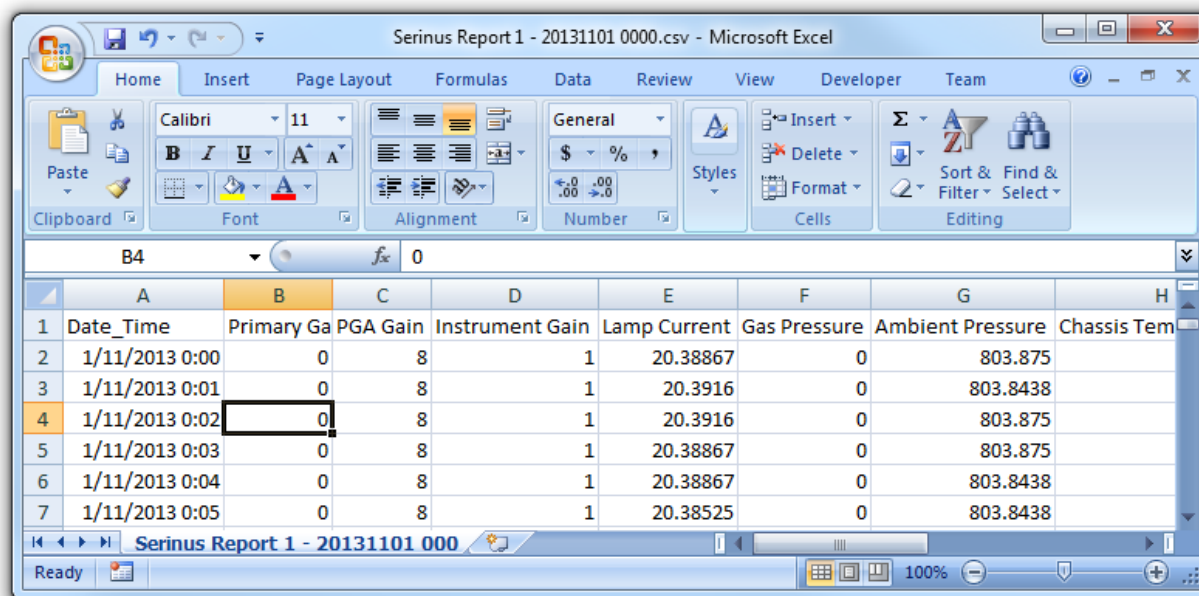

| | A | B | C | D | E | F | G | H |
|---|----------------|------------|----------|-----------------|--------------|--------------|------------------|-------------|
| 1 | Date_Time | Primary Ga | PGA Gain | Instrument Gain | Lamp Current | Gas Pressure | Ambient Pressure | Chassis Tem |
| 2 | 1/11/2013 0:00 | 0 | 8 | 1 | 20.38867 | 0 | 803.875 | |
| 3 | 1/11/2013 0:01 | 0 | 8 | 1 | 20.3916 | 0 | 803.8438 | |
| 4 | 1/11/2013 0:02 | 0 | 8 | 1 | 20.3916 | 0 | 803.875 | |
| 5 | 1/11/2013 0:03 | 0 | 8 | 1 | 20.38867 | 0 | 803.875 | |
| 6 | 1/11/2013 0:04 | 0 | 8 | 1 | 20.38867 | 0 | 803.8438 | |
| 7 | 1/11/2013 0:05 | 0 | 8 | 1 | 20.38525 | 0 | 803.8438 | |

Figure 99 – Data Download Complete

4.7 Serinus Remote App/Bluetooth

The Serinus Remote Application allows for any Android device (Tablet or Smartphone) to connect to an instrument.

The Serinus Remote Application allows the user to:

- Completely control the instrument using a remote screen displayed on the device.
- Download logged data and take snapshots of all the instrument parameters.
- Construct graphs from logged data or real time measurements.

The following sections cover installation, connection and use of the application.

4.7.1 Installation

The Serinus Remote Application can be found in the Google Play Store by searching for Ecotech or Serinus. Once found, choose to **Install** the application and **Open** to start the application.

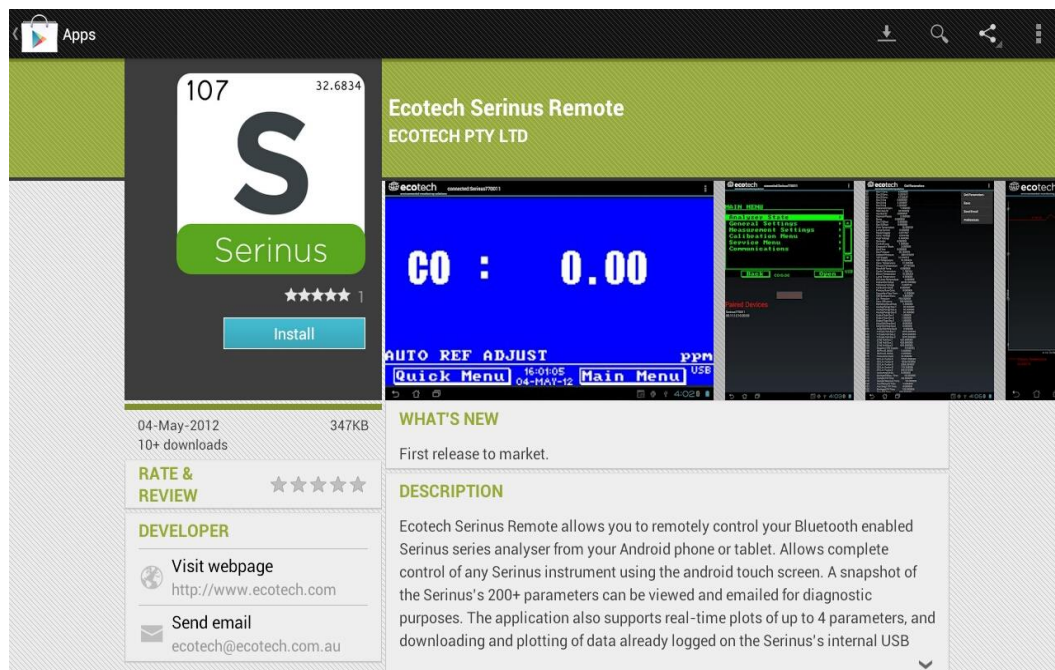


Figure 100 – Downloading the App from Google Play Store

Note: A menu containing additional features and functions can be accessed by entering the **Options Menu** (or similar) on your device. The location and format of this menu may vary.

4.7.2 Connecting to the Instrument

Procedure

1. Open - **Main Menu** → **Communications Menu** → **Bluetooth Menu** (to find the Bluetooth ID and PIN) (refer to Section 3.4.30).
2. Touch the Scan Serinus Analysers button at the bottom of the device screen.
3. Select the **Analyser ID** from either the **Paired Devices** or the **Other Available Devices**.
4. Input the PIN (if prompted) and press OK (refer to Section 3.4.30).

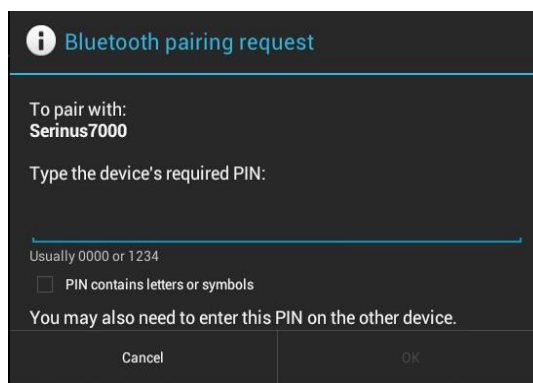


Figure 101 – Bluetooth Pairing Request

5. A screen shot of the instrument's current screen should appear on the user smartphone or tablet. To disconnect press the back key/button on the device.

Note: Once the instrument has been paired with the device it will appear under “Paired Devices” and the PIN will not need to be entered again. Only one Bluetooth connection can be made to an instrument at any one time.

4.7.3 Instrument Control

Once connected the user has full control of the instrument. The range for remote control depends on the device’s Bluetooth capabilities and any intervening obstructions, but is usually up to 30 meters.

Remote Screen Operation

With the exception of the number pad, all button functions/actions can be performed by touching the screen. This includes the selection buttons and the scroll buttons. Touching any part of the screen where there is not already a button also enacts the functions of the scroll buttons.

Home Screen

Touching the upper half of the screen increases the contrast and touching the lower half of the screen decreases contrast on the real instrument.

Menus

Touching the upper or lower half of the screen allows the user to scroll up and down respectively.

Right-hand Section of the Screen

Swiping from right to left brings up the number pad for entering numbers (swipe from left to right to hide the number pad).

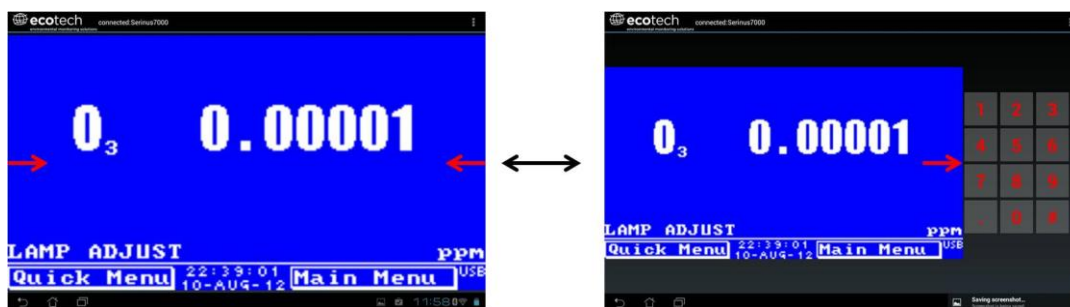


Figure 102 – Showing or Hiding the NumPad

Left-hand Section of the Screen

Swiping from left to right brings up a list of available analysers (swipe from right to left to hide the instrument list).

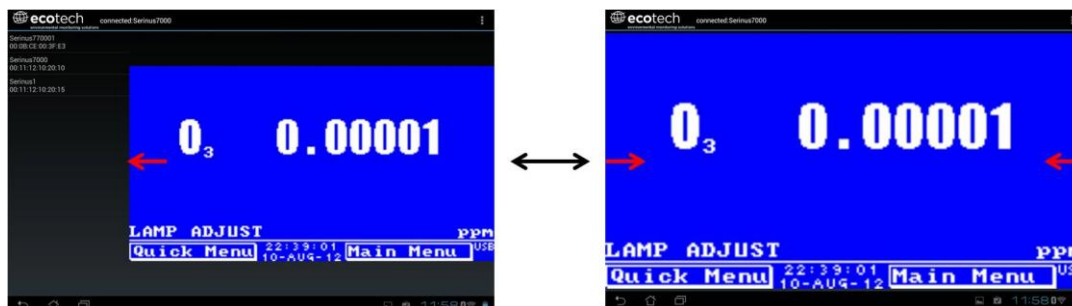


Figure 103 – Switching Analysers

Back Button

This button will enable the user to return to the selection screen, allowing connection to a different instrument.

Options Menu

The Options Menu is accessed by the grey button in the top right corner of the screen or pressing the Menu Button, depending on the user's Android device.

| | |
|-------------------------|------------------------------|
| Refresh | Refresh the display. |
| Show/Hide NumPad | Show or hide the number pad. |
| Real Time Plot | Refer to Section 4.7.4 |
| Download | Refer to Section 4.7.5. |
| Get Parameters | Refer to Section 4.7.6. |
| Preferences | Refer to Section 4.7.7. |

4.7.4 Real-Time Plot

Allows the user to view real-time plotting of up to four parameters at the same time. The user can also scroll from left to right, top to bottom or zoom in and out on the plot by swiping/pinching.

Once the plot is zoomed or scrolled, it enters into Observer Mode, meaning that auto-scaling is suspended. Press at the top of the screen (where it says Observer Mode) to return to Normal Mode.

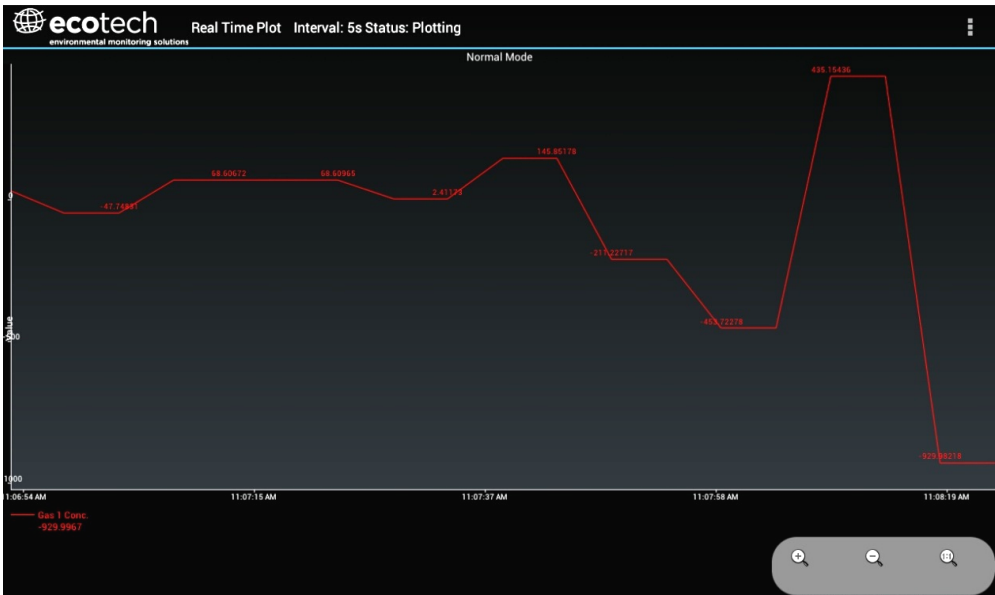


Figure 104 – Real-Time Plot

Options Menu

The Options Menu is accessed by the grey button in the top right corner of the screen or pressing the menu button, depending on the user’s Android device.

| | |
|--------------|--|
| Start | Restarts graphing if it has been stopped and returns the graph to Normal Mode . |
| Stop | Stops collecting data. In this mode the user can scroll the display without going into Observer Mode , because the system has no data collection to suspend. It is necessary to “Stop” data collection to set the interval. |
| Clear | Clears the window and restarts the graphing. |
| Save | Saves an image of the graph and accompanying data in the location specified in preferences (refer to Section 4.7.7). The user will also be asked whether they want to send the file and data via email. When saving the data, the user can choose to Save All Data or Customise the length of the data by entering a time between five minutes and six hours. Only the data from the start of collection to that limit will be saved (although the plot will still appear exactly as it does on the screen). |
| Set Interval | While data collection is stopped, the user can specify the time intervals between collections. |

4.7.5 Download

Download logged data from the USB memory stick inside the instrument. All data logged by the instrument to the USB memory stick over the period of time specified will be collected. Due to the slow connection speed of Bluetooth, this should only be used for relatively short sections of data. Downloading one days’ worth of one minute data is likely to take a couple of minutes.

Options Menu

| | |
|--------------------|---|
| Save | Generates a filename based on the start and end date/time specified. It saves the downloaded data in the location specified in preferences and asks to send the saved comma separated text file (.csv) as an attachment to an email. This file format does not include the parameter headings, just the values. |
| Send E-Mail | Sends an email with the parameter data in the body of the email, formatted as displayed (this includes the parameter name and the values). |
| Plot | Graphs the data that has been downloaded. The user is prompted to select which parameters to plot based on the parameters that were being logged (refer to Figure 105) |
| Preferences | Refer to Section 4.7.7. |

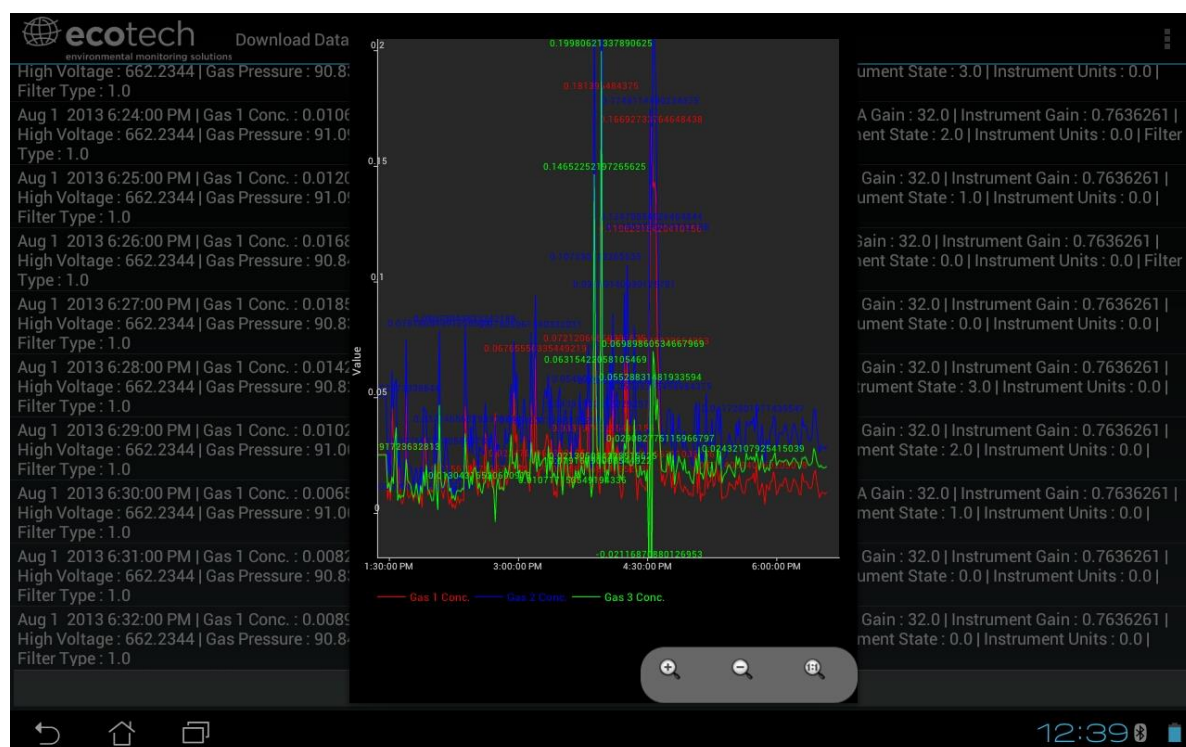


Figure 105 – Plot of Downloaded Data

4.7.6 Get Parameters

Download a list of parameters and corresponding values directly from the instrument. This list of parameters is a snap shot of the current instrument state and is very helpful in diagnosing any problems with the instrument.

Options Menu

| | |
|----------------|--|
| Get Parameters | Refreshes the parameter list display. |
| Save | Generates a filename from the current date and time. It saves the parameter data in the location specified in preferences and asks to send the saved text file as an attachment to an email. |
| Send E-Mail | Sends an email with the parameter data in the body of the email, formatted as displayed. |
| Preferences | Refer to Section 4.7.7. |

4.7.7 Preferences

The Preferences Menu allows the operator to adjust the directory settings, logged data format and the colour scheme settings. It can be accessed through the **Options Menu** in most windows.

Directory Settings

The operator can specify/select where to save the parameter lists, logged data and real time plots.

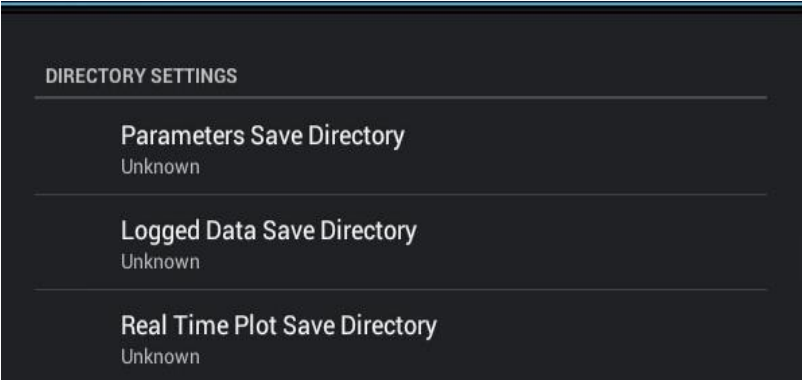


Figure 106 – Directory Settings

Logs Format

When downloading logged data, the parameters can be displayed on one line or each parameter on a separate line.


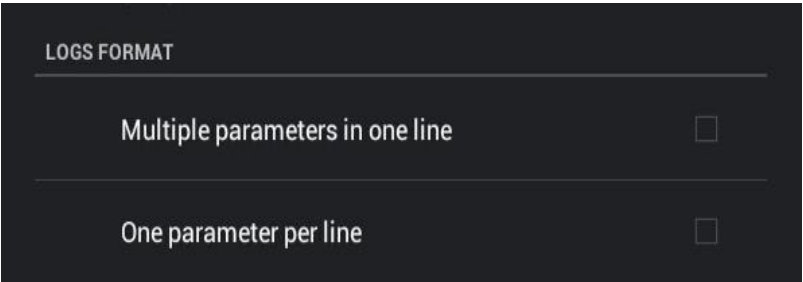


Figure 107 – Logs Format

Colour Theme Settings

Allows the user to choose a colour scheme for the remote screen, either Matrix, Classic, Emacs or Custom.

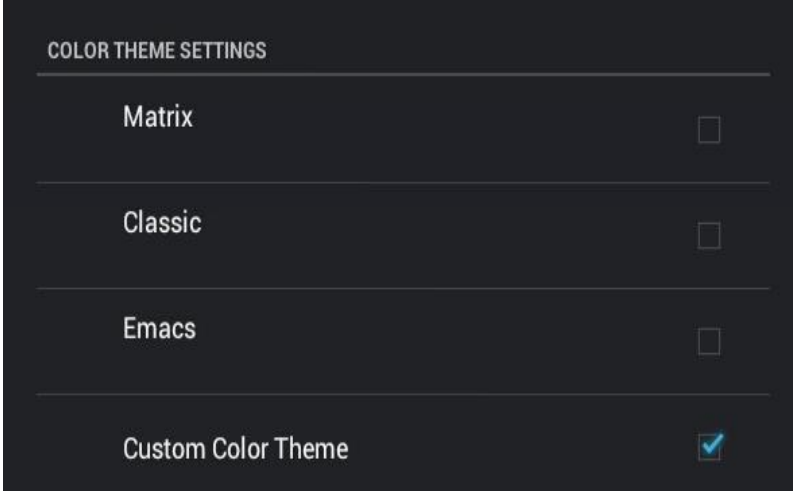

| COLOR THEME SETTINGS | |
|----------------------|-------------------------------------|
| Matrix | <input type="checkbox"/> |
| Classic | <input type="checkbox"/> |
| Emacs | <input type="checkbox"/> |
| Custom Color Theme | <input checked="" type="checkbox"/> |

Figure 108 – Colour Theme Settings

This page is intentionally blank.

5. Calibration

The following sections describe how to calibrate the span and zero points of the instrument as well as giving a brief overview of the calibration system.

Main Menu → Calibration Menu (refer to Section 3.4.10 for information on menu items).

5.1 Overview

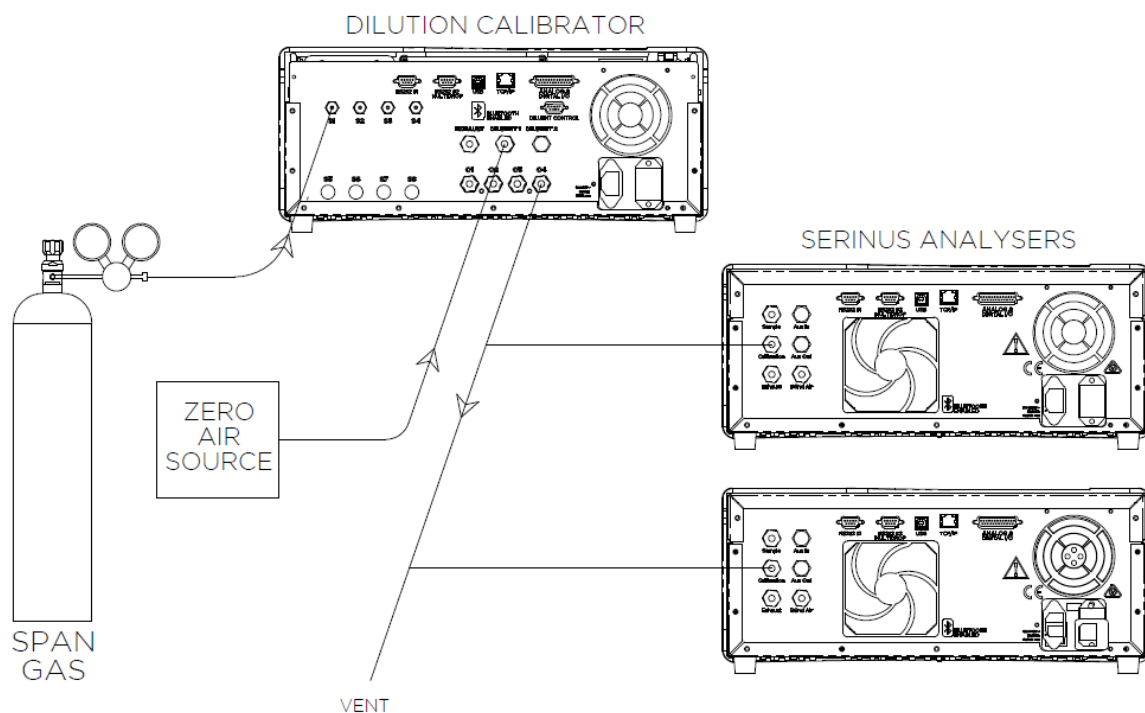


Figure 109 – Example of a Calibration System



CAUTION

All calibration gases must be supplied at ambient pressure to avoid damaging the instrument. If direct gas cylinder connection is required, high pressure Span/Zero options can be installed at time of ordering.

The calibration chapter consists of a:

- General discussion of calibration.
- Description of the pressure calibration procedure.
- Description of the Zero/Span precision check and calibration procedures.
- Description of the multipoint precision check procedure.

The Serinus 50 analyser is a precision measuring device which must be calibrated against a known source of SO_2 (e.g. a certified gas cylinder).

There are several different types of checks/calibrations performed:

- Level 1 Calibration - A simplified two-point instrument calibration used when instrument linearity does not need to be checked or verified. This check is typically performed on a monthly basis. Adjustments to the instrument response can only be made when performing level 1 calibration.
- Level 2 Calibration - A simple check of the instrument's response. Level 2 checks may be performed using non-certified reference sources and are most often used as a performance monitoring tool. The instrument may not be adjusted
- Multipoint Precision Check - A series of calibration points, typically covering zero and 4 up-scale points, measured using a certified reference atmosphere and covering the instruments FS measurement range. These precision checks are used to determine the linearity of the instrument response across its measurement range.

In general terms, the calibration process includes the following steps:

1. Establish a reliable and stable calibration source.
2. Provide a satisfactory connection between the calibration source and the instrument.
3. Calibrate the instrument against the calibration source.

Multipoint precision check is used to establish the relationship between instrument response and pollutant concentration over the instrument's full scale range. Zero and span calibrations are frequently used to provide a two-point calibration or an indication of instrument stability and function.

Note: Zero calibrations are not recommended by Acoem Australasia, but may be performed when specifically required by a user. Zero calibrations tend to mask issues that should be addressed during maintenance/service.

Regulations generally require that the instrument be span calibrated any time:

- The instrument is moved.
- The instrument is serviced.
- When changing the instruments units between volumetric and gravimetric.
- Whenever the instrument characteristics may have changed.

Regulatory agencies establish the time intervals at which the instrument must be calibrated to ensure satisfactory data for their purposes.

Note: Use of the Serinus 50 analyser as a U.S. EPA or EN-designated equivalent method requires periodic multipoint precision checks in accordance with the procedure described below. In addition, the instrument must be set to the parameters indicated in U.S. EPA (refer to Section 2.4) or EN Equivalent Set-up (refer to Section 2.5).

5.2 Pressure Calibration

The pressure sensors are a vital component of the instruments operation. The pressure calibration should be checked on installation or whenever maintenance is performed.

A thorough leak check must be performed prior to performing a pressure calibration (refer to Section 6.4.4).

The pressure calibration can either be a two point calibration (one point under vacuum and the other at ambient pressure) or a single ambient point calibration (when very minor adjustments are required).

Note: Ensure that the instrument has been running for at least one hour before any calibration is performed to ensure the instrument's stability. When performing a two point pressure calibration, it is advisable to perform the *vacuum pressure calibration* first.

5.2.1 Full Pressure Calibration (Two Point Calibration)

This section outlines how to perform a full pressure calibration. Using the required equipment follow the steps below to complete a full pressure calibration.

Note: Ensure that the instrument has been running for at least one hour before the calibration is performed.

Note: Ensure units of measure are the same on both the barometer and instrument.

Equipment Required

- Barometer
- Vacuum source

Procedure

1. Turn OFF the vacuum source and allow the instrument to return to ambient pressure.
2. Disconnect any external tubing connected to the rear of the instrument.
3. Open - **Main Menu** → **Calibration Menu** → **Pressure Calibration Menu** - (read note) - OK.

Note: This action will place the valve sequencing on hold; normal sampling will be interrupted.

4. Edit - **Vacuum Set Pt.** - (Read displayed instructions) - OK.
5. Refer to Figure 110. Connect a barometer to the **BGnd Air Port**.

6. Refer to Figure 110. Connect a vacuum source to **Exhaust Port** of instrument.

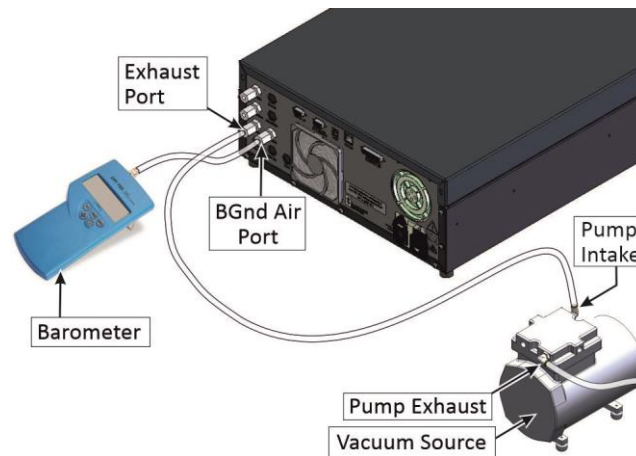


Figure 110 – Full Pressure Calibration Set-up

7. Wait 2 - 5 minutes and ensure the pressure reading on the barometer has dropped and is stable.
8. Enter the barometer reading into the instrument - Accept.
9. Read displayed instructions - OK.
10. Turn OFF the vacuum source and slowly remove the barometer from the **BGnd Air Port** and allow the instrument to return to ambient.
11. Refer to Figure 111. Disconnect the vacuum source from the **Exhaust Port**.



Figure 111 – Full Pressure Calibration Set-up (Ambient)

12. Wait 2 - 5 min, enter the ambient barometer reading into the instrument - Accept.

Note: Both of the pressure sensors should now be displaying the current ambient pressure and they should be the same value within 3 torr of each other.

13. Back - **Pressure Calibration Menu** - (read note) - OK.

5.2.2 Pressure Calibration (Ambient Only)

Full pressure calibrations are generally recommended, however it is possible to calibrate only the ambient point in cases where only a minor ambient pressure adjustment is required.

Note: Ensure that the instrument has been running for at least one hour before any calibration is performed to ensure the instrument's stability.

Note: Ensure units of measure are the same on both the barometer and instrument.

Equipment Required

- Barometer

Procedure

1. Turn OFF the vacuum source and allow the instrument to return to ambient pressure.
2. Refer to Figure 112. Disconnect all external tubing connected to the rear ports of the instrument.



Figure 112 – Ambient Pressure Calibration Set-up

3. Open - **Main Menu** → **Calibration Menu** → **Pressure Calibration Menu** - (read note) - OK.

Note: This action will place the valve sequencing on hold; normal sampling will be interrupted.

4. Edit - **Ambient Set Pt.** - (Read displayed instructions) - OK.
5. Wait 2 - 5 minutes and enter the ambient barometer reading into the instrument - Accept.

Note: Both of the pressure sensors should now be displaying the current ambient pressure and they should be the same value within 3 torr of each other.

6. Back - **Pressure Calibration Menu** - (read note) - OK.

5.2.3 Pressure Calibration (Internal Pump Option Only)

The internal pump requires a separate pressure calibration procedure that replaces the one used in Section 5.2.1 and 5.2.2.

Note: Ensure that the instrument has been running for at least one hour before any calibration is performed to ensure sufficient stability.

Note: Ensure units of measure are the same on both the barometer and instrument.

Equipment Required

- Barometer
- Kynar 1/4" Blocker Nuts

Procedure

1. Disconnect any external tubing connected to the rear of the instrument.
2. Open - **Main Menu** → **Calibration Menu** → **Pressure Calibration Menu** - (read displayed note) - OK.

Note: Entering this menu will switch OFF the internal pump and place the valve sequencing on hold; normal sampling will be interrupted.

3. Edit - **Vacuum Set Point** - (read displayed instruction) - OK.
4. Refer to Figure 113. Connect a barometer to the **BGnd Air Port**.

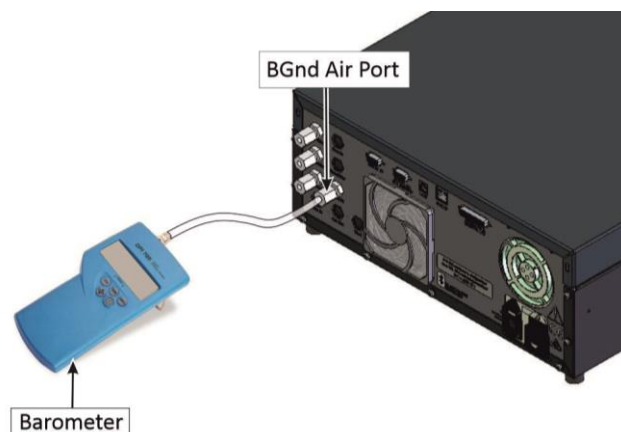


Figure 113 – Pressure Calibration (Internal Pump Option Only) Set-up

5. Remove the DFU from the bleed air fitting and block with a Kynar 1/4" blocker nut.

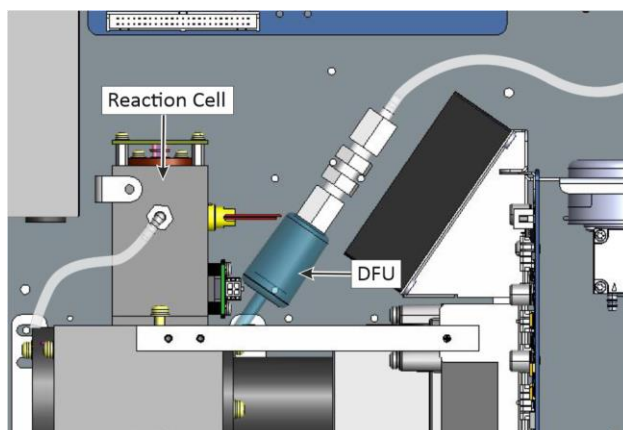


Figure 114 – DFU

6. Wait 2 - 5 minutes and ensure the pressure reading on the barometer is stable.
7. Enter the barometer reading into the instrument - Accept.
8. Read displayed instructions - OK.
9. The pump should now stop automatically. Disconnect the barometer from the **BGnd Air Port**.
10. Remove the Kynar 1/4" blocker nut from the bleed air fitting and replace the DFU.
11. Wait 2 - 5 minutes and enter the ambient barometer reading into the instrument - Accept.

Note: Both of the pressure sensors should now be displaying the current ambient pressure and they should be the same value within 3 torr of each other.

12. Back - **Pressure Calibration Menu** - (read note) - OK.

5.3 Manual Background

A background is a measurement that is made when SO₂ free air is drawn through the reaction cell. The resulting measurement signal (background) will include signals unrelated to SO₂, generated from the PMT due to internal offsets as well as cell fluorescence. The background is an electronic baseline, it is normally run every 24 hours automatically. There is sometimes a need for the user to run a manual background.

Note: A manual background is recommended before commencing a multipoint precision check.

Equipment Required

- N/A

Procedure

1. Open - **Main Menu** → **Calibration Menu**.
2. **Start** - **Manual Background** → **Running**.

- Manual background will now display running and will proceed to draw air from the zero air scrubber for 9 minutes (4 minutes of fill time and 5 minutes of measure). The user can press stop at any time to cancel the background. At the end of the 9 minute period a new background voltage will be recorded in the event log as well as in the **Calculation Factors Menu**.

5.4 Zero Calibration

Zero calibrations are used to determine the zero response of the instrument and apply an offset to the reading.

Performing a zero calibration will adjust the **Zero Offset SO2**. This offset can be checked in the **Main Menu → Service Menu → Calculation Factors Menu** and should be very close to zero. A large offset may indicate a problem with the instrument (refer to Section 7).

Note: Acoem Australasia encourages regular zero precision checks; however Acoem Australasia recommends that the zero calibration only be performed when specifically required as it may mask issues that should be addressed during maintenance/service.

A zero calibration can be performed either through the **Calibration Port**, **Background Air Port** or the **Sample Port**. Refer to the instructions outlined in the next three sections:

Note: Ensure the instrument has been running for at least one hour before any calibration is performed to ensure sufficient stability.

5.4.1 Calibration Port

Equipment Required

- Zero Air Source (Refer to Section 1.3 for definition)

Procedure

- Refer to Figure 115. Ensure a suitable zero air source is connected to the **Calibration Port**.

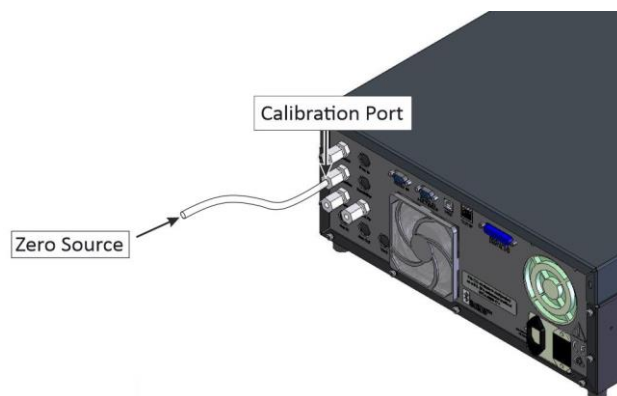


Figure 115 – Zero Calibration Set-up - 1

- Open - **Main Menu → Calibration Menu**.
- Select - **Cal. Type → Manual** - Accept.

4. Select - **Cal. Mode** → **Zero** - Accept.
5. Select - **Zero Source** → **External** - Accept.
6. Allow the instrument time to achieve a stable response.
7. Enter - **Zero Calibrate SO2** - OK.
8. Select - **Cal. Mode** → **Measure** - Accept (To return to sample measure).

5.4.2 Sample Port

Equipment Required

- Zero Air Source (Refer to Section 1.3 for definition)

Procedure

1. Refer to Figure 116. Ensure a suitable zero air source is connected to the **Sample Port**.

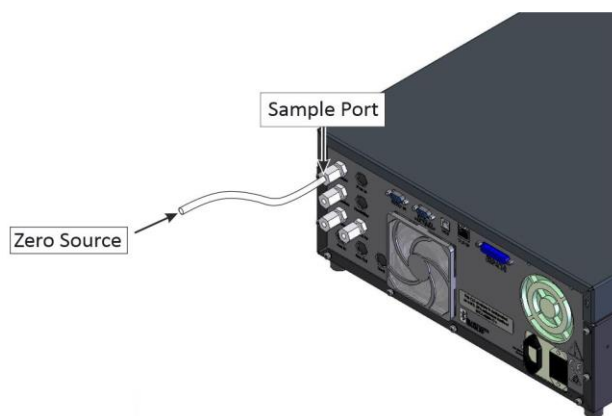


Figure 116 – Zero Calibration Set-up - 2

2. Open - **Main Menu** → **Calibration Menu**.
3. Select - **Cal. Type** → **Manual** - Accept.
4. Select - **Cal. Mode** → **Measure** - Accept.
5. Select - **Zero Source** → **External** - Accept.
6. Allow the instrument time to achieve a stable response.
7. Enter - **Zero Calibrate SO2** - OK.
8. Disconnect the zero source and reconnect the sample line to the **Sample Port**.

5.4.3 Background Air Port

Equipment Required

- N/A

Procedure

1. Open - **Main Menu** → **Calibration Menu**.

2. Select - **Cal. Type** → **Manual** - Accept.
3. Select - **Cal. Mode** → **Zero** - Accept.
4. Select - **Zero Source** → **Internal** - Accept.
5. Allow the instrument time to achieve a stable response.
6. Enter - **Zero Calibrate SO2** - OK.
7. Select - **Cal. Mode** → **Measure** - Accept (To return to sample measure).

5.5 Span Calibration

A span calibration is a calibration performed at the upper end of the instrument's measurement range. Acoem Australasia recommends calibration at 80% of the full scale measurement or operating range of the instrument.

While the instrument range is commonly set as a default 0 - 500 ppb, this is widely recognised as no longer being valid with modern digital communication and most regulators will now recommend a range more suited to local conditions.

A span gas can be supplied through either the **Calibration Port** or **Sample Port**. Refer to the instructions outlined in the next two sections.

Note: Ensure that the instrument has been running for at least one hour before any calibration is performed to ensure the instrument's stability.

5.5.1 Calibration Port

Equipment Required

- Span Source

Procedure

1. Refer to Figure 117. Ensure a suitable span source is connected to the **Calibration Port**.

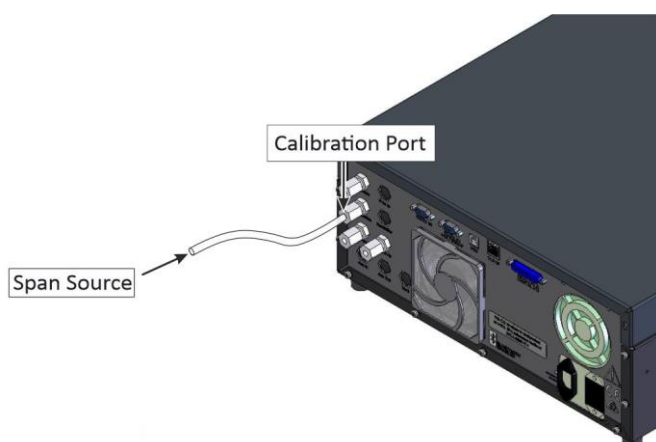


Figure 117 – Span Calibration Set-up - 1

2. If diluting the gas with a dilution calibrator, set the output concentration to 80% of the instrument measurement range.
3. Open - **Main Menu** → **Calibration Menu**.
4. **Select - Cal. Type** → **Manual** - Accept.
5. Select - **Cal. Mode** → **Span** - Accept.
6. Let the instrument stabilise, typically 15 minutes.
7. Enter - **Span Calibrate SO₂** - (Enter the span output concentration) - Accept.
8. Select - **Cal. Mode** → **Measure** - Accept (To return to sample measure).

5.5.2 Sample Port

Equipment Required

- Span source

Procedure

1. Refer to Figure 118. Ensure suitable span source is connected to the **Sample Port**.

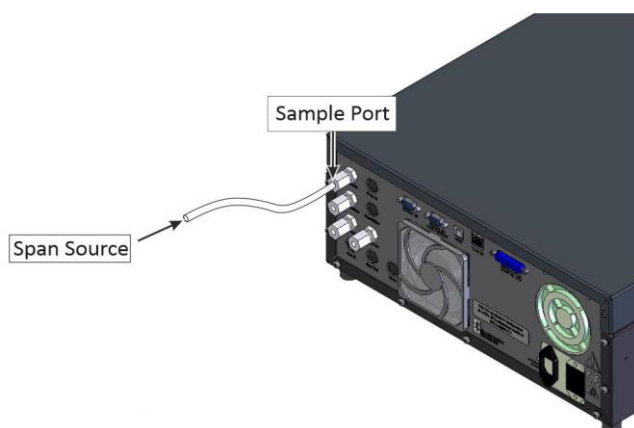


Figure 118 – Span Calibration Set-up - 2

2. If diluting the gas with a dilution calibrator, set the output concentration to 80% of the instrument measurement range.
3. Open - **Main Menu** → **Calibration Menu**.
4. **Select - Cal. Type** → **Manual** - Accept.
5. Select - **Cal. Mode** → **Measure** - Accept.
6. Let the instrument stabilise, typically 15 minutes.
7. Enter - **Span Calibrate SO₂** - (Enter the span output concentration) - Accept.
8. Disconnect the span source and reconnect the sample line to the **Sample Port**.

5.5.3 Manual Instrument Gain and Offset Adjustments

**CAUTION**

Manual adjustment of the Instrument Gain does not take into account the PTF correction and can lead to an incorrect calibration.

At times it may be desirable to manually adjust the instrument's gain and offset. Typically this option is only used when an instrument calibration has been corrupted and the user wishes to reset the instrument response factors prior to performing a new calibration.

To manually adjust the instrument follow the below procedure:

Procedure

1. Open - **Main Menu** → **Service Menu** → **Calculation Factors Menu**.
2. Edit - **Instrument Gain** - (Adjust as required. 1 is the default) - Accept.
3. Edit - **Zero Offset SO2** - (Adjust as required. 0 is the default) - Accept.

5.6 Precision Check

Similar to a normal zero or span calibration, a precision check is a *Level 2 calibration* that may be performed using a non-certified reference. The instrument is supplied with a known concentration of span gas (or zero air) and the instrument's response observed. However, no adjustment to the instrument response is made during a precision check.

Note: Ensure that the instrument has been running for at least one hour before any calibration is performed to ensure the sufficient stability.

Equipment Required

- Span source
- Zero source

Procedure

1. Supply the instrument with a zero source (refer to Section 5.4 for the procedure of setting up a zero, but do not do a **Zero Calibrate SO2**).
2. Observe and record the measurement from the instrument.
3. Supply the instrument with a span source (refer to Section 5.5 for the procedure of setting up a span but do not do a **Span Calibrate SO2**).
4. Observe and record the measurement from the instrument.
5. Check both readings against your local applicable standards.
6. Select - **Cal. Mode** → **Measure** - Accept (To return to sample measure).

If an instrument fails a span precision check (based on your local applicable standards), perform a span calibration (refer to Section 5.5).

If an instrument fails a zero precision check (based on your local applicable standards), resolve the issue referring to Section 7 **Zero Drift**.

5.7 Multipoint Precision Check

A multipoint precision check is used to determine the linear response of the instrument across its operating range. The instrument is supplied with span gas at multiple known concentrations, typically a zero point and at least four up-scale points, spread across the operating range of the instrument. The observed concentrations are compared to expected values and the linearity of the instrument assessed against local applicable standards.

Note: The instrument is inherently linear and the instrument gain should **not** be adjusted at each individual point. Non-linearity indicates a problem with the instrument (refer to Section 7). Ensure that the instrument has been running for at least one hour before any calibration is performed to ensure the instrument's stability.

Several methods for producing multiple known concentrations are available to use, such as connecting multiple certified bottles at different concentrations. However, Acoem Australasia strongly recommends the use of a dilution calibrator and a certified cylinder of SO₂ at an appropriate concentration (typically 40 - 100 ppm SO₂ balance in Nitrogen).

Procedure

1. Connect your calibration system to the **Calibration Port** of the instrument (Acoem Australasia recommends the Serinus Cal 1000 as a minimum, refer to Figure 109).
2. Generate and record the displayed span concentrations for (at least) 5 stepped points (of known concentrations) evenly spaced across the instrument measurement range (refer to the example below).
3. Then using a program such as MS Excel, create an X Y scatter plot of expected concentration versus the recorded instrument response and use linear regression to calculate the line of best fit and the correlation factor (R²) - refer to the users local applicable standards.

Example for an instrument measurement range of 500 ppb:

- a. For the 1st concentration, set the gas dilution calibrator to supply **400 ppb** SO₂ gas to the instrument.
- b. Allow the instrument to sample the calibration gas until a prolonged stable response is achieved (the amount of time this takes is impacted by the calibration setup) and record the instrument response.
- c. Repeat the above steps using concentrations of **300 ppb, 200 ppb, 100 ppb** and a **Zero** point.
- d. Graph the results and use linear regression to determine a pass or fail as per applicable local standards.

$$y = mx + c$$

Note: To highlight hysteresis errors, it is advisable to run the multipoint check in both *descending* and *ascending* order - refer to applicable local standards.

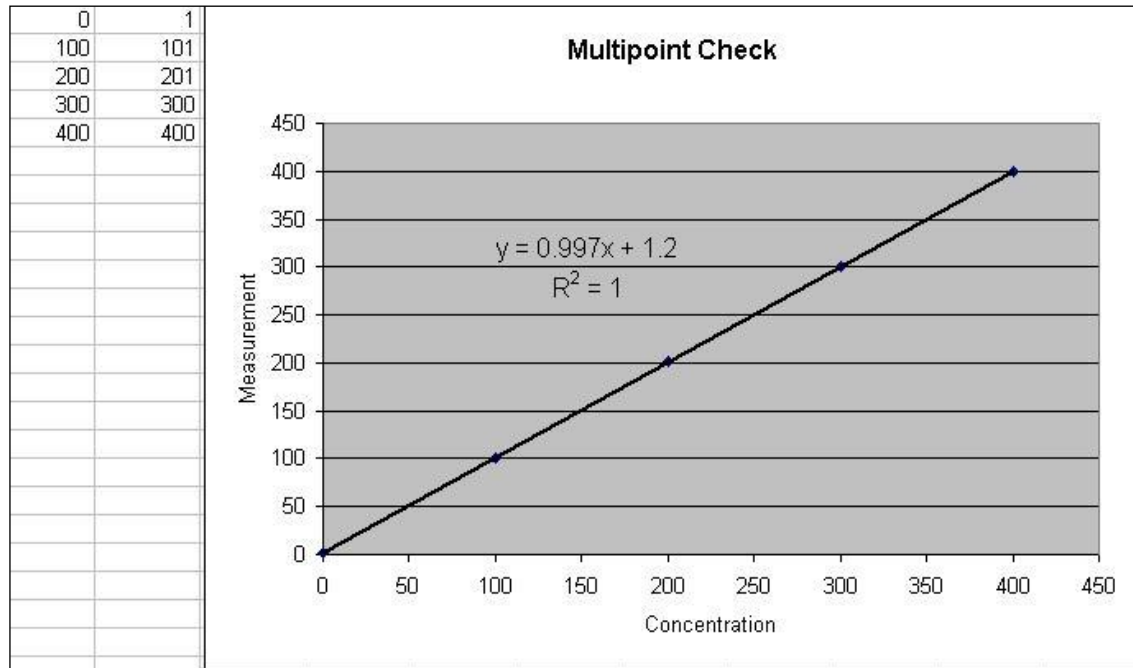


Figure 119 – Excel Graph of Multipoint Calibration

4. The following is a guide to approximate expected good results:
 - a. The gradient (m) falls between 0.98 and 1.02.
 - b. The intercept (b) lies between -2 and +2.
 - c. The correlation (R^2) is greater than 0.99.
5. If unsatisfactory results are observed refer to Section 7 - Troubleshooting.

5.8 Flow Calibration (Internal Pump Option Only)

This procedure calibrates the rate of the flow generated by the internal pump. The following procedure must be performed:

- After a service or repair.
- When the external flow check has found the flow to be outside normal range.
- When a new pump has been installed.
- When the instrument is reset to factory defaults.

Equipment Required

- Calibrated Flow Meter

Procedure

1. Disconnect any external tubing connected to the rear ports of the instrument (**Sample Port**, **Exhaust Port**, etc.).
2. Open - **Main Menu** → **Calibration Menu** → **Flow Calibration Menu**.

3. Select - **Pump Control** → **MANUAL** - Accept.

Note: This action will set the **Pump Control** to **Manual** and place the valve sequencing on hold; normal sampling will be interrupted.

4. OFF - **Internal Pump** → **Off**.
5. Wait for the **Sample Flow** to become stable around 0.0 slpm (± 0.01 slpm).
6. Set - **Cal. Zero** - Yes (Calibration of your zero point).
7. Connect a calibrated flow meter to the **Sample Port**.
8. ON - **Internal Pump** → **On**.
9. Edit the **Coarse** and **Fine** pots until the calibrated flow meter reads the desired instrument **Sample Flow** rate (**Set Point**).

Note: Edit the **Fine** pot to 253 then edit the **Coarse** to be as close as possible to desired reading and use **Fine** pot to make it exact.

10. Edit - **Cal. Point** - (Enter the reading from the flow meter) - Accept.
11. Select - **Pump Control** → **START** - Accept.
12. Leave for up to five minutes to return to normal operation. If instrument doesn't return to normal there may be a blockage (refer to Section 7).
13. Remove flow meter and reconnect external tubing.
14. Back - **Flow Calibration Menu** - (read note) - OK.

5.9 High Pressure Zero/Span Valve (Option)

If the instrument was ordered with this option, the internal pressurised calibration valves will already be installed within the instrument as either a zero or span calibration source, thus no other internal connections need to be made.

Note: Before using a high pressure span or zero as a source for calibrating the instrument, check the local regulatory requirements. This is generally only be used as an operational check of the instrument's zero point and single span point (recommended as 80% of full scale).

5.9.1 Single Pressurised Calibration Option

Set-Up of Single Calibration Option

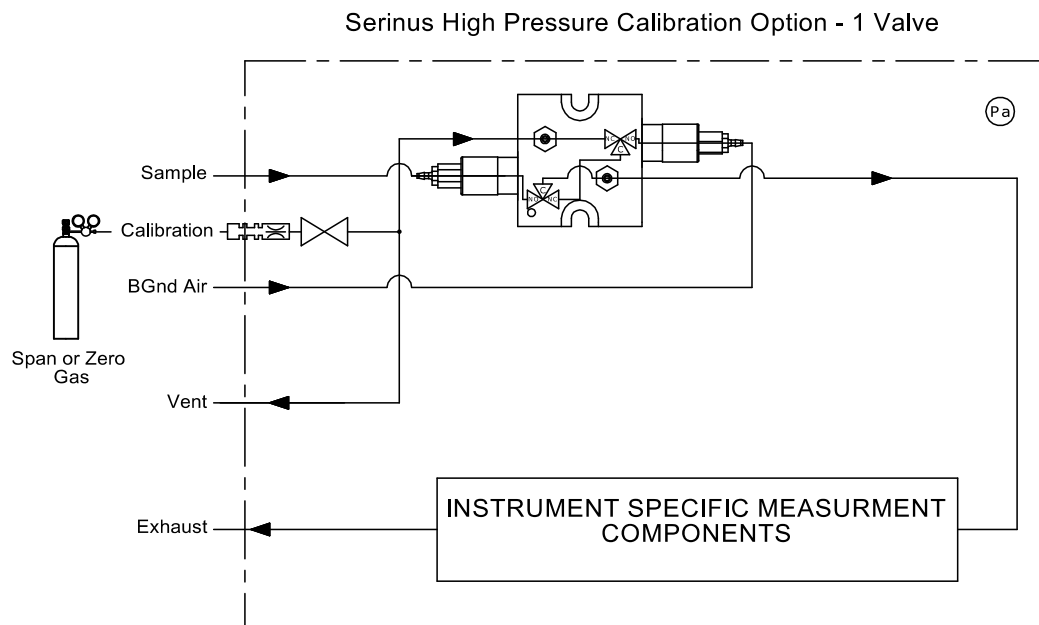


Figure 120 – Single High Pressure Calibration Option

When using the pressurised calibration option, either a high pressure zero or span cylinder (depending on the option ordered) should be connected to the **Calibration Port**.

Equipment Required

- Calibrated Flow Meter
- Gas Cylinder and Accessories

Procedure

1. Ensure the gas cylinder is fitted with an appropriate gas regulator with a shut off valve.
2. Connect a 1/4" line of stainless steel tubing between the gas cylinder and the instruments **Calibration** port.

Note: This connection may need to be retightened during this operation.

3. Open the cylinder main valve and adjust the regulator to 15 psig.
4. Open the regulator's shut off valve and test for leaks:
 - a. Pressurise the line.
 - b. Close the cylinder main valve.
 - c. If pressure drops by more than 2 PSI over five minutes, check the connections and retest.
 - d. Open cylinder main valve.

5. Temporarily place a flow meter on the **Vent Port**.
6. Open - **Main Menu → Calibration Menu**.
7. Select - **Cal. Type → Manual - Accept**.
8. Select - **Cal. Mode → Span or Zero** - Accept (Depending on the option installed).

Note: When using the high pressure zero option, ensure **Zero Source** is set to **External**.

9. Adjust the regulator pressure until the flow meter on the **Vent Port** is between 0.5 and 1 slpm. This is the excess calibration gas flow rate.

Note: Do not exceed a pressure of 2 bars, this can damage the instrument and cause gas leakage.

Return to Normal Operation

1. Select - **Cal. Mode → Measure** - Accept. (To return to sample measure).
2. Remove the flow meter on the **Vent Port** and connect a vent line.
3. Reconnect the instrument fittings and return to the original set-up.

The instrument is now in normal operation mode. When either zero or span calibration is initiated (depending on which option has been installed) the instrument will automatically open the valves to run a pressurised calibration.

5.9.2 Dual Pressurised Calibration Option

Set-Up of Dual Calibration Option

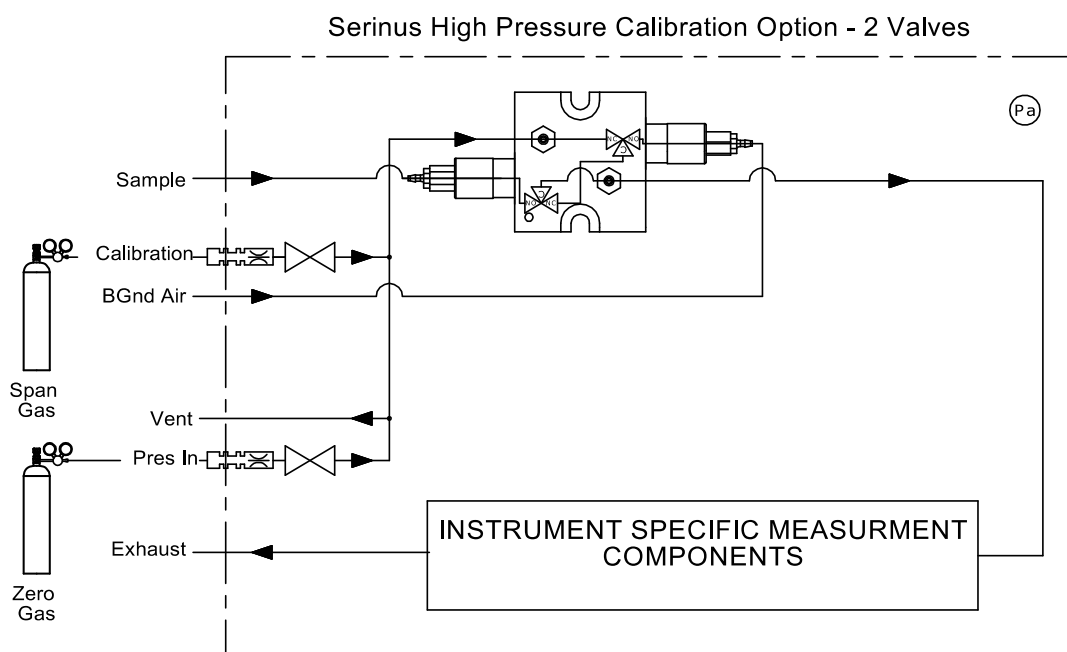


Figure 121 – Dual High Pressure Calibration Option

When using the dual pressurised calibration option, a high pressure zero cylinder should be connected to the **Pres In Port** and a high pressure span cylinder connected to the **Calibration** port.

Equipment Required

- Calibrated Flow Meter
- Gas Cylinder of Zero air and Accessories
- Gas Cylinder of SO₂ and Accessories

Procedure

1. Ensure the gas cylinder is fitted with an appropriate gas regulator with a shut off valve.
2. Connect a 1/4" line of stainless steel tubing between the appropriate gas cylinders and the instrument's **Pres In Port** and **Calibration** port.

Note: This connection may need to be retightened during this operation.

3. Open the cylinder main valve and adjust the regulator to 15 psig.
4. Open the regulator's shutoff valve and test for leaks:
 - a. Pressurise the line.
 - b. Close the cylinder main valve.
 - c. If pressure drops by more than 2 PSI over five minutes, check the connections and retest.
 - d. Open cylinder main valve.
5. Temporarily place a flow meter on the **Vent** port (This port is now used as the high pressure calibration vent for both span and zero).
6. Open - **Main Menu → Calibration Menu**.
7. **Select - Cal. Type → Manual - Accept.**
8. **Select - Cal. Mode → Zero - Accept.**

Note: When using the high pressure zero option, ensure **Zero Source** is set to **External**.

9. Adjust the regulator pressure until the flow meter on the vent line (**Vent**) is between 0.5 and 1 slpm. This is the excess calibration gas flow rate.

Note: Do not exceed a pressure of two bars, this can damage the instrument and cause gas leakage.

10. **Select - Cal. Mode → Span - Accept.**
11. Adjust the regulator pressure until the flow meter on the vent line (**Vent**) is between 0.5 and 1 slpm. This is the excess calibration gas flow rate.

Note: Do not exceed a pressure of two bars, this can damage the instrument and cause gas leakage.

Return to Normal Operation

1. Select - **Cal. Mode** → **Measure** - Accept. (To return to sample measure).
2. Remove the flow meter on the **Vent** port and connect a vent line.
3. Reconnect the instrument fittings and return to the original set-up.

The instrument is now in normal operation mode. When either zero or span calibration is initiated the instrument will automatically open the valves to run a pressurised calibration.

This page is intentionally blank.

6. Service

6.1 Additional Safety Requirements for Service Personnel

In addition to Safety Information stated previously, service personnel are also advised of the following:

- Documentation must be consulted in all cases where caution symbol is marked, in order to find out the nature of the potential hazards and any actions which have to be taken to avoid them. Refer to Table 1 – Internationally Recognised Symbols.
- Do not energise the instrument until all conductive cleaning liquids, used on internal components, are dried up
- Do not replace the detachable mains supply cord with an inadequately rated cord. Any mains supply cord that is used with the instrument must comply with the safety requirements (250 V/10 A minimum requirement).

6.2 Maintenance Tools

To perform general maintenance on the Serinus 50 the user may require the following equipment:

- | | |
|---|-----------------------|
| • Customizable Test Equipment Case | PN: H070301 |
| • Digital Multimeter & Leads (DMM) | PN: E031081 & E031082 |
| • Barometer | PN: E031080 |
| • Thermometer & Probe | PN: E031078 & E031079 |
| • Flow Meter (Select Range) | |
| Range: 50 - 5000 sccm | PN: ZBI-200-220M |
| • Minifit Extraction Tool | PN: T030001 |
| • Orifice/Sintered Filter Extraction Tool | PN: H010046 |
| • Leak Test Jig | PN: H050069 |
| • Computer/Laptop and Connection Cable for Diagnostic Tests | |
| • 1.5 mm Hex Key | |
| • Assortment of 1/4" and 1/8" Tubing and Fittings | |
| • Zero Air Source | |
| • Span Gas Source | |
| • General Hand Tools | |



Figure 122 – Minifit Extraction Tool - (PN: T030001)



Figure 123 – Orifice/Sintered Filter Removal Tool - (PN: H010046)



Figure 124 – Leak Test Jig - (PN: H050069)



Figure 125 – Air Monitoring Test Equipment Kit (AMTEK) - Customisable

6.3 Maintenance Schedule

The maintenance intervals are determined by compliance standards that differ in various regions. The following is recommended by Acoem Australasia as a guide. Compliance with local regulatory or international standards is the responsibility of the user.

Table 7 – Maintenance Schedule

| Interval * | Task Performed | Section |
|-------------------------------|---|--------------|
| Nightly or Every 5 days | Perform precision check (Automated) | 5.6 |
| | Perform precision check (Manual) (This task is performed to ensure a high data capture rate) | |
| Monthly | Perform precision check (pre-check) prior to commencing any service tasks or making any changes to the system as found in its current state. This task is necessary to validate any previously captured data. | 5.6 |
| | Check particulate filter, replace if full/dirty | 6.4.1 |
| | Perform a pressure check | 6.4.10 |
| | Check sample inlet system for moisture or foreign materials. Clean if necessary | |
| | Check fan filter and clean if necessary | 6.4.2 |
| | Check event log | 3.4.1 |
| | Check date and time is correct | 3.4.8 |
| | Check instrument status light | 3.3.1 |
| | External vacuum pump check (vacuum source) | |
| | leak check | 6.4.4 |
| | Perform SO ₂ span calibration | 5.5 |
| | Perform precision check (post-check) once all service tasks have been completed. This task is necessary to establish a valid start point to begin capturing new data. | 5.6 |
| 6 Monthly | Replace the PMT Desiccant Packs | 6.4.5 |
| | Perform multipoint precision check | 5.7 |
| | Calibrate analog outputs (only if used) | 3.4.26 |
| | Check the zero air scrubbers, replace if saturated | 6.4.6 |
| | Check the UV lamp alignment, replace if necessary | 6.4.8 |
| Yearly | Replace DFU | 6.4.3 |
| | Replace sintered filter and orifice (only if necessary) | 6.4.7 & 9.11 |

* Suggested intervals for maintenance procedure are a guide only and may vary with sampling intensity and/or environmental conditions. Refer to your local regulatory standard for your personalised maintenance schedule.

6.4 Maintenance Procedures

6.4.1 Particulate Filter Replacement

Contamination of the 5-micron filter can result in degraded performance of the instrument, including slow response time, erroneous readings, temperature drift and various other problems. The frequency which the filter needs to be replaced is heavily dependent on the environmental conditions the instrument is sampling.

Procedure

1. Turn OFF the external pump and allow the instrument to return to ambient.
2. Open the lid of the instrument to access the sample filter holder (located in front right-hand corner).
3. Refer to Figure 126. Loosen the compression nut and pull-out the tube from the fitting.

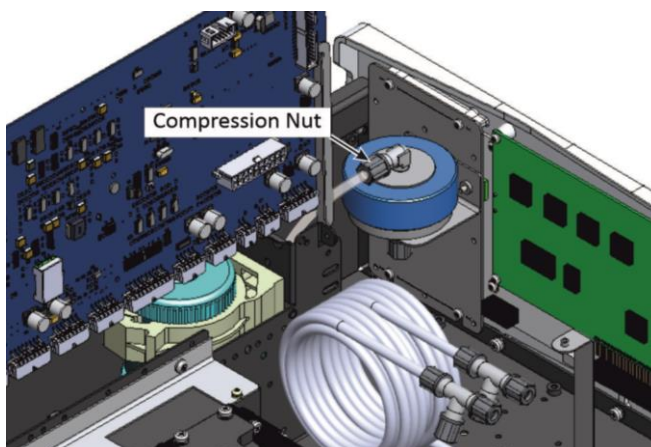


Figure 126 – Remove Tubing

4. Refer to Figure 127. Remove the retaining ring by turning it counter-clockwise.

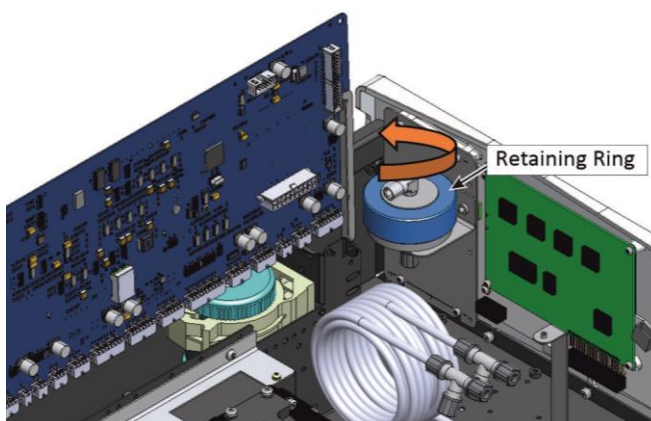


Figure 127 – Remove Retaining Ring

5. Refer to Figure 128. Remove the sample filter holder sealing cap.

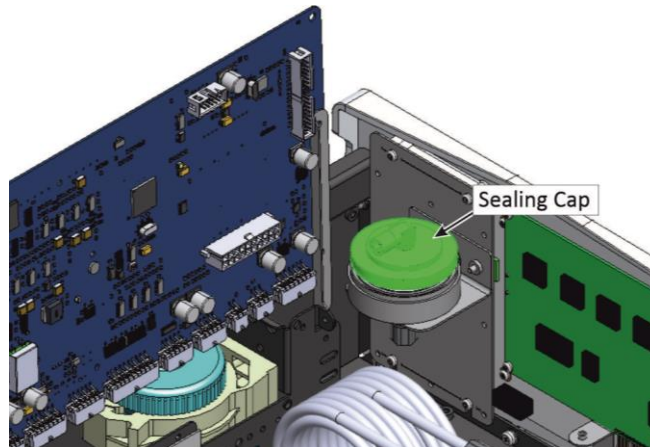


Figure 128 – Remove Filter Sealing Cap

6. Refer to Figure 129. Remove the old particulate filter.

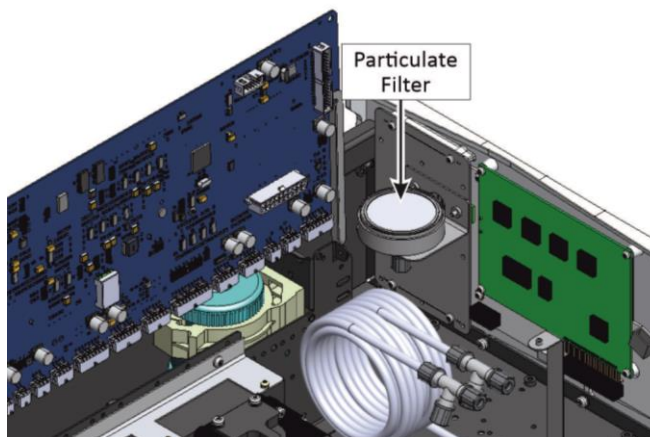


Figure 129 – Particulate Filter

7. If the inner surface of the sample filter components are dirty, then clean with damp lint free paper towel.
8. Place a new particulate filter paper into the body of the sample filter holder.

Note: Make sure filter body is completely dry before placing the new filter.

Note: Avoid to touch Particulate filter paper by hand use blue paper to place the filter into filter body.

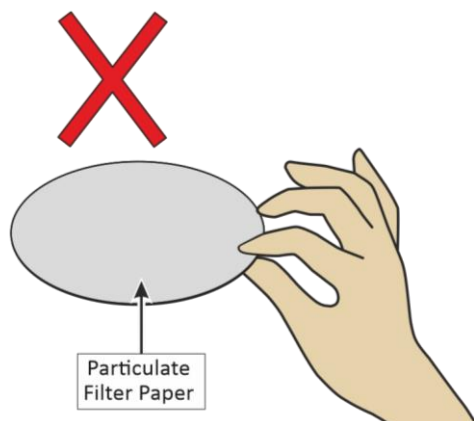


Figure 130 – Avoid to Touching Particulate Filter Paper

9. Replace the sample filter holder sealing cap and re-assembly the retaining ring by turning it clockwise.

Note: Make sure O-ring and particulate filter paper are installed correctly

Note: Make sure that Elbow Fitting is in the right direction, refer to Figure 131.

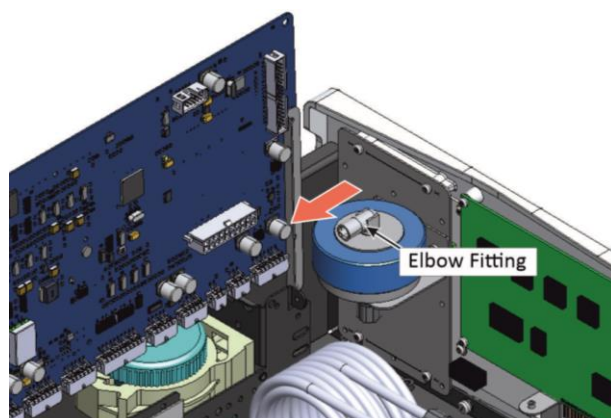


Figure 131 – Elbow Fitting Direction

10. Refer to Figure 132. Reconnect the compression nut and tubing to the elbow fitting.

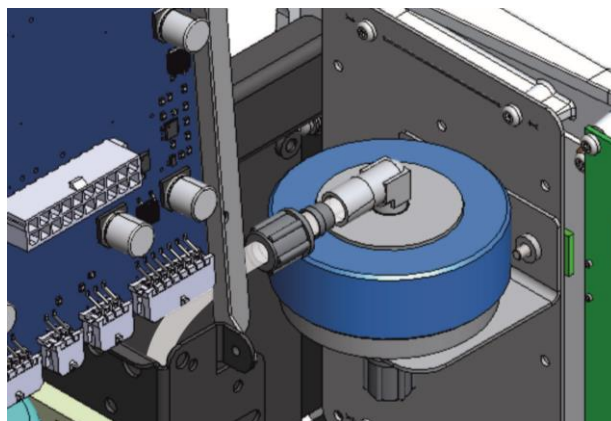


Figure 132 – Reconnect the Compression Nut and Tubing

11. Close the lid of the instrument and perform a leak check (refer to Section 6.4.4).

6.4.2 Clean Chassis Fan Filter

The chassis fan filter is located on the rear of the instrument. If this filter becomes contaminated with dust and dirt it may affect the cooling capacity of the instrument.



CAUTION

Do not insert a rod or finger into the cooling fans, otherwise injury may result.

Procedure

1. Refer to Figure 133. Remove outer filter casing and filter.

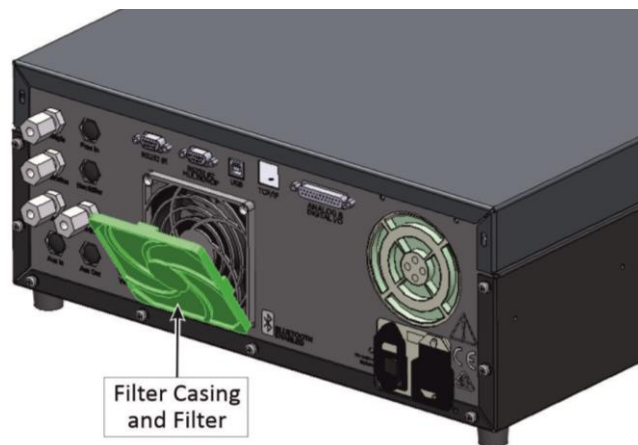


Figure 133 – Remove Filter Casing and Filter

2. Clean filter with water and dry it.

Note: Do not install the filter until completely dry, a wet filter can damage the instrument.

3. Reinstall filter and filter casing.

6.4.3 DFU Replacement

Equipment Required

- 5/8" Spanner

Procedure

1. Turn OFF the external pump and allow the instrument to return to ambient.
2. Remove the Kynar nuts from both ends of the DFU by turning them counter-clockwise.

3. Remove and replace the DFU (refer to Figure 134 left hand side of the DFU in the image should connect to the fitting at the bottom of the zero air scrubber).



Figure 134 – DFU

4. Tighten the Kynar nut clockwise.

6.4.4 Leak Check

Equipment Required

- Source of Vacuum (Pump)
- Leak Test Jig (PN: H050069)
- Kynar 1/4" Blocker Nuts
- Tubing and Assorted Fittings
- 5/8" Spanner
- 9/16" Spanner
- 7/16" Spanner

Procedure

Note: Ensure that the instrument has been running for at least one hour before this procedure is performed.

1. Turn OFF the vacuum source and allow the instrument to return to ambient pressure.
2. Disconnect all external tubing connected to the rear ports of the instrument.
3. Refer to Figure 135. Connect a leak check jig to the Exhaust Port of the instrument.

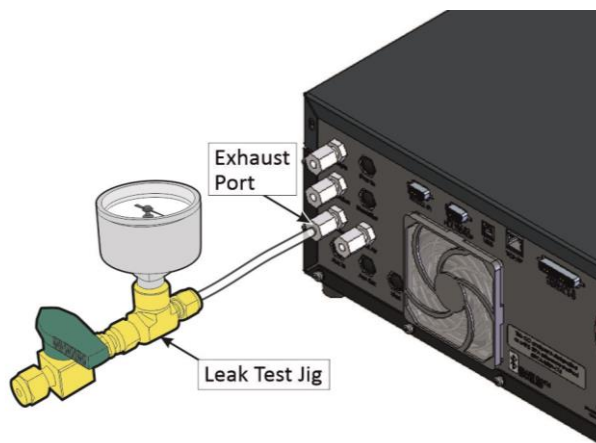


Figure 135 – Leak Test Jig on Exhaust Port

4. Refer to Figure 136. Connect a vacuum source to the shut off valve ensuring the shut off valve is in the open position.

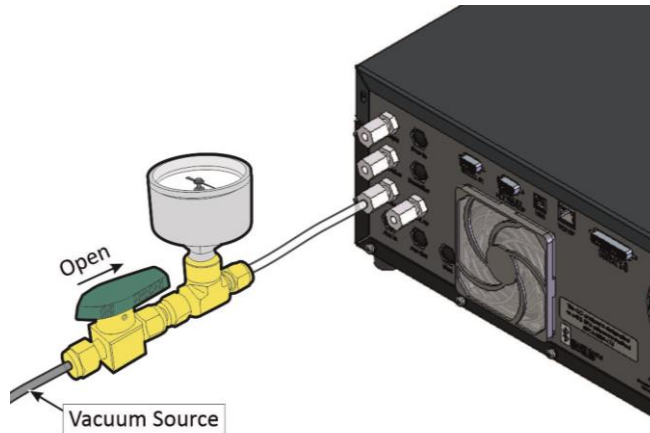


Figure 136 – Connect Vacuum Source

5. Refer to Figure 137. Block the instrument's **BGnd Air Port** with Kynar 1/4" blocker nut.

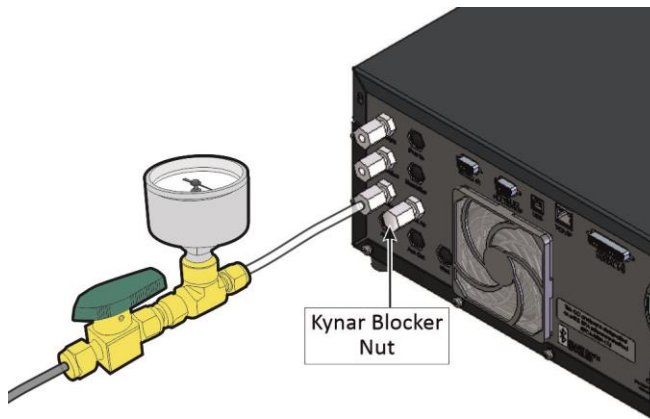


Figure 137 – Blocker BGnd Air Port

6. Open - **Main Menu → Service Menu → Diagnostics Menu → Valve Menu.**
7. Disable - **Valve Sequencing → Disabled.**
8. On - **Sample/Cal → On**
9. Off - **Internal Zero/Cal → Off.**
10. Off - **Pressurized Zero (OPT) → Off.**
11. Off - **Pressurized Span (OPT) → Off.**
12. Allow the instrument time to evacuate the pneumatic system (the time required will depend on the vacuum source used).
13. Close the shut off valve and record the vacuum indicated on the leak test jig. Wait for three minutes and observe the gauge on the leak test jig. It should not drop more than 5 kpa (37.5 torr). If the leak check passed skip to step 17.

14. Inspect the instrument's plumbing looking for obvious damage. Check the condition of fittings, sample filter holder plus the O-rings both in the filter assembly and in the reaction cell assembly.
15. When the location of the leak has been determined, repair and re-run the leak check procedure.
16. If the leak is still present divide up the pneumatic system into discrete sections to locate the leak (refer to Section 9.5). When the location of the leak has been determined repair and then re-run the leak check procedure.
17. Slowly remove the blocker nut on the **BGnd Air Port**.
18. Allow the gauge to return to ambient. Inspect the internal tubing to ensuring that the tubing is cleanly connected to the fittings.
19. Remove the leak check jig.
20. Open - **Main Menu → Service Menu → Diagnostics Menu → Valve Menu**.
21. Enable - **Valve Sequencing → Enabled**.

Note: In this leak check procedure we have not checked the **Sample** and **Calibration** line.

6.4.4.1 Leak Check (Internal Pump Option)

Equipment Required

- Barometer
- Kynar 1/4" Blocker Nuts
- 5/8" Spanner
- 9/16" Spanner
- 7/16" Spanner

Procedure

Note: Ensure that the instrument has been running for at least one hour before this procedure is performed.

1. Disconnect all external tubing connected to the rear ports of the instrument.
2. Open - **Main Menu → Service Menu → Diagnostics Menu → Internal Pump Menu**.
3. Select - **Pump Control → Manual** - Accept.
4. Edit - **Coarse** - (set to 240) - Accept.
5. Edit - **Fine** - (set to 255) - Accept.
6. Open - **Main Menu → Service Menu → Diagnostics Menu → Valve Menu**.
7. Disable - **Valve Sequencing → Disabled**.
8. Off - **Sample/Cal → Off**.
9. Off - **Internal Zero/Cal → Off**.
10. Off - **Pressurized Zero (OPT) → Off**.
11. Off - **Pressurized Span (OPT) → Off**.

12. Refer to Figure 138. Locate the bypass DFU inside the chassis, between the PMT fan assembly and the dump, and block the DFU inlet.

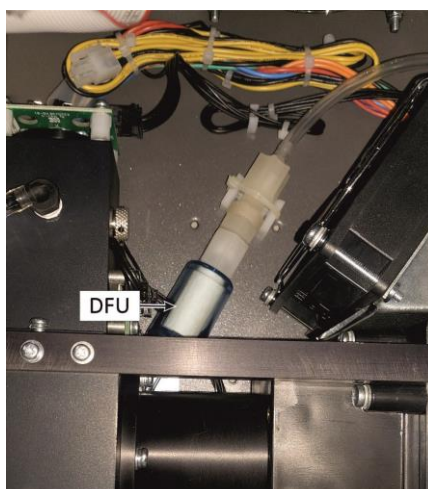


Figure 138 – Bypass DFU

13. Connect the barometer to **Sample Port**.
14. Allow the internal pump to time to evacuate the pneumatic system (the time required will depend on the condition of the pump 1 - 2 minutes).
15. Turn the manual stop valve 90° (Close).
16. Open - **Main Menu → Service Menu → Diagnostics Menu → Internal Pump Menu**.
17. Toggle Off - **Internal Pump → Off**.
18. Note the value on the barometer. Wait for three minutes, the value should not increase more than 5 kpa (37.5 torr). If the leak check passed skip to step 22.
19. Inspect the instrument's plumbing looking for obvious damage. Check the condition of fittings, sample filter holder plus the O-rings both in the filter assembly and in the reaction cell assembly.
20. When the location of the leak has been determined, repair and re-run the leak check procedure.
21. If the leak is still present divide up the pneumatic system into discrete sections to locate the leak (refer to Section 9.6). When the location of the leak has been determined repair and then rerun the leak check procedure.
22. Slowly remove the barometer from the **Sample Port** and allow the instrument to return to ambient.
23. Remove the blocker from the bypass DFU.
24. Turn the manual stop valve 90° (Open).
25. Open - **Main Menu → Service Menu → Diagnostics Menu → Valve Menu**.
26. Enable - **Valve Sequencing → Enabled**.
27. Open - **Main Menu → Service Menu → Diagnostics Menu → Internal Pump Menu**.
28. Select - **Pump Control → START** - Accept.

Note: In this leak check procedure we have not checked the **BGnd Air** and **Calibration** line.

6.4.5 Replacing the PMT Desiccant Packs

The PMT housing contains two desiccant packs to prevent condensation on the PMT cold block. If the desiccant expires it will result in premature cooler failure. It is recommended that the desiccant bags be changed at least annually. If moisture is detected inside the housing or the desiccant packs are saturated the interval should be reduced. To change the desiccant packs follow the instructions below:



CAUTION

Because the PMT is extremely sensitive to light, it is essential that before opening the PMT assembly to make sure that the instrument is switched OFF. In addition, even when the instrument is switched OFF it is very important to cover the PMT at all times so that no direct light reaches its window.

Equipment Required

- Phillips Head Screwdriver
- New Desiccant Packs
- Tweezers

Procedure

1. Turn the instrument OFF and disconnect the power. Wait 15 min for the cold block to warm up.

Note: The amount of time required for the cold block to warm up will need to be increased in humid environments as the dew point will be at a higher temperature. Check and take into consideration your local dew point before proceeding.

2. Refer to Figure 139. Using an Phillips head screwdriver, remove the desiccant pack access cap from the PMT housing.

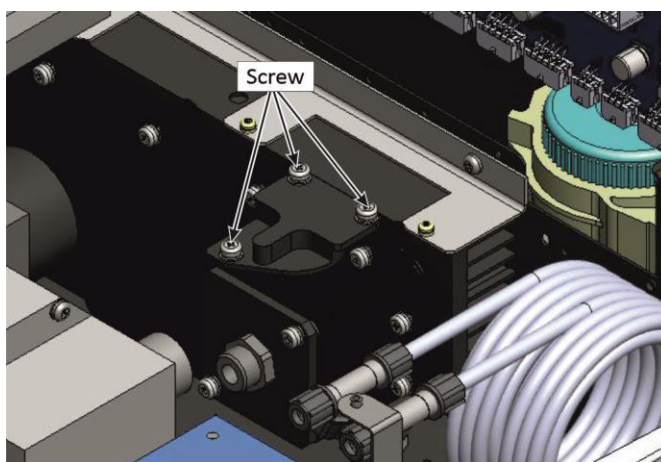


Figure 139 – Remove Desiccant Access Cap

3. Remove the old desiccant packs and replace with new ones. Do not attempt to dry and reuse the old packs.
4. Inspect the inside of the PMT housing (by touch or with an inspection mirror) to check for moisture inside the housing. If moisture is detected inside the housing or the desiccant packs are saturated, the desiccant packs should be replaced more frequently.

5. Reinstall the desiccant cap by gently twisting and pressing the cap back into the PMT housing. It may help to apply a small amount of lubricant to the O-ring on the desiccant cap. Secure with two screws.

**CAUTION**

Do not attempt to use the fastening screws to push the desiccant cap in place in the PMT housing. This will damage the O-ring.

6. Reconnect power and restart the instrument.

Note: Removal of the desiccant access cap may be easier if the Rx cell/PMT housing is removed from the instrument.

6.4.6 Replace Zero Air Scrubber

Equipment Required

- Flat Screwdriver

Procedure

1. Turn OFF the external pump and allow the instrument to return to ambient.
2. Open the lid of the instrument.
3. Refer to Figure 140. Loosen the compression nut and remove the tubing from the fitting on top of the scrubber.

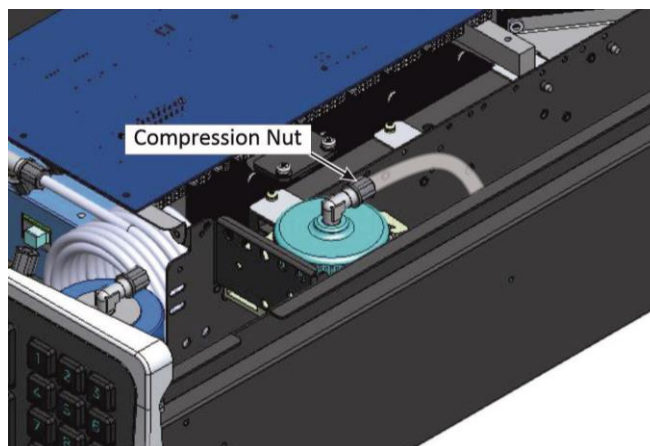


Figure 140 – Remove the Tubing

4. Refer to Figure 141. Remove the Kynar nut and pull-out the DFU from the fitting below the scrubber.

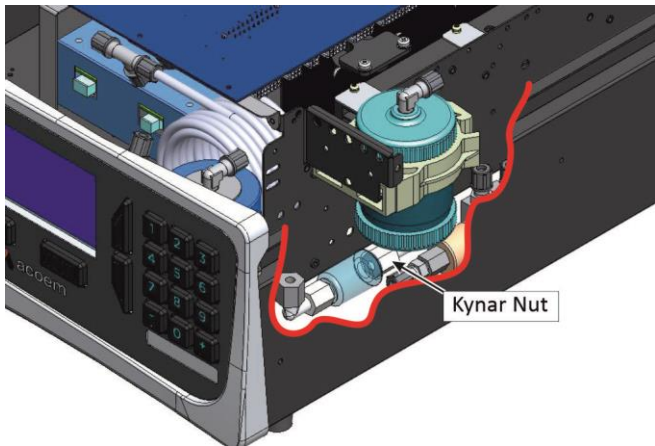


Figure 141 – Pull-out the DFU

5. Refer to Figure 142. Open the scrubber holder with a screwdriver.



Figure 142 – Zero Scrubber Removal

6. Replace the zero air scrubber.
7. Perform a leak check (refer to Section 6.4.4).
8. Perform a manual background (refer to Section 5.3).
9. Perform a zero and span calibration (refer to Section 5.4 and Section 5.5).

Table 8 – Zero Air Scrubber Replacement Frequency

| Average SO ₂ Concentration | Charcoal Replacement Frequency |
|---------------------------------------|--------------------------------|
| 0 - 30 ppb | 12 Months |
| 30 - 100 ppb | 6 Months |
| > 100 ppb | 1 Month |

6.4.7 Orifice Replacement

Equipment Required

- Orifice Removal Tool (PN: H010046)
- Teflon Tape
- 5/8" Spanner

Procedure

1. Turn OFF the external pump and allow the instrument to return to ambient.
2. Turn OFF the instrument and disconnect the pump.
3. Refer to Figure 143. Disconnect the tubing from the tee fitting on top of the dump of the reaction cell. Disconnect the tubing from the dump tee fitting on top of the dump.

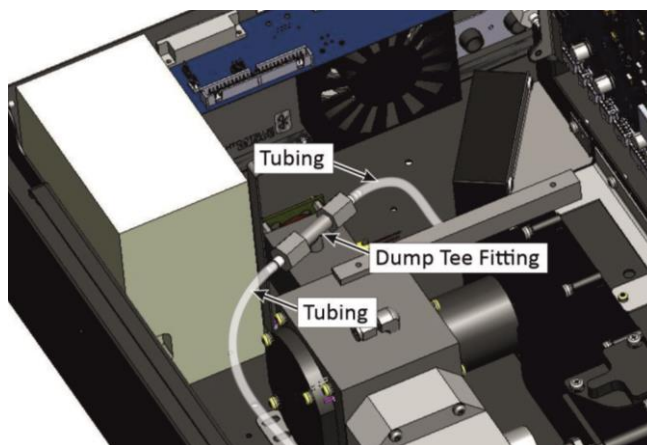


Figure 143 – Reaction Cell Tee Fitting

4. Remove the Kynar nuts to access the tee fitting.
5. Remove the tee fitting from the dump by turning it counter-clockwise.
6. Remove both the orifice by screwing in the orifice removal tool (finer thread end) clockwise, then gently pull the orifice out of the tee fitting.
7. The orifices may be exchanged with new ones or cleaned as needed.
8. Refer to Figure 144. Replace the orifice(s) in the correct part of the Tee fitting (#12 in the bottom of the tee fitting and #20 in the side).

Note: The orifice number is stamped on the base of the orifice.

Note: Do not insert the Orifice too far into the fitting (i.e. not past the top thread of the Kynar fitting).

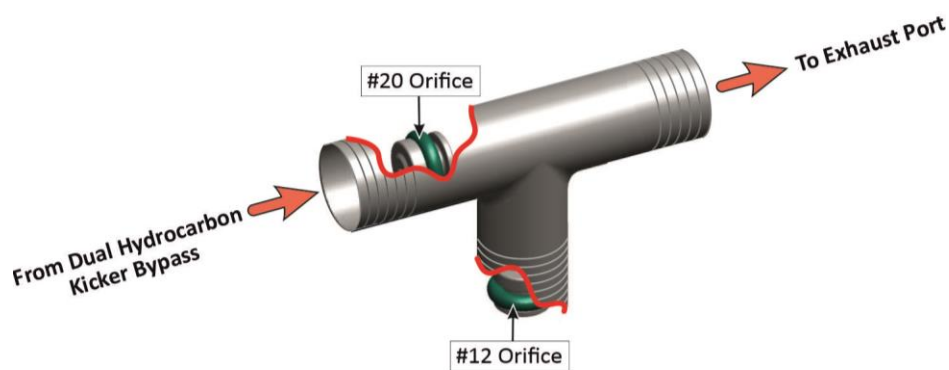


Figure 144 – Orifice Location

9. Apply Teflon tape to the thread of the tee fitting and replace it in the dump by turning it clockwise.
10. Replace the Kynar nuts to each end of the tee fitting.
11. Power up the instrument and allow it to complete the warm-up sequence.
12. Perform a leak test (refer to Section 6.4.4).
13. Reconnect the external pump and perform a flow check.
14. Perform a manual background (refer to Section 5.3).
15. Perform zero and span calibrations (refer to Section 5.4 and Section 5.5).

6.4.8 UV Lamp Replacement

Proper operation of the UV lamp is essential to the Serinus 50. The UV lamp should be checked every six months to ensure it is operating within acceptable parameters and may require realignment or replacement to maintain sufficient UV light for instrument operation. The UV lamp will need to be adjusted only when the **Ref. Gain Pot** goes above 100 or below 5. Following are procedures to check align and replace the UV lamp assembly.



CAUTION

Acoem Australasia recommends the use of UV protective glasses when adjusting the UV lamp.



CAUTION

The Lamp Driver PCA can generate in excess of 1000 volts. Exercise extreme care when working in the vicinity of the Lamp Driver.



CAUTION

If the UV lamp is adjusted, the instrument will require recalibration.

Equipment Required

- UV Protective Glasses

Procedure

1. Turn OFF the external pump and allow the instrument to return to ambient.
2. Refer to Figure 145. Loosen the collets at each end of the lamp.

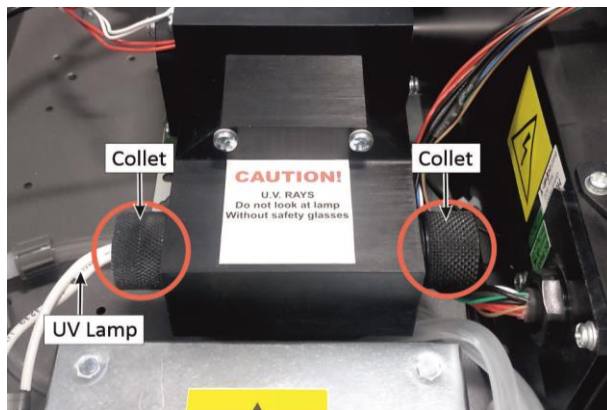


Figure 145 – Collets of the UV Lamp

3. Pull-out the UV lamp and carefully replace it with the new UV lamp.
4. Align the UV lamp, refer to Section 6.4.8.1.

6.4.8.1

UV Lamp Alignment



CAUTION

Acoem Australasia recommends the use of UV protective glasses when adjusting the UV lamp.



CAUTION

The Lamp Driver PCA can generate in excess of 1000 volts. Exercise extreme care when working in the vicinity of the Lamp Driver.



CAUTION

If the UV lamp is adjusted, the instrument will require recalibration.

Equipment Required

- Oscilloscope
- UV Protective Glasses

Procedure

1. Turn the instrument ON and allow the UV lamp to warm-up and stabilise (about 30 minutes).
2. Refer to Figure 146. Connect an oscilloscope to TP19 (SO2REFX2) and TP1 (AGND) on top of the main controller PCA.

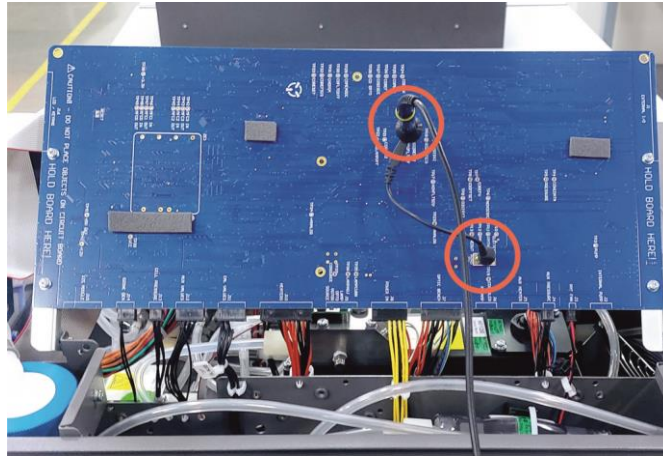


Figure 146 – Connect Oscilloscope

3. Adjust the oscilloscope for 0.5 V/division and 20 msec/division.
4. Refer to Figure 147. Loosen the collets (do not remove) at each end of the lamp.

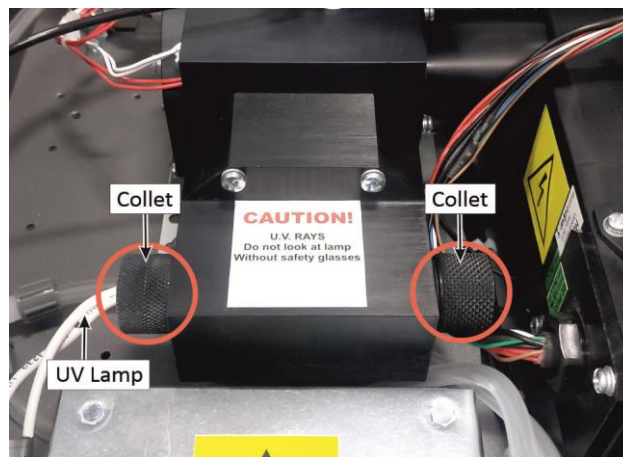


Figure 147 – Collets of the UV Lamp



CAUTION

The UV lamp can be damaged if an adjustment is attempted without loosening the collets.

5. Physically adjust the UV lamp (rotate and move left and right) until the maximum peak voltage on the oscilloscope is obtained. The minimum usable output from the lamp is approximately 0.8 volts amplitude (peak to peak). If the UV lamp output is below 1.0 volts, replacement should be considered.
6. Tighten the UV lamp collets and verify the UV lamp has remained at its previously adjusted position.
7. Reset the instrument and allow it to run a warm-up sequence.
8. Perform zero and span calibrations (refer to Section 5.4 and Section 5.5).

6.4.9 Clean Pneumatics

The calibration valve manifold will require disassembling and cleaning. Ideally the valves and the manifold should be cleaned in a sonic bath with lab detergent and water. Once clean, rinse with distilled water and dry with clean dry oil free air before reassembling (refer to Section 9.16 and Section 9.18). A leak test should be performed once the instrument is ready for operation (refer to Section 6.4.4).

If the tubing shows signs of significant contamination, it should be replaced with new tubing (refer to Section 9.3 for tubing part number and Section 9.5 for tubing lengths).

6.4.10 Pressure Sensor Check

Pressure checks are needed to ensure that the pressure sensor is accurately measuring pressure inside the instrument.

During normal operation ensure that the **Pressure & Flow Menu** indicate the following parameters. Ambient should display the current ambient pressure at site. Cell should indicate current cell pressure. Depending on the pump condition and location, a value of between 30 - 40 torr below ambient pressure is recommended.

Equipment Required

- Barometer
- Digital Multimeter (DMM)

Procedure

1. Open - **Main Menu → Analyser State Menu → Pressure & Flow Menu.**
2. Turn OFF the vacuum pump and allow the instrument to return to ambient.
3. Disconnect all external tubing connected to the rear ports of the instrument.
4. After two - five minutes observe the pressure readings: ambient and cell. Ensure that they are reading the same ± 3 torr (± 0.4 kPa).
5. If the readings are outside this level, perform a pressure calibration (refer to Section 5.2.2).

If the calibration fails the instrument may have a hardware fault. The cell pressure PCA has test points. To determine if the pressure sensor is faulty simply measure the voltage on the test points, refer to Figure 148 and Figure 149. The voltage measured across the test point is proportional to the pressure measured by the sensor so if the sensor is exposed to ambient pressure at sea level the voltage will be around 4 volts but if the sensor is under vacuum the voltage will be low (e.g. 0.5 volts). If the test point measures zero or negative voltage the assembly is most likely faulty and will need to be replaced.



Figure 148 – Test Point Location

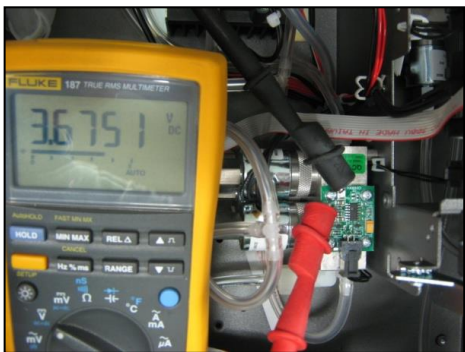


Figure 149 – Typical Test Point Reading of Cell Pressure Sensor

6.5 Bootloader

The Serinus Bootloader is the initial set of operations that the instruments’ microprocessor performs when first powered up (similar to the BIOS found in a personal computer). This occurs every time the instrument is powered up or during instrument resets. Once the instrument boots up, it will automatically load the instruments’ firmware. A service technician may need to enter the Bootloader to perform advanced microprocessor functions as described below.

To enter the Bootloader turn OFF the power to the instrument. Press and hold the plus key while turning the power ON. Hold the Plus key until the following screen appears.

Gas Analyser / Calibrator

V3.4.0 Bootloader

Press ‘1’ to enter Bootloader

If the instrument displays the normal start up screen, the power will need to be toggled and another attempt will need to be made to enter the Bootloader. Once successful, press 1 to enter the **Bootloader Menu**.

6.5.1 Display Help Screen

Once in the Bootloader screen it is possible to redisplay the help screen by pressing 1 on the keypad.

6.5.2 Communications Port Test

This test is very useful for fault finding communication issues. It allows a communication test to be carried out independent to any user settings or firmware revisions.

This command forces the following communication ports to output a string of characters: Serial Port RS232 #1, USB rear and Ethernet Port. The default baud rate is 38400 for the RS232 Serial Port. To initiate the test press the number 2 key from the Bootloader screen.

6.5.3 Updating Firmware

It is important for optimal performance of the instrument that the latest firmware is loaded. The latest firmware can be obtained by visiting Acoem Australasia's website:

<http://www.ecotech.com/downloads/firmware>

Or by emailing Acoem Australasia at service@ecotech.com or support@ecotech.com.

To update the firmware from a USB memory stick, use the following procedure:

Procedure

1. Turn the instrument OFF.
2. Place the USB memory stick with the new firmware (ensure that firmware is placed in a folder called FIRMWARE) in the front panel USB Port.
3. Enter the Bootloader (refer to Section 6.5).
4. Select option 3 (upgrade from USB memory stick), press 3 on the keypad.
5. Wait until the upgrade has completed.
6. Press 9 on the keypad to start the instrument with new firmware.

6.5.4 Erase All Settings

This command is only required if the instrument's firmware has become unstable due to corrupted settings. To execute this command enter the **Bootloader Menu** (refer to Section 6.5) and press 4 on the keypad.

6.5.5 Start Analyser

The start analyser command will simply initiate a firmware load by pressing 9 on the keypad from the **Bootloader Menu**. It is generally used after a firmware upgrade.

This page is intentionally blank.

7. Troubleshooting

Before troubleshooting any specific issues, Acoem Australasia recommends ensuring the instrument has successfully completed its warm-up routine and resolving all issues listed in the instrument status menu (refer to Section 3.4.4).

Table 9 – Common Errors and Troubleshooting

| Error Message/Problem | Cause | Solution |
|-------------------------|-----------------------------------|--|
| Flow fault | Multiple possibilities | Refer to Section 7.1. |
| | Pump failed | Replace the internal or external pump. |
| | Blocked filter or orifice | Replace particulate filter or orifice (refer to Section 6.4.1 or 6.4.7). |
| | Pressurised reaction cell | Ensure sample and zero inlets are maintained at ambient pressure. Ensure that the vacuum pump is connected correctly. |
| | Pressure sensors | Check pressure voltages displayed in pressure calibration menu both the ambient and cell voltage should equal 4 volts \pm 0.5 (at sea level). Perform a pressure calibration (refer to Section 5.2). |
| Noisy/unstable readings | Multiple possibilities | Refer to Section 7.2. |
| | Calibration system error | Ensure calibration system is functioning correctly and is leak free. Ensure sufficient gas is available for instrument and an adequate vent is available for excess gas. |
| | Leaks | A leak in the instrument or calibration system dilutes the sample stream and causes low span readings and noise. |
| | Lamp not correctly positioned | Adjust the UV lamp. If you are unable to obtain an acceptable reading, replace the lamp (refer to Section 6.4.8). |
| | TE cooler or Reaction cell heater | A failed temperature control allows the instrument to drift with ambient temperature. Verify that the cell temperature is 50 °C \pm 3 and that the TE cooler is 13 °C \pm 2. |
| | Hardware fault | Faulty measurement cell component. |
| | Gain too high | Leak check (repair any leaks refer to Section 6.4.4). UV lamp filter in reaction cell deteriorated - replace. PMT voltage too low less than 700 V. UV lamp requires replacing (refer to Section 6.4.8). |

| | | |
|--|--|--|
| | PMT temperature too high (> 15 °C) | Check PMT fan is operating. Check chassis temperature is < 48 °C. Check PMT cooler is operational and correct amount of thermal paste is applied. |
| | Reference gain digital potentiometer out of normal range | Check value in menu (refer to Section 3.4.15). If out of normal range, replace UV lamp and/or UV lamp filter. |
| Electronic zero adjust | Faulty zero air or contaminated cell/pneumatics | Refer to Section 7.3. |
| Cell temperature failure | Faulty heater or temperature sensor | Refer to Section 7.4. |
| Instrument resetting | Multiple possibilities | Check that the instrument is not overheating. Possibly a faulty power supply. Electrical issue component shorted to ground. Corrupted firmware, perform an ' Erases all settings ' in the Bootloader Menu and reload or upgrades firmware (refer to Section 6.5.4). |
| 12 Voltage supply failure | Power supply has failed | Replace power supply. |
| No display | AC power | Verify that the mains power cable is connected and the rear power supply fan is operating. |
| | Contrast misadjusted | Adjust the display contrast by pressing one of two keys on the front panel: Press Up arrow (▲) for darker contrast Press Down arrow (▼) for lighter contrast Note: Must be in the home screen |
| | DC power | Verify that the power supply is providing the correct DC voltages: +12 V (TP34), -12 V (TP23) & +5 V (TP39) DC. |
| | Display | Check the interface cable between the display and the main controller PCA (J16) |
| | Bad display or Main controller PCA | Replace the front panel display Replace the main controller PCA. Bad cables are unlikely, but if you suspect it, perform a pin-for-pin continuity test using an ohmmeter. |
| Sample pressure too high or low | Loss of pressure calibration | Perform a pressure calibration (refer to Section 5.2). Ensure particulate filter has been recently changed. Ensure tubing is not kinked or blocked. Ensure vacuum pump is correctly installed and operating. |
| Sample flow not equal to 0.75 slpm (External pump model) | Multiple possibilities | Check/replace sample filter. Check pump. |

| | | |
|------------------------------------|---------------------------|---|
| | | Check valves. Check/replace orifice. Re-calibrate pressure sensors. |
| Unstable flow or pressure readings | Faulty pressure sensors | Check pressure transducer calibration. Check calibration valve assembly is functioning and not blocked. If unable to diagnose problem, check voltage across TP1 and TP2 of pressure PCA ensure it is about 3.5 volts \pm 0.3 volts. If unable to diagnose problem, it may be a noisy A/D converter, replace main controller PCA. |
| Low span | Leaks | A leak in the instrument or calibration system dilutes the sample stream and causes low span readings and noise. |
| | Span calibration out | Adjust the span using the calibration procedure (refer to Section 5.5). |
| | Faulty lamp | Replace UV lamp (refer to Section 6.4.8). |
| No response to span gas | Leaks/blockages | Leak or blockages in tubes or valves. Perform leak check and flow check and repair any leaks/blockages. |
| | Faulty calibration source | Ensure calibration gas is plumbed correctly, is not contaminated, has no leaks and is a certified reference gas. |
| Zero drift | Poor temperature control | Ensure instrument is operated in a temperature controlled environment with the lid on. |
| | Charcoal contaminated | Replace the charcoal in the scrubber feeding the background port. |
| | Faulty zero air | Ensure zero air sources have been maintained. |
| | Leak | Perform leak test. |
| Negative response | Internal scrubber | Charcoal scrubber contaminated. Replace charcoal and preform a leak check (refer to Section 6.4.4). |
| Input pot limited to 0 or 255 | Damaged lamp | Check that lamp current is 35 mA. If it is not 35 mA replace the Lamp driver PCA. If the pot is still 255, replace UV lamp. |

7.1 Flow Fault

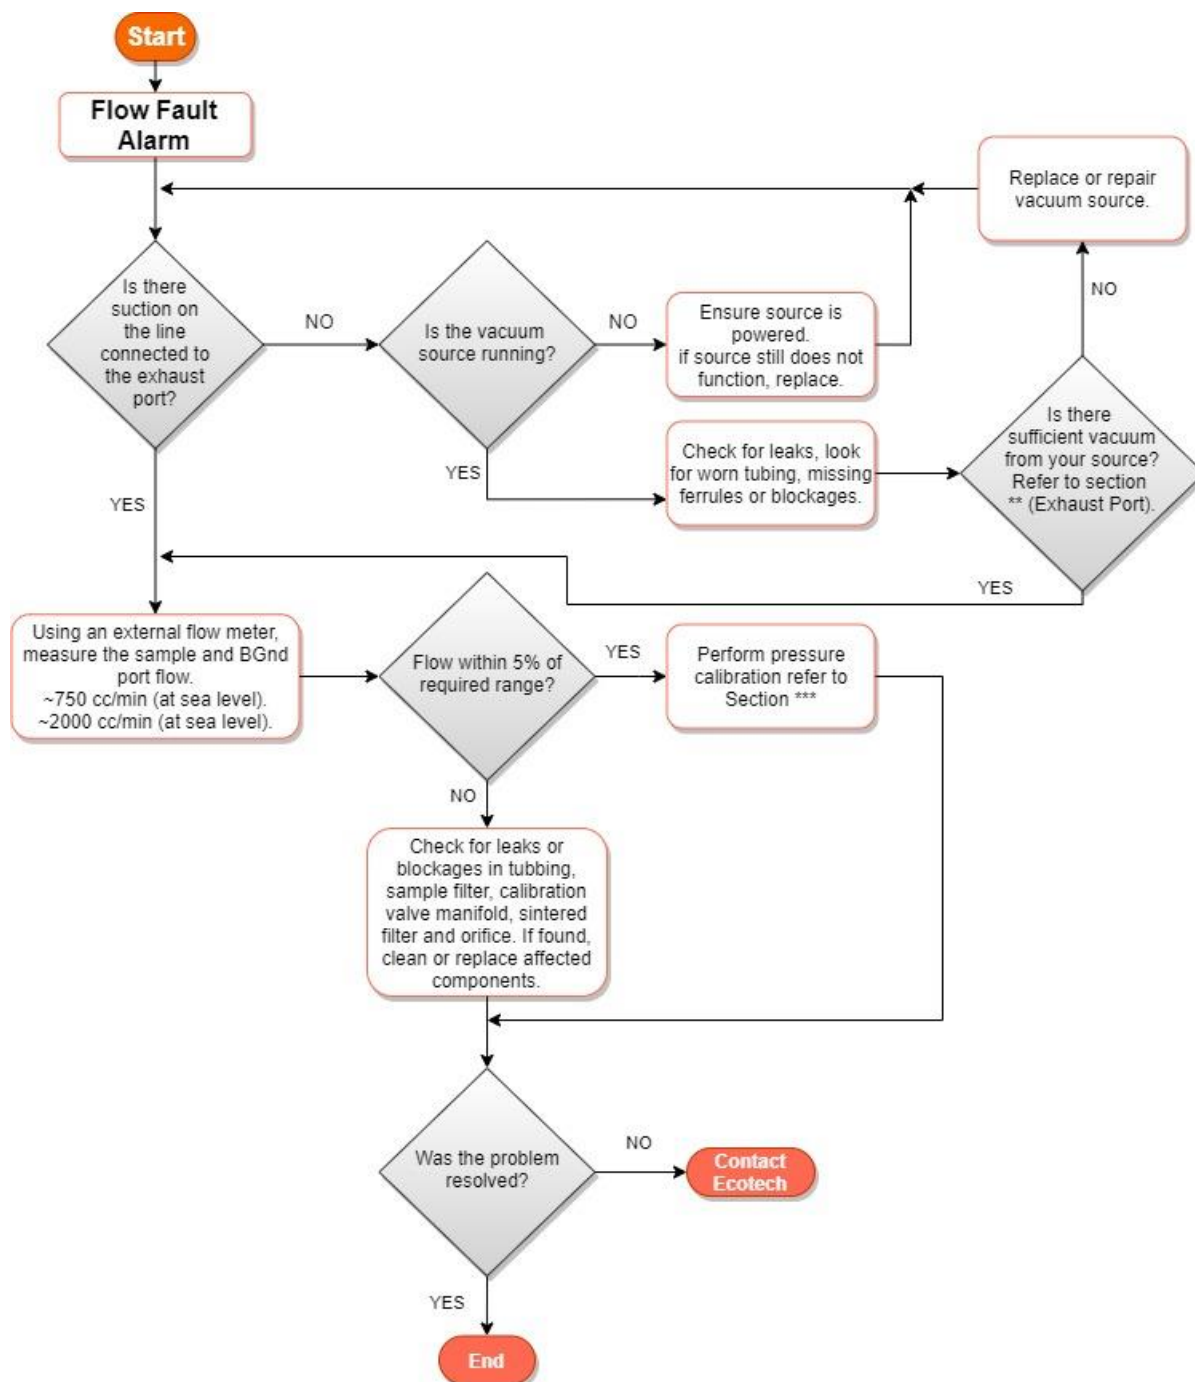


Figure 150 – Flow Fault Diagnostic Procedure

** Section 2.3.2

*** Section 5.2

7.2 Noisy/Unstable Readings

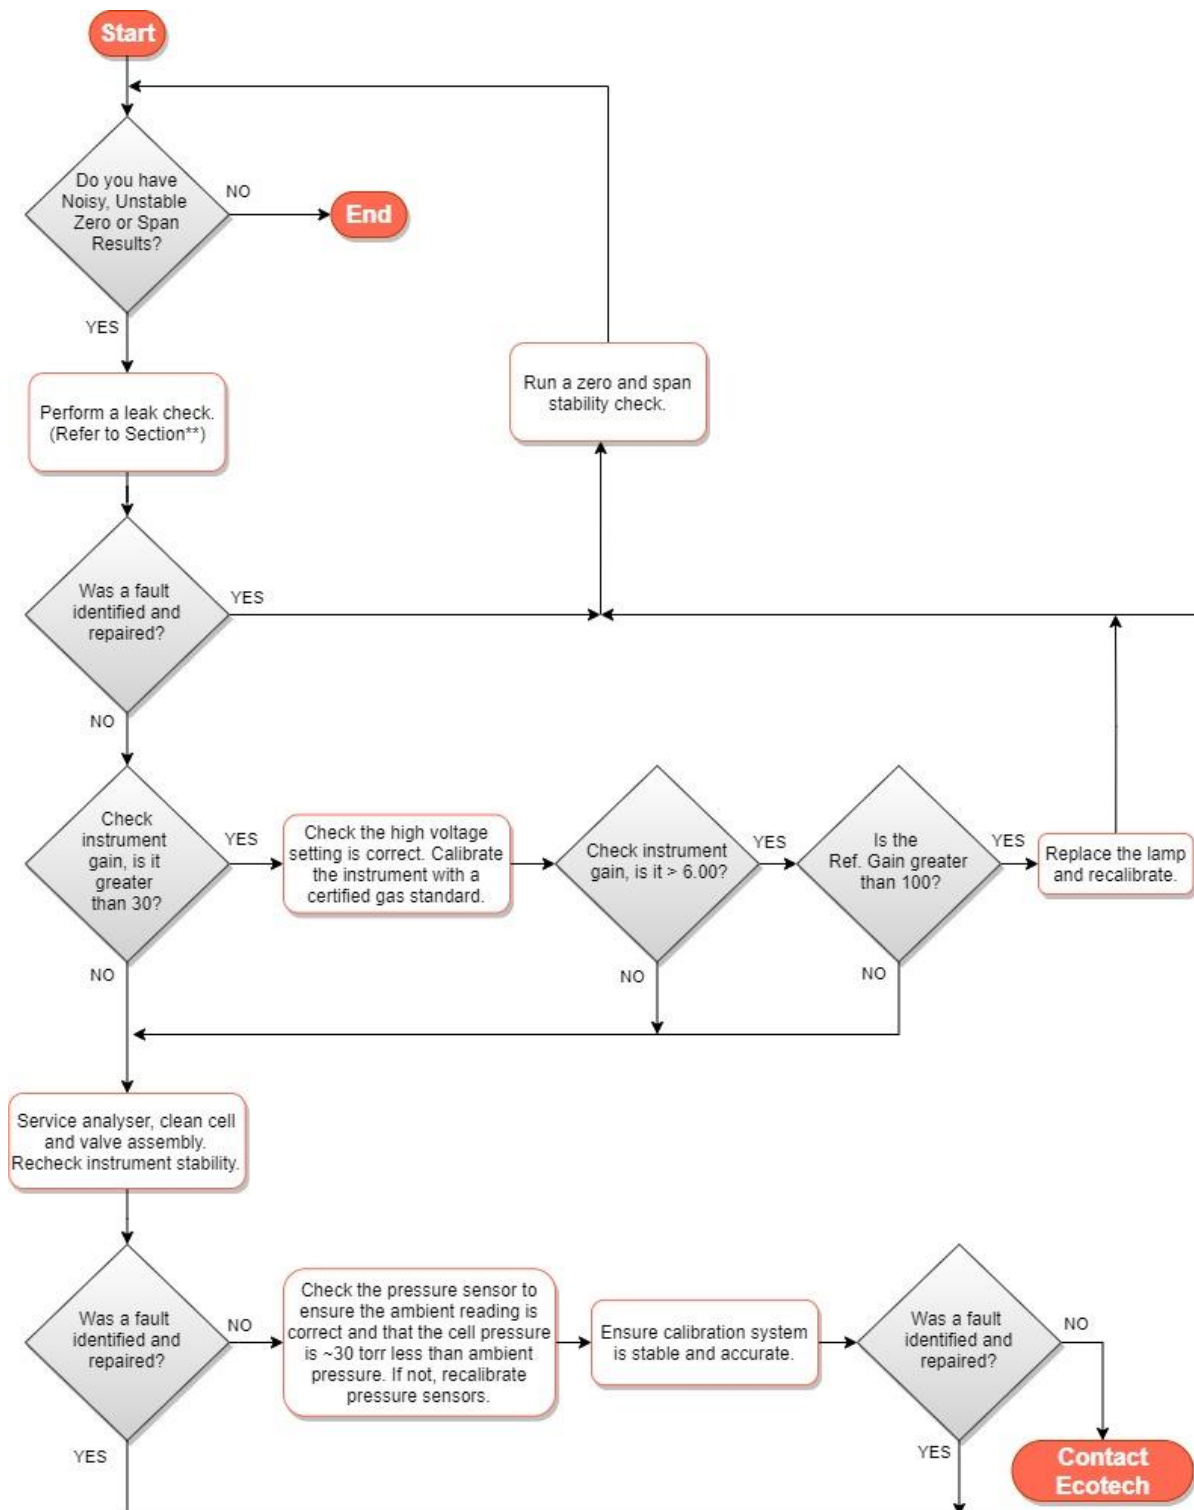


Figure 151 – Noisy or Unstable Zero or Span Results

** Section 6.4.4

7.3 Electronic Zero Adjust

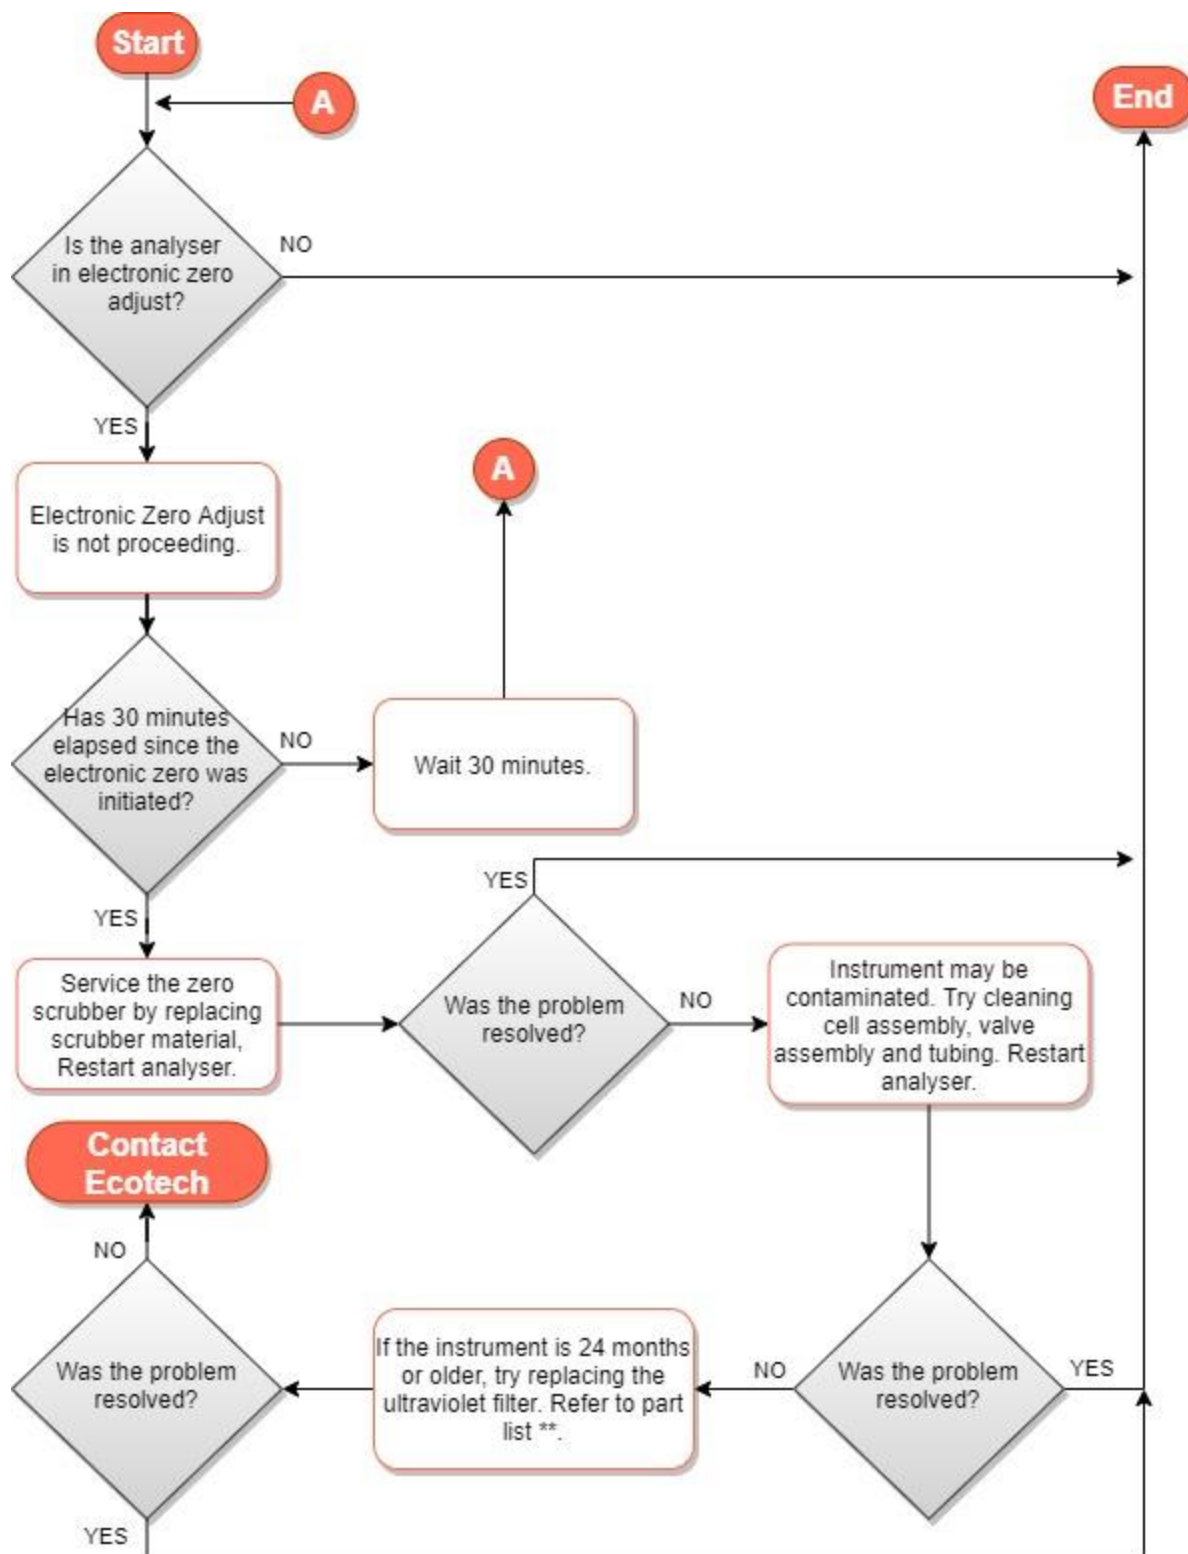


Figure 152 – Troubleshooting, Electronic Zero Adjust

** Section 9.4 - Instrument Parts List

7.4 Reaction Cell Temperature Failure

Note: This process assumes that the temperature set point is 50 °C.

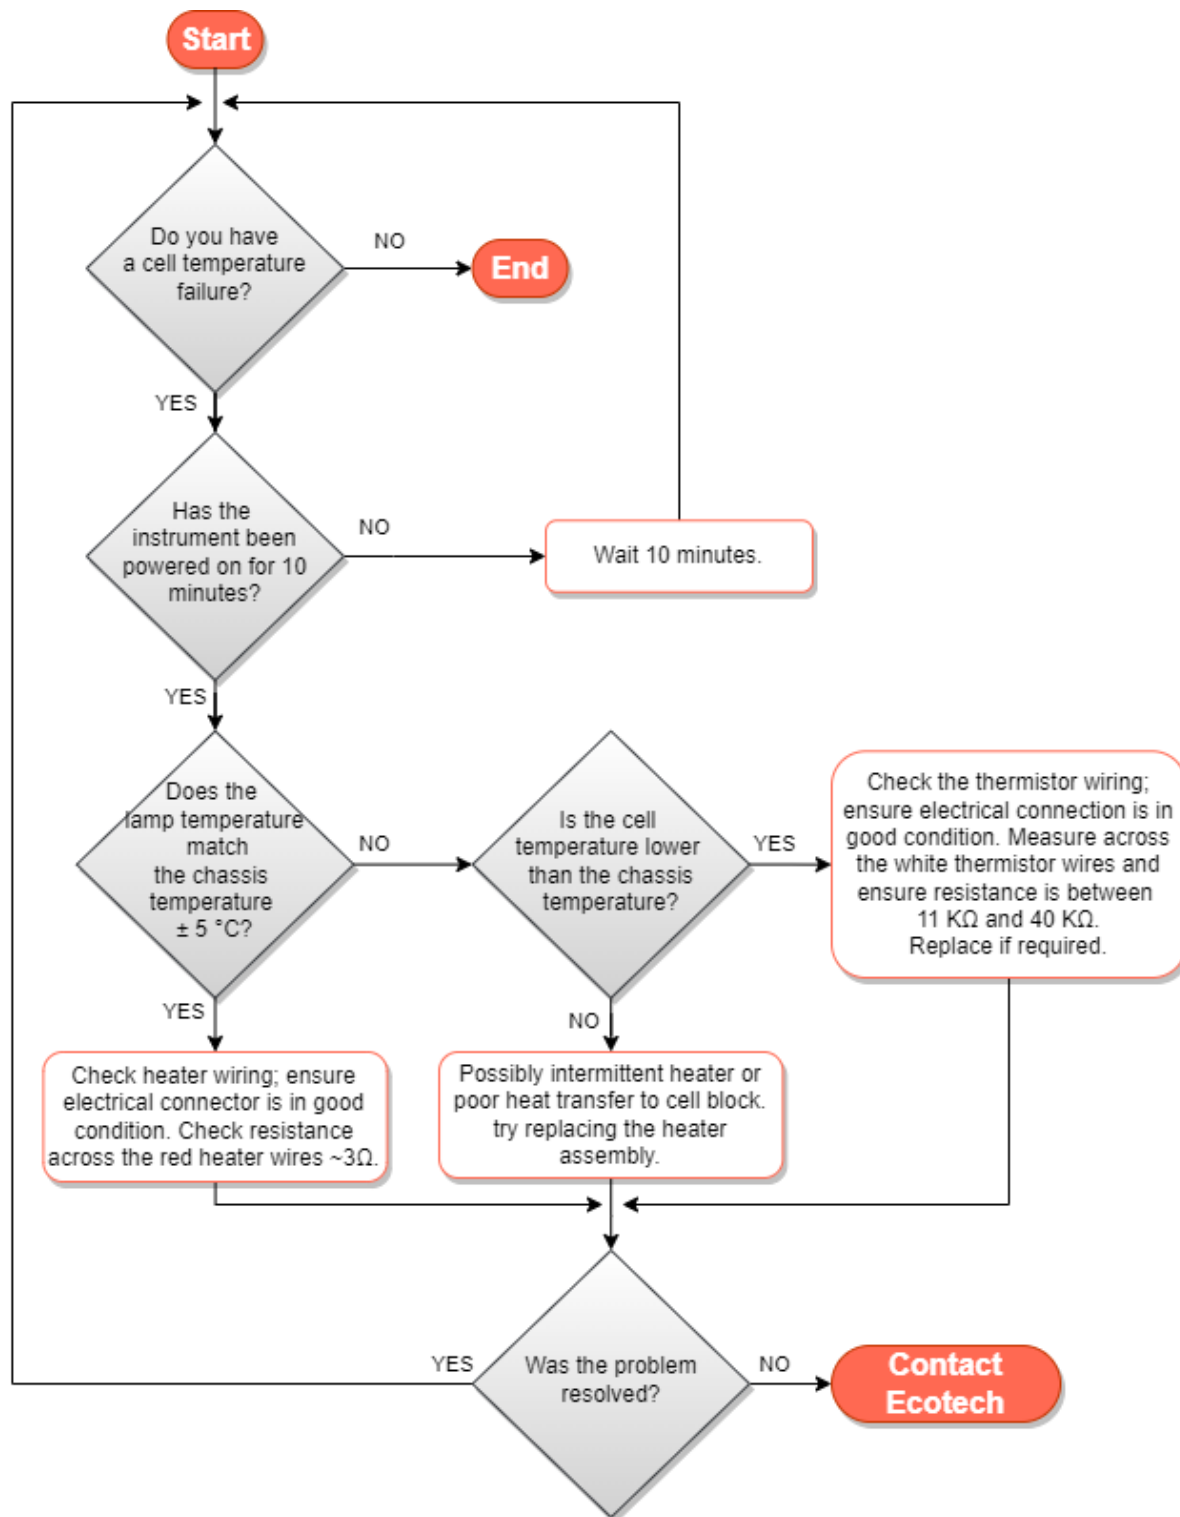


Figure 153 – Troubleshooting, Reaction Cell Temperature Failure

7.5 USB Memory Stick Failure

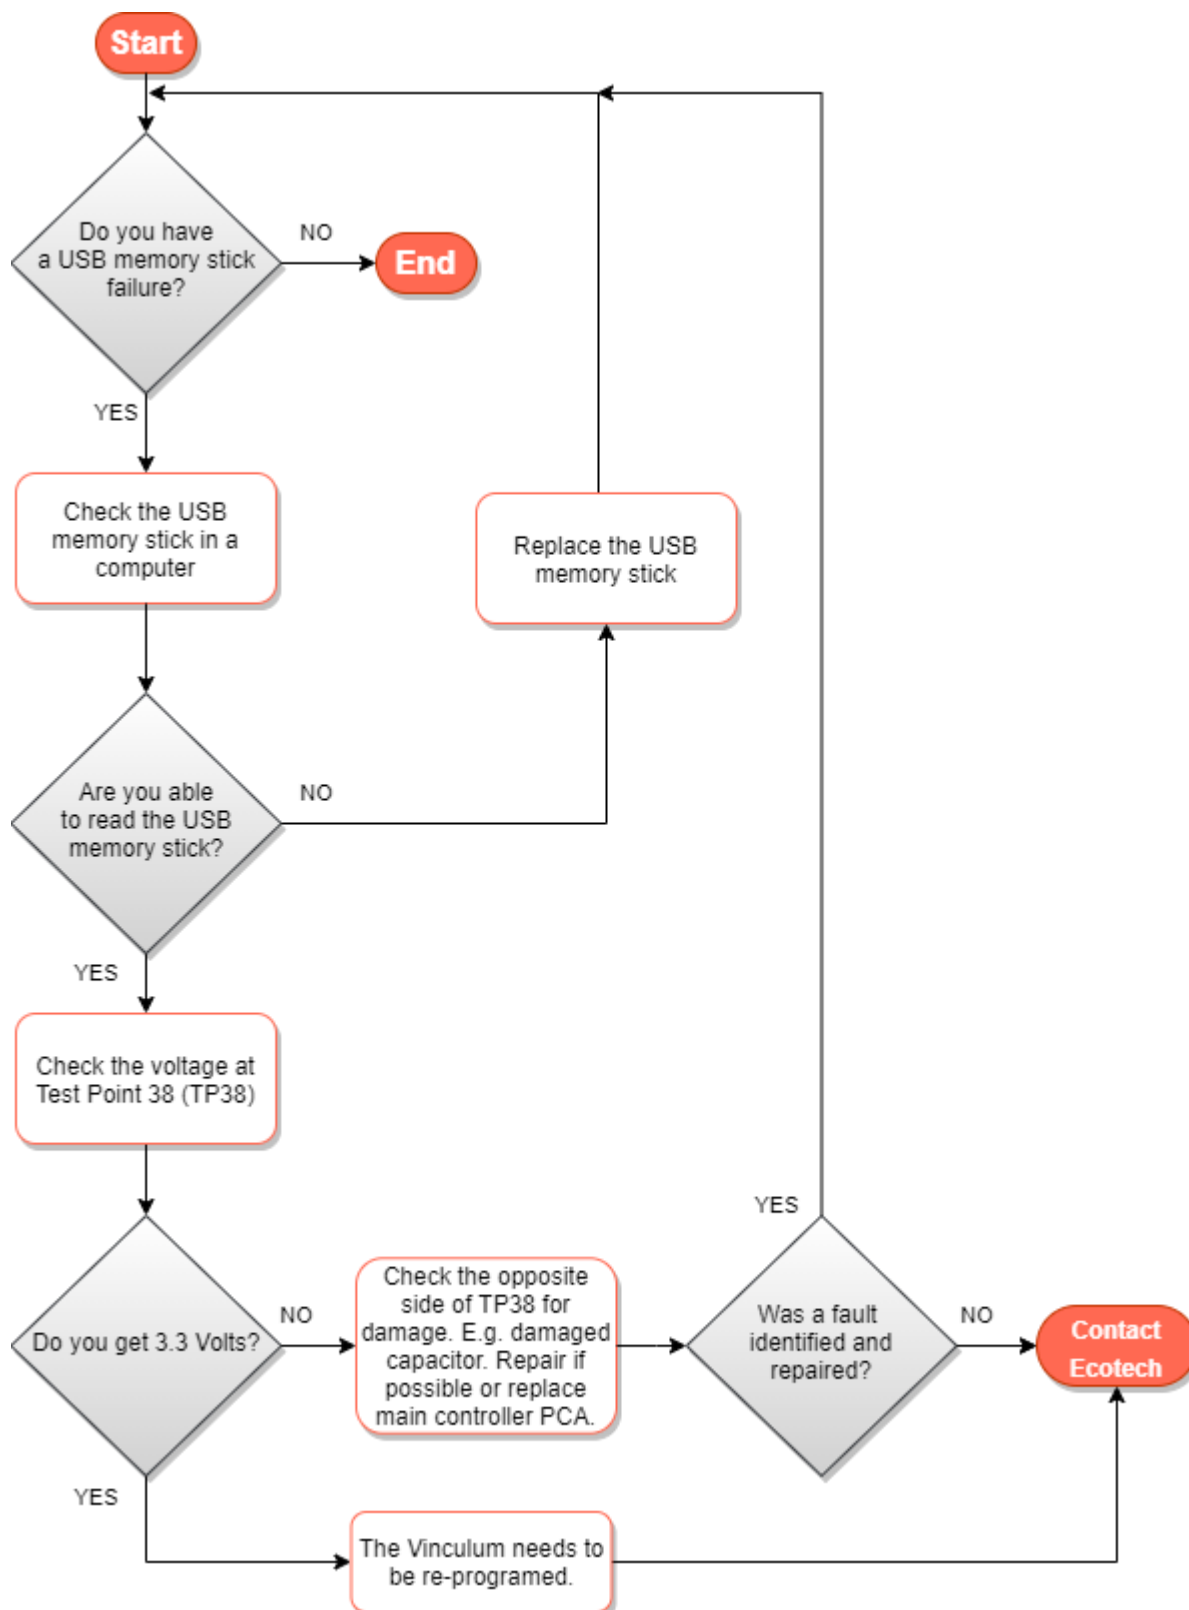


Figure 154 – USB Memory Stick Failure

7.6 Technical Support Files

Regular backup of the settings, parameters and data on the instruments USB memory stick is recommended.

In the event of a fault that requires Acoem Australasia technical support, make copies of the following files and email to: support@ecotech.com

Equipment Required

- PC/Laptop

Procedure

State the ID number, model, board revision and firmware version of the instrument with a brief description of the problem. Take a copy of the current configuration if possible and a save of the parameters.

1. Open - **Main Menu** → **Analyser State Menu**.
2. **Model** - (take note).
3. **Ecotech ID** - (take note).
4. **Board Revision** - (take note).
5. **Firmware Ver.** - (take note).
6. Open - **Main Menu** → **Service Menu**.
7. Save - **Save Configuration** - (CONFIG**.TXT) - Accept.


Note: CONFIG99.TXT is the “Factory Backup” file, this is the configuration of the instrument as it left the factory. It is recommended that this file is kept unchanged but can be used as a reference backup point.

** Can be any number from 0 - 98.

8. Save - **Save Parameter List** - (PARAM**.TXT) - Accept.
9. Eject - **Safely Remove USB Stick** - (Follow instructions).

Note: PARAM99.TXT is the “Factory Backup” file, This is a snap shot of the parameters while it was under test in the factory just prior to release. It is recommended that this file is kept unchanged but can be viewed for reference.

** Can be any number from 0 - 98.

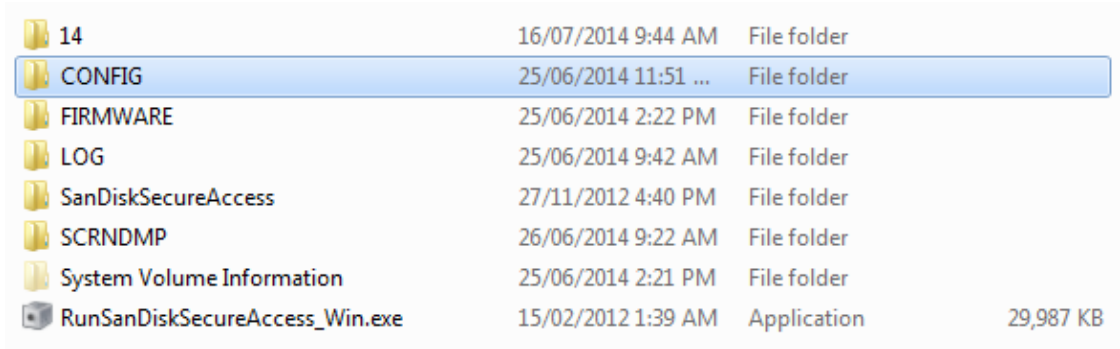

| | | | |
|--------------------------------|----------------------|-------------|-----------|
| 14 | 16/07/2014 9:44 AM | File folder | |
| CONFIG | 25/06/2014 11:51 ... | File folder | |
| FIRMWARE | 25/06/2014 2:22 PM | File folder | |
| LOG | 25/06/2014 9:42 AM | File folder | |
| SanDiskSecureAccess | 27/11/2012 4:40 PM | File folder | |
| SCRNDMP | 26/06/2014 9:22 AM | File folder | |
| System Volume Information | 25/06/2014 2:21 PM | File folder | |
| RunSanDiskSecureAccess_Win.exe | 15/02/2012 1:39 AM | Application | 29,987 KB |

Figure 155 – USB Memory Stick File Structure

- 10. Insert the USB memory stick into PC/Laptop computer and access the files.
- 11. Best practice is to email all the on the USB memory stick but if it's to large just send:
- 12. The CONFIG**.TXT and PARAM**.TXT files that are saved in the CONFIG folder.
- 13. The LOG files (Event Log text files) and data files (14=Year, Sub folder=month).
- 14. Safely Eject the USB from the PC/Laptop and return to the instrument.

8. Optional Extras

This section contains information on optional kits and installed options.

| | |
|--------------------------------|-----------------------|
| Dual Sample Filter | Refer to Section 8.1. |
| Test Lamp | Refer to Section 8.2. |
| Network Port | Refer to Section 8.3. |
| Rack Mount Kit | Refer to Section 8.4. |
| Internal Pump | Refer to Section 8.5. |
| Metric Fittings Kit | Refer to Section 8.6. |
| Internal Zero and Span | Refer to Section 8.7. |
| High Pressure Zero/Span Valves | Refer to Section 8.8. |
| Trace Level Instrument | Refer to Section 8.9. |

8.1 Dual Sample Filter (PN: E020100)

The dual filter is designed with two sample filters plumbed in parallel with a split line. This formation allows sample flow not to be affected, yet reduces the loading on each filter and therefore the frequency with which they will need to be changed.

Table 10 – Dual Sample Filter Parts Added

| Part Description | Quantity | Part Number |
|-------------------------------|----------|-------------|
| Sample Filter Holder | 1 | H010160 |
| 1/4T Union Tee Fitting | 2 | F030210-01 |
| 1/4T Suit Compression Ferrule | 6 | F030203-01 |
| 1/4T Compression Fitting Nut | 6 | F030202-01 |

The dual filter option is shown in the pneumatic diagram (dashed line) and requires no operational changes to the instrument (refer to Section 9.5).

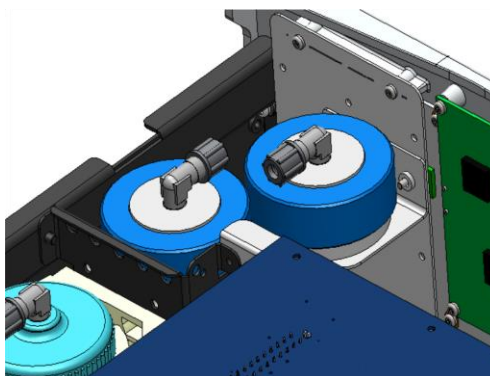


Figure 156 – Dual Filter Option Installed

8.2 Test Lamp (PN: E020103)

The test lamp can be used to diagnose a problem within the measurement cell specifically the function of the PMT. The test lamp is used in the **Main Menu → Service Menu → Diagnostics Menu → Digital Pots Menu** by changing the **Diagnostic Mode** to **Optic** (refer to Section 3.4.15). If you have this option installed you need to make sure it is enabled in the **Hardware Menu** before the feature can be used.

An example of using the Optic diagnostic feature is when running a span point if you get no response from the instrument the Optic diagnostic feature can be used to divide up the system and verify that the lack of response is not due to a failure of the measurement cell but more likely a failure of the assemblies leading up to calibration system. If you get a response from the instrument regardless of the concentration then the PMT is functioning and can be ruled out as the cause of the problem.

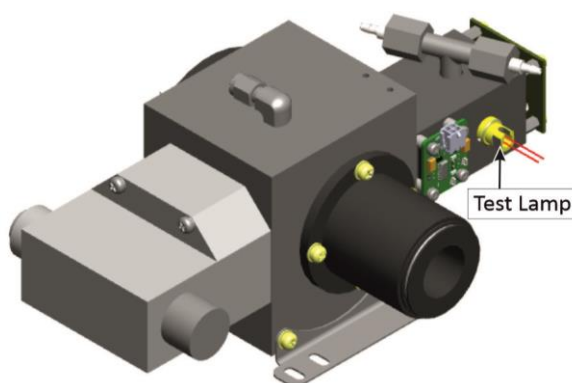


Figure 157 – Test Lamp

Table 11 – Test Lamp Parts Added

| Part Description | Quantity | Part Number |
|------------------|----------|-------------|
| Test Lamp | 1 | C020068-01 |
| Quartz Window | 1 | H010002 |

Table 12 – Test Lamp Parts Removed

| Part Description | Quantity | Part Number |
|------------------|----------|-------------|
| Test Lamp Plug | 1 | H010026 |

8.3 Network Port (PN: E020101)

The network port option allows the user to setup and connect to a range of TCP/IP network options. If the user has this option installed they need to make sure it is enabled in the **Hardware Menu** before the feature can be used.

Table 13 – Network Port Parts Added

| Part Description | Quantity | Part Number |
|-------------------------------|----------|-------------|
| Rear Panel PCA (Network Port) | 1 | C010002 |

Table 14 – Network Port Parts Removed

| Part Description | Quantity | Part Number |
|---------------------------|----------|-------------|
| Rear Panel PCA | 1 | C010002-01 |
| Rectangular Blanking Plug | 1 | H010067 |

- Refer to Section 3.4.29, for details on the network menu.
- Refer to Section 4.3, for details on network setup.

8.3.1 Hardware Setup

This procedure will need to be followed after a factory reset.

Procedure

1. Press - (the green instrument status light button), this will take the user to the home screen.
2. Press - (-99+) on the keypad. This will open the **Advanced Menu**.
3. **Open - Advanced Menu → Hardware Menu.**
4. **Enable - Network Port → Enabled.**

8.4 Rack Mount Kit (PN: E020116)

The rack mount kit is necessary for installing the Serinus into a 19" rack (the Serinus is 4RU in height).

Table 15 – Rack Mount Kit Parts Added

| Part Description | Quantity | Part Number |
|----------------------------|----------|-------------|
| Rack Slide Set | 1 | H010112 |
| Rack Mount Adaptors | 4 | H010133 |
| Rack Mount Ears | 2 | H010134 |
| Spacers | 4 | HAR-8700 |
| M6 x 20 Button Head Screws | 8 | |
| M6 Washers | 16 | |
| M6 Nyloc Nuts | 8 | |
| M4 x 10 Button Head Screws | 18 | |
| M4 Washers | 8 | |
| M4 Nyloc Nuts | 8 | |
| M6 Cage Nuts | 8 | |

Installing the Instrument

Procedure

1. Remove the rubber feet from the instrument (if attached).
2. Refer to Figure 158. Separate the slide rail assembly by pressing the black plastic clips in the slide rails to remove the inner section of the rail.

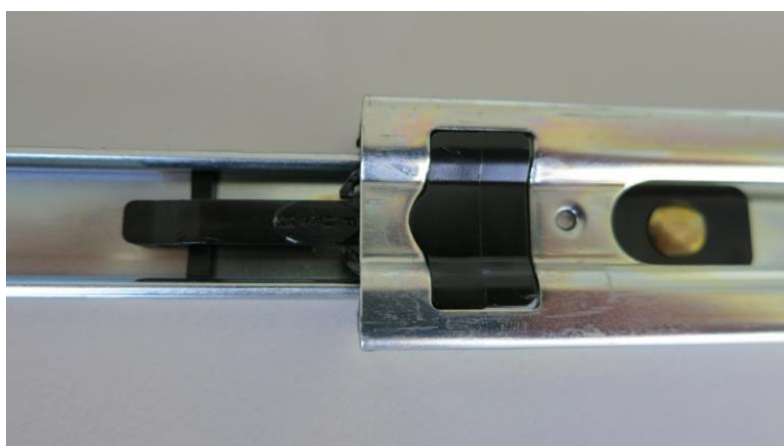


Figure 158 – Separate Rack Slides

3. Refer to Figure 159. Attach the inner slide rails to each side of the instrument using M4 x 10 button screws; three on each side.



Figure 159 – Assemble Inner Slide on Chassis

4. Refer to Figure 160. Install rack mount ears on the front of the instrument using two M4 x 10 screws on each side.



Figure 160 – Rack Mount Ears Fitted to Instrument

5. Refer to Figure 161. Attach the rack mount adaptors to the ends of the outer slide rails using M4 x 10 button screws, washers and locknuts. Do not fully tighten at this stage as minor adjustments will be required to suit the length of the rack.



Figure 161 – Attach Rack Mount Adaptors to Outer Slides

6. Refer to Figure 162. Test fit the rack slide into your rack to determine the spacing of the rack mount adaptors.

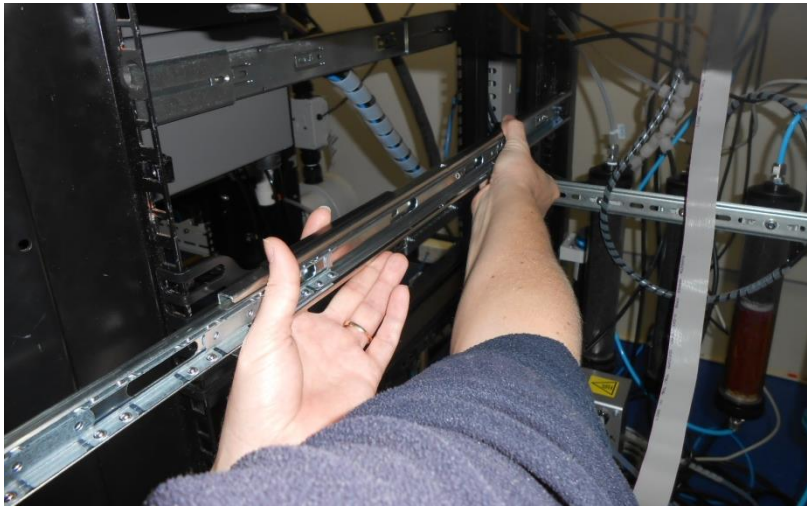


Figure 162 – Test Fit the Rack Slide Assembly into your Rack

7. Refer to Figure 163. Install the two assembled outer slide rails onto the left and right side of the rack securely with M6 bolts; washer and locknuts/cage nuts.

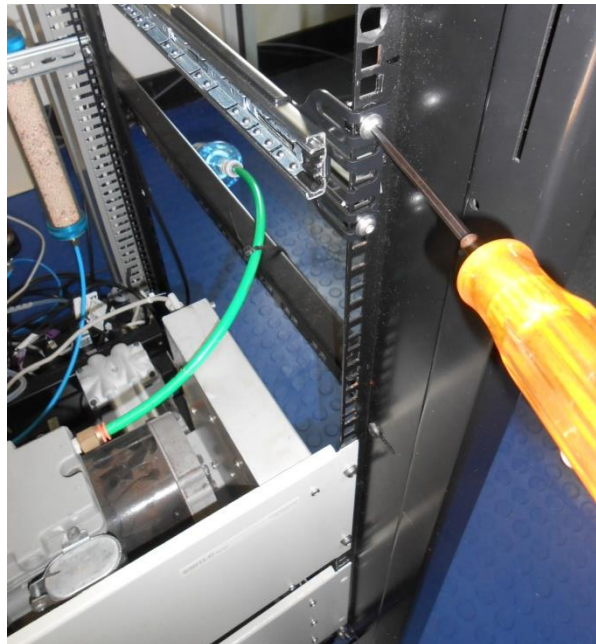


Figure 163 – Attach Slides to Front of Rack

8. Now carefully insert the instrument into the rack by fitting the instrument slides into the mounted rails. Ensuring that the rack slide locks engage on each side (you will hear a click from both sides).



CAUTION

When installing this instrument ensure that appropriate lifting equipment and procedures are followed. It is recommended that two people lift the instrument into the rack due to the weight, unless proper lifting equipment is available.

Note: Ensure both sides of the inner slide are attached to the outer slides before pushing into the rack fully.

9. Push the instrument into the rack. Adjust and tighten the screws as required to achieve a smooth and secure slide.

To Remove the Instrument

1. To remove the instrument first pull instrument forward of rack giving access to the slides.
2. Refer to Figure 164. Find the rack slide lock labelled **Push** and push it in whilst sliding the instrument out of the rack, complete this for both sides while carefully removing instrument.

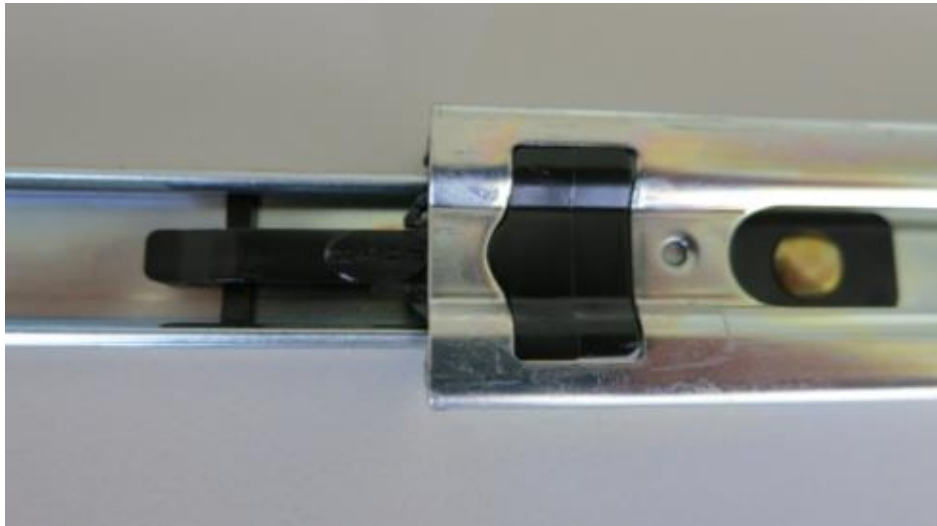


Figure 164 – Slide Clips

8.5 Internal Pump (PN: E020106)

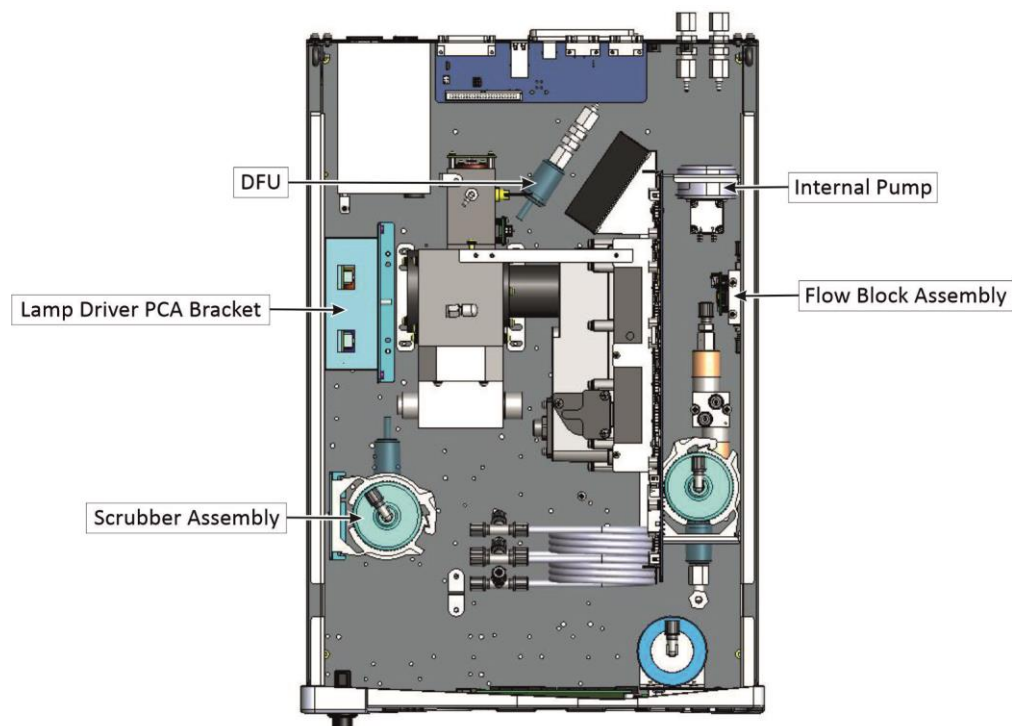


Figure 165 – Internal Pump Option

8.5.1 Hardware Setup

This procedure should be followed after a factory reset:

Procedure

- 1. Press - (the green instrument status light), to return to the home screen.
- 2. Press - (-99+) on the keypad to open the **Advanced Menu**.
- 3. Open - **Advanced Menu** → **Hardware Menu**.
- 4. Enable - **Internal Pump** → **Enabled**.

8.5.2 Internal Pump Pneumatic

Refer to Section 9.6 for the Plumbing Schematic.

8.5.3 Internal Pump Additional Components

The Serinus 50 internal pump option includes the following additional components:

Table 16 – Internal Pump Parts Added

| Part Description | Quantity | Part Number |
|-----------------------|----------|-------------|
| Pressure Sensor Cable | 1 | C020062-02 |

| Part Description | Quantity | Part Number |
|---------------------------------------|----------|-------------|
| Heater and Thermistor Cable | 1 | C020083 |
| DFU, 23 Micron | 2 | F010005 |
| Internal Pump | 1 | H010027 |
| Scrubber Assembly | 1 | H010038 |
| #10 Orifice | 1 | H010043-09 |
| Scrubber Support Ring | 1 | H010113 |
| Flow Block Thermal Isolator | 1 | H010119 |
| Flow Block Assembly | 1 | H010120 |
| Lamp Driver PCA Bracket | 1 | H012115 |
| Scrubber Assembly Bracket | 1 | H012172 |
| Cable Clip Mount 13.5 X 14 mm (L X H) | 3 | H030121 |
| Stop Valve | 1 | H030170 |
| O-ring, 5/32 ID X 1/16 W | 1 | O010013 |

8.5.4 Internal Pump Removed Components

The Serinus 50 has a number of components missing from the standard instrument due to the presence of the internal pump and flow block controlling flow within the instrument. The parts that have been removed when internal pump is included are:

Table 17 – Internal Pump Parts Removed

| Part Description | Quantity | Part Number |
|------------------|----------|-------------|
| #12 Orifice | 1 | H010043-11 |
| #20 Orifice | 1 | H010043-19 |

8.5.5 Pressure Calibration Internal Pump Option

The internal pump requires a separate modified procedure to allow the internal pump to generate the necessary vacuum (refer to Section 5.2.3).

8.5.6 Flow Calibration

The flow calibration menu is only available when the internal pump option is installed (refer to Section 3.4.12).

The internal pump requires a separate flow calibration procedure. The flow calibration detailed in Section 5.8 must be performed after any exchanges/changes to fittings, filters, pump service or pressure calibration.

8.5.7 Leak Check Internal Pump Option

The internal pump requires a separate modified procedure to leak check the system (refer to Section 6.4.4.1).

8.5.8 Pump Control

This section describes how to turn OFF and ON the internal pump for servicing and maintenance purposes.

Procedure

1. Open - **Main Menu** → **Service Menu** → **Diagnostics Menu** → **Internal Pump Menu**.
2. Select - **Pump Control** → **Manual**.
3. Toggle OFF - **Internal Pump** → Off.

8.6 Metric Fittings Kit (PN: E020122)

The metric fittings kit allows the user to connect 6 mm tubing to the rear ports of the analyser. This can be very handy if it is hard to source 1/4" tubing from a local supplier.

8.7 Internal Zero and Span (PN: E020135)

The Serinus 50 Internal Zero and Span (IZS) option is a permeation device used for checking the response of the Serinus 50 at zero and one span point. This is achieved using the following:- permeation oven, permeation tube, constant vacuum and a source of zero air (internal zero air scrubber).

Air is drawn at 3.2 slpm through an external zero air scrubber connected to the BGnd Air Port. When the internal zero mode is active, the IZS calibration valve manifold's valves change to allow the zero air to be drawn through the measurement system. When the internal span mode is active, the IZS calibration valve manifold's valves change to allow the zero air to pass by the permeation tube in the permeation oven. This generates the span gas that is then drawn through the measurement system. The permeation oven temperature is controlled by the main controller PCA, while the sample and purge flow for the permeation oven is sourced from the vacuum supplied to the Exhaust port of the instrument.

The output concentration of the permeation tube is displayed in the **Calibration Menu** as the menu item **Perm Conc**. The **Perm Conc** concentration is calculated from the user editable fields **Perm Rate**, **Perm Flow** and **Perm Tube Oven** located in the **Hardware Menu**. These menu items must be setup by the user for the concentration value to be calculated and displayed correctly.

Note: It is important that as long as the permeation tube is installed in the permeation oven a constant vacuum is supplied to the instrument.

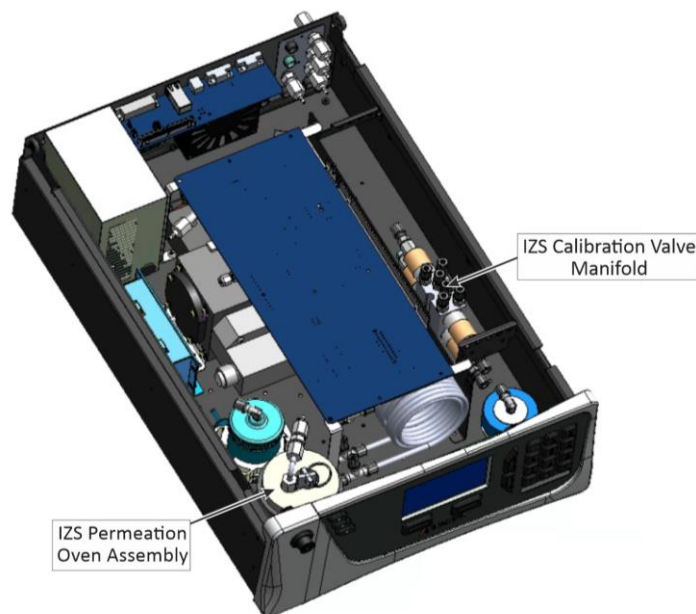


Figure 166 – IZS Specific Internal Components Diagram

8.7.1 IZS Specifications

Table 18 – IZS Parts Added

| Part Description | Quantity | Part Number |
|--------------------------------------|----------|-------------|
| IZS Heater Cable for Permeation Oven | 1 | C020092 |
| 1/4" PTEF Straight Ferrule | 1 | F030028 |
| Nut 1/4T Steel Gripper Fitting | 1 | F030029 |
| KYNAR Union Tee Fitting | 1 | F030034-02 |
| 1/4T Compression Fitting Nut | 12 | F030202-01 |
| 1/4T Suit Compression Ferrule | 12 | F030203-01 |
| 1/4T Union Tee Fitting | 4 | F030210-01 |
| 1/4" to 1/8" Adaptor Fitting | 3 | H010007 |
| #5 Orifice with O-Ring Groove | 1 | H010043-03 |
| IZS Calibration Valve Manifold | 1 | H010056 |
| Lamp Driver PCA Bracket (Vertical) | 1 | H012115 |
| IZS Permeation Oven Assembly | 1 | H012170 |
| Scrubber Bracket | 1 | H012172 |
| O-ring, 5/32 ID X 1/16 W | 1 | O010013 |

Table 19 – IZS Parts Removed

| Part Description | Quantity | Part Number |
|-------------------------------------|----------|-------------|
| Calibration Valve Manifold Assembly | 1 | H010013-01 |

8.7.1.1 Permeation Oven

Output Concentration

Concentration will vary depending on permeation tube selected

Dilution Flow

0.850 ml/min \pm 130 ml/min

Temperature Range

50 °C \pm 3 °C

Permeation Chamber Size

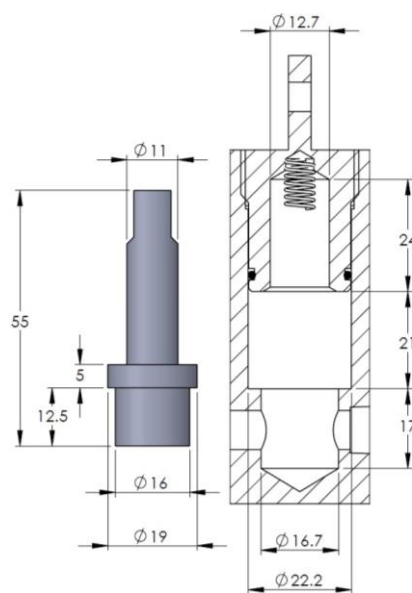


Figure 167 – Typical Permeation Tube and Chamber Dimensions (Units in mm)

8.7.1.2 Power

Power Consumption

250 VA max (typical at warm up)

180 VA after warm up

8.7.1.3 Physical Dimensions

Weight

23.4 Kg

8.7.2 IZS Setup

This section of the manual runs through the requirements to consider when selecting a permeation tube as well as an initial hardware setup for the calibration device to function correctly.

8.7.2.1 Selecting a Permeation Tube

The permeation oven fits “Wafer Device” type permeation tubes with ~46 mm of active material length and ~16 mm outer diameter. Total housing length of the permeation tube is around ~55 mm x 19 mm.

Acoem Australasia recommends sourcing your permeation tube from a local supplier. Remember to confirm your desired accuracy ($\pm 10\%$ or $\pm 25\%$) when ordering. Permeation tubes are specified with a nominal value $\pm 10 - 25\%$. This means that if a perm tube is ordered with a permeation rate of 1080 ng/min, it can be as low as 810 ng/min or as high as 1350 ng/min. This does not mean the value will fluctuate by that much, but the actual value observed from the permeation tube can vary as much as 25% from the ordered value. Once installed and setup, perm tubes typically remain within 3% of their set value.

8.7.2.2 Hardware Setup

This procedure should be followed after a factory reset or during the installation of a new permeation tube.

Equipment Required

- Flow meter

Procedure

1. Press - (the green instrument status light), this will take you to the home screen.
2. Press - **(-99+)** on the keypad. This will open the **Advanced Menu**.
3. Open - **Advanced Menu** → **Hardware Menu**.
4. Enable - **IZS Internal Span** → **Enabled**.
5. Disconnect the permeation oven inlet and connect a flow meter (you should read around 130 ml/min purge flow while in this mode).
6. Press - (the green instrument status light), this will take you to the home screen.
7. Open - **Main Menu** → **Calibration Menu**.
8. Select - **Zero Source** → **Internal**.
9. Select - **Span Source** → **Internal**.
10. Select - **Cal. Mode** → **Span**.
11. Record the reading on the flow meter as your “perm oven flow” (should be around 830 ml/min).
12. Select - **Cal. Mode** → **Measure**.
13. Reconnect the permeation oven inlet.
14. Press - (the green instrument status light), this will take you to the home screen.
15. Press - **(-99+)** on the keypad. This will open the **Advanced Menu**.

16. Open - **Advanced Menu** → **Hardware Menu**.
17. Edit - **Perm Flow** - (Enter the flow value you recorded as “perm oven flow”) - Accept.
18. Edit - **Perm Rate** - (Refer to the certificate that accompanies your permeation tube for the permeation rate in ng/min) - Accept.
19. Ensure the **Perm Tube Oven** is set to 50 °C.
20. Press - (the green instrument status light), this will take you to the home screen.
21. Open - **Main Menu** → **Calibration Menu**.
22. **Perm Conc** will now display the concentration being drawn through the measurement system when a span point is running.

8.7.3 IZS Transporting/Storage

Transporting the instrument should be done with great care. It is recommended that the original packaging material the Serinus was delivered in should be used when transporting or storing.

When transporting or storing the instrument the following points should be followed:

Procedure

1. Slide back or remove the lid to access the inside of the instrument.
2. Refer to Figure 168. Unscrew the white Teflon plug on top of the permeation oven and then pull the split ring to fully remove the plug.

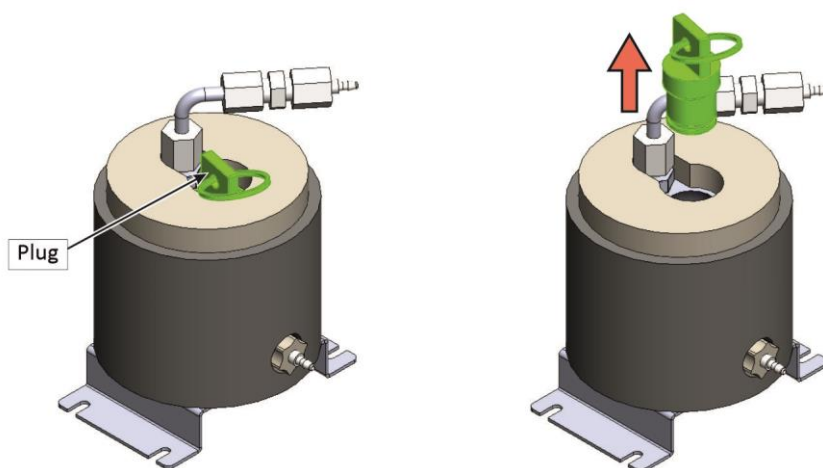


Figure 168 – Permeation Tube Removal

3. Remove the permeation tube from the permeation oven and store in its original shipping tube. If the device will not be used for at least a week and its total useful life is less than a year, the device should be placed in cold storage to prolong its useful lifespan.
4. Replace the Teflon plug back in to the permeation oven.
5. Allow the instrument some time to purge the pneumatic system.
6. Turn OFF the instrument and allow it to cool down.
7. Remove all pneumatic, power and communication connections.

8. Remove the instrument from the rack.
9. If storing over a long period (six months) turn the battery OFF by switching the DIP switch (S1) on the main controller PCA (refer to Figure 36).
10. Replace the red plugs into the pneumatic connections.
11. Remove the USB memory stick and pack with instrument (refer to Figure 36).
12. If you have the IZS option installed refer to Section 8.7.3 for specific transporting and storage instructions.
13. Place the instrument back into a plastic bag with desiccant packs and seal the bag (ideally the bag supplied upon delivery).
14. Place the instrument back into the original foam and box it was delivered in. If this is no longer available find some equivalent packaging that provides protection from damage.
15. The instrument is now ready for long term storage or transportation.

8.7.4 IZS Calibration

8.7.4.1 IZS Pressure Calibration

To perform a pressure calibration refer to Section 5.2.

8.7.4.2 IZS Zero

Equipment Required

- None

Procedure

1. Open - **Main Menu → Calibration Menu**.
2. Select - **Cal. Type → Manual** - Accept.
3. Select - **Zero Source → Internal** - Accept.
4. Select - **Cal. Mode → Zero** - Accept.
5. Allow the instrument time to achieve a stable response.
6. Enter - **Zero Calibrate SO2** - OK.
7. Select - **Cal. Mode → Measure** - Accept (To return to sample measure).

8.7.4.3 IZS Span

Equipment Required

- None

Procedure

1. Open - **Main Menu → Calibration Menu**.
2. Select - **Cal. Type → Manual** - Accept.

3. Select - **Span Source** → **Internal** - Accept.
4. Select - **Cal. Mode** → **Span** - Accept.
5. Let the instrument stabilise, typically 15 minutes.
6. Enter - **Span Calibrate SO₂** - (Enter the span output concentration) - Accept.
7. Select - **Cal. Mode** → **Measure** - Accept (To return to sample measure).

8.7.5 IZS Service and Maintenance

This maintenance kit is required when performing annual maintenance on the instrument. Depending on the environment that the instrument is operating, the maintenance may need to be carried out more often than yearly.

Table 20 – IZS Annual Maintenance Kit - (PN: E020212)

| Part Description | Quantity | Part Number |
|---|----------|--------------|
| Viton O-ring (3/4" ID X 1/16" W) | 1 | 25000447-018 |
| 5g Desiccant Pack | 2 | C050014 |
| Stainless Steel Sintered Filter | 1 | F010004 |
| DFU, 23 Micron | 2 | F010005 |
| M3 x 6 Nylon Washer Shoulder | 2 | F050040 |
| Neoprene Washer (0.174" x 0.38" x 0.016") | 2 | F050041 |
| Compression Spring | 1 | H010040 |
| Stainless Steel Sintered Filter With O-ring Groove Body | 2 | H010047-01 |
| Stainless Steel Sintered Filter With Screw In Body | 3 | H010053 |
| Check Valve, 1/8" Barb | 1 | H030140 |
| O-ring (0.364" ID X 0.070" W) | 7 | O010010 |
| O-ring (0.426" ID X 0.070" W) | 1 | O010011 |
| O-ring (5/32" ID X 1/16" W) | 6 | O010013 |
| O-ring (1 11/16" ID X 3/32" W) | 2 | O010014 |
| O-ring (1/4" ID X 1/16" W) | 7 | O010015 |
| O-ring (13/16" ID X 1/16" W) | 8 | O010016 |
| O-ring (1 5/8" ID X 1/16" W) | 1 | O010017 |
| O-ring (5 3/4" ID X 3/32" W) | 1 | O010018 |
| O-ring (0.208" ID X 0.07" W) | 1 | O010021 |
| O-ring (1.739" ID X 0.07" W) | 1 | O010022 |
| O-ring (BS015) | 7 | O010023 |
| O-ring (0.114" ID X 0.07" W) | 1 | O010032 |
| O-ring (1.989 ID x 0.07 W) | 2 | O010054 |
| Ecotech Tubing | 3 | T010026 |

8.7.5.1 IZS Leak Check

The following leak check procedure describes how to leak check the Serinus 50 with the IZS option. Following the procedure in conjunction with the plumbing schematic and assembly drawing will enable the user to track and repair system leaks.

Note: As the plumbing is complex and the plumbing diagram is not a physical representation of the actual plumbing in the instrument, we refer to the valves in the procedure by name and valve number. We also refer to port connections as NO, NC and C. This describes the state of the valve when it is de-energised, Normally Open (NO) Normally Closed (NC) and Common (C).

Equipment Required

- Source of Vacuum (pump)
- Leak Test Jig (PN: H050069)
- Kynar 1/4" Blocker Nuts
- Tubing and Assorted Fittings
- 5/8" Spanner
- 9/16" Spanner
- 7/16" Spanner

Procedure

Note: Ensure that the instrument has been running for at least one hour before this procedure is performed.

1. Turn OFF the vacuum source and allow the instrument to return to ambient pressure.
2. Disconnect all external tubing connected to the rear ports of the instrument.
3. Connect a leak check jig to the Exhaust Port of the instrument.
4. Connect a vacuum source to the shut off valve end of the leak test jig ensuring the shut off valve is in the open position.
5. Open - **Main Menu → Service Menu → Diagnostics Menu → Valve Menu.**
6. Disable - **Valve Sequencing → Disabled.**
7. Turn **Off** all the valves except the **Internal Span A** and **Internal Span B** valves.
8. Block the **BGnd Air Port.**
9. Allow the instrument time to evacuate the pneumatic system (the time required will depend on the vacuum source used).
10. Close the shut off valve and record the vacuum. Wait for three minutes and observe the gauge on the leak check jig. It should not drop more than 5 kpa (37.5 torr). If the leak check passed skip to step 12.

Note: The first test, leak checks the IZS path and the bulk of the pneumatic system.

11. Inspect the instrument's plumbing looking for obvious damage. Check the condition of fittings, particulate filter housing plus the O-rings both in the filter assembly and in the reaction cell

assembly. Locate and repair the leak by dividing up the pneumatic system into discrete sections (refer to Section 9.7) then rerun the leak check procedure from step 5.

12. Remove the Blocker on the **BGnd Air Port** allowing the gauge to return to ambient.
13. Open - **Main Menu → Service Menu → Diagnostics Menu → Valve Menu**.
14. Turn **Off** all the valves.
15. Block the **BGnd Air Port** and the **Sample Port**.
16. Open the shut off valve and allow the instrument time to evacuate the pneumatic system (the time required will depend on the vacuum source used).
17. Close the shut off valve and record the vacuum. Wait for three minutes and observe the gauge on the leak check jig. It should not drop more than 5 kpa (37.5 torr). If the leak check passed skip to step 19.

Note: The second leak check tests the sample path and the bulk of the pneumatic system.

18. Your leak is located somewhere in the sample path. The path consists of the blocked **Sample Port** through the IZS Calibration valve manifold **Sample Cal** valve (V3 - NO) to the inlet of **Internal Span A** valve (V1 - NO). Following this path described locate and repair the leak (refer to Section 9.7 and 9.16) then rerun the leak check procedure from step 13.
19. Remove the Blocker on the **Sample Port** allowing the gauge to return to ambient.
20. Open - **Main Menu → Service Menu → Diagnostics Menu → Valve Menu**.
21. Turn **Off** all the valves except for the **Sample/Cal** valve.
22. Block the **BGnd Air Port** and the **Calibration Port**.
23. Open the shut off valve and allow the instrument time to evacuate the pneumatic system (the time required will depend on the vacuum source used).
24. Close the shut off valve and record the vacuum. Wait for three minutes and observe the gauge on the leak check jig. It should not drop more than 5 kpa (37.5 torr). If the leak check passed skip to step 26.

Note: The third leak check tests the calibration path and the bulk of the pneumatic system.

25. Your leak is located somewhere in the calibration path. The path consists of the blocked **Calibration Port** through the IZS Calibration valve manifold **Sample Cal** valve (V3 - NC) port to the inlet of **Internal Span A** valve (V1 - NO) port. Following this path described locate and repair the leak (refer to Section 9.7 and 9.16) then rerun the leak check procedure from step 20.
26. Remove the blocker on the **Calibration Port** allowing the gauge to return to ambient.
27. Remove the blocker from the **BGnd Air Port**.
28. Inspect the internal pneumatics to ensure the tubing has a clean solid connection to the fittings.
29. Remove the leak check jig.
30. Enable - **Valve Sequencing → Enabled**.

8.8 High Pressure Zero/Span Valves

High pressure span calibration valve (factory installed) PN: E020108

High pressure zero calibration valve (factory installed) PN: E020109

Note: Before using a high pressure span or zero as a source calibrating the instrument, check with your local regulatory requirements.

Table 21 – High Pressure Zero/Span Valves Parts Added

| Part Description | Quantity | Part Number |
|--|----------|-------------|
| High Pressure Zero/Span Valve Assembly | 1 | H050043 |
| O-Ring 5/32 ID X 1/16 W, BS007 | 1 | O010013 |
| #14 Orifice | 1 | H010043-13 |

Refer to Section 5.9 for operation of this installed option.

Refer to Section 9.19 for the exploded assembly drawing.

8.9 Trace Level Instrument (PN: E020126)

The trace option enables the instrument to detect sulfur dioxide from 0 - 2000 ppb with a lower detectable limit of 100 ppt.

8.9.1 Trace Specifications

The following tables list the changes to a standard instrument with the trace option installed:

Table 22 – Trace Parts Added

| Parts Added | Quantity | Part Number |
|------------------------------|----------|-------------|
| Trace Reaction Cell Assembly | 1 | H012100-02 |

Table 23 – Trace Parts Removed

| Parts Removed | Quantity | Part Numbers |
|------------------------|----------|--------------|
| Reaction Cell Assembly | 1 | H012100 |

8.9.1.1 Measurement

Range

0 - 2000 ppb autoranging

Lower detectable limit: 100 ppt, with Kalman filter active

8.9.1.2 Precision/Accuracy

Response Time

< 60 seconds to 90%

8.9.1.3 Calibration

Zero Drift

24 hours: < 200 ppt

Span Drift

24 hours: < 0.5% of reading or 1 ppb whichever is greater

8.9.2 Trace Setup

Sighting and System Setup

The sensitivity of the Serinus 50 trace requires special materials to be used for all measurement path lines. These materials must be inert to the pollutant being measured as shown below:

- Sample Column: The sample column should be made of glass to prevent reactions with air drawn into column.
- Sample Hood: The sample hood should be made of Teflon, ensuring that there is no sample retention.
- Lines: All sample transport tubing, including zero and calibration lines, must be made of virgin Teflon, PTFE or FEP.
- Regulator: A high purity, stainless steel dual stage regulator should be used.
- Stainless steel chromatography grade 1/8" gas lines should be used to connect span gas cylinder to gas dilution device.
- Calibration should be carried out by flooding the sample manifold with 10 - 20 l/m of calibration gas. This method ensures that all sample gas contact areas are exposed to the calibration gas.
- Zero calibrations should also involve flooding with zero gas at 10 - 20 l/m.
- Sample gas residence time in the manifold should be less than 3.5 seconds.

Instrument

- Connect 1/4" virgin PTFE FEP tubing to each end of the Charcoal scrubber. Connect one end to the BGnd Air Port, and then connect the other end to the sample manifold.

8.9.3 Trace Operation

Pneumatics

A standard Serinus 50 instrument uses calibration valves to supply sample, span and zero air to the inlet. The small error created from delivering gas through different lines is not measurable in standard instruments but can offset results in a trace level instrument. To eliminate this difference the zero and span gas is flooded directly into the sample manifold (the manifold pump or fan is disabled and isolated

with a valve) to a point where it fills the entire manifold and overflows preventing any ambient external air from entering. Thus the manifold inlet now becomes the calibration vent. The air within the manifold is then drawn through the instrument where measurements can be taken and compared to the concentration being delivered by the calibration system.

8.9.4 Trace Default Values

The Serinus 50 trace default parameters vary from the Serinus 50 standard setup. The following is a list of the parameters and their new default values as well as expected values.

Table 24 – Trace Parameter Value Changes

| Parameter | Default Value |
|------------|---------------|
| Input Pot | 206 |
| Bkgnd Fill | 8 min |

8.9.5 Trace Calibration Guidelines

To perform a multipoint calibration follow the procedure outlined in Section 5.7 for the general setup. As some aspects of calibration need more attention the following steps outline some of the changes in the calibration procedure that must be understood before performing any calibration:

Note: Before commencing a multipoint calibration, perform a manual background with zero air flowing at 10 - 20 Lpm into the column.

- Span/Zero gas should be injected directly into the sample manifold with a volume that will flood the manifold preventing any external air from entering and influencing the Span/Zero gas.
- Losses may occur in the sample manifold and tubing due to contaminants entering during normal measurement cycle. Flooding the sample manifold and tubing with zero air can help clean these contaminants out.
- The instrument must be powered up and in normal measurement calibration mode (ie all gas lines are attached and ready for use) for up to 48 hours before a calibration can be performed.

Note: A 48 hour preconditioning is necessary to warm-up materials and ensures that the instrument is working at its optimum when the calibration is performed. This preconditioning is particularly important for trace instrument calibrations due to the sensitive nature of the measurements.

- The Serinus 50 trace must be used in a laboratory environment which includes air conditioning to stabilise the temperature.
- A zero test should be performed over a 24 hour period to get an accurate reading of the Lowest Detectable Limit (LDL) of the entire system installation. Throughout this time period ten minute intervals should be used to collect readings of the SO₂ from the zero air. From the data acquired the smallest detectable signal that can be accurately measured is found as well as the noise which determines the stability and precision of readings.
- A 6 Point multipoint precision check must be performed. Five points (100, 80, 60, 40 and 20%) throughout the sampling range and one point at zero.

Note: An extra point of reference in the multipoint precision check is necessary in trace instruments due to the sensitive nature of the measurements.

- A shut off valve should be designed into the sample manifold system, whereby the fan or pump used to draw in the sample air is turned OFF and the valve isolates the fan or pump from the sample manifold, when a calibration is in process (as ambient air is not required for calibration and will make calibration void). This valve can be controlled manually or via the data logger providing the data logger is designed with this function.

8.9.6 Trace Service and Maintenance

The maintenance intervals are determined by compliance standards that differ in various regions. The following is recommended by Acoem Australasia as a guide. Compliance with local regulatory or international standards is the responsibility of the user. The below list only includes items that are different to a standard range instrument:

Table 25 – Maintenance Schedule

| Interval * | Task Performed | Section |
|------------|--|---------|
| 6 Monthly | Replace particulate filter | 6.4.1 |
| | Check sample inlet system for moisture or foreign materials and clean. | |
| | Perform multipoint precision check | 8.9.5 |

* Suggested intervals for maintenance procedure are a guide only and may vary with sampling intensity and/or environmental conditions. Refer to your local regulatory standard for your personalised maintenance schedule.

9. Parts List and Schematics

9.1 Serinus Accessories Kit

This kit contains assorted fittings, tubing and an orifice removal tool which are useful when working on the instruments internal pneumatics. This is usually purchased with the instrument.

Table 26 – Serinus Accessories Kit (PN: H010136)

| Part Description | Part Numbers | Quantity |
|--|--------------|----------|
| Fitting Nut 1/4T KYNAR Plug | 036-130440-2 | 4 |
| Fitting, Kynar, Union Tee 1/8" Barb - 400 Series | F030007-01 | 4 |
| Fitting, Kynar, Union 1/8" Barb | F030008 | 2 |
| Kynar 1/4T Fitting Nut | F030024 | 4 |
| Adaptor, 1/4" Fitting To 1/8" Barb | H010007 | 4 |
| Adaptor, 1/4" Tube To 1/8" Barb | H010008 | 2 |
| Tool, Extraction Orifice and Filter | H010046 | 1 |
| Cap, Black Rubber, 1/8" | H030003 | 4 |
| Cap, Black Rubber, 1/4" | H030004 | 4 |
| Tubing, 1/4" OD, 1/8" ID Black | T010021 | 3 ft |
| Ecotech Tubing | T010026 | 3 ft |

9.2 Maintenance Kit

This maintenance kit is required when performing annual maintenance on the instrument. Depending on the environment that the instrument is operating, this maintenance may need to be carried out more often than yearly.

Table 27 – Serinus 50 Maintenance Kit - (PN: E020204)

| Part Description | Part Number | Quantity |
|---|-------------|----------|
| 5 g Desiccant Pack | C050014 | 2 |
| DFU, 23 Micron | F010005 | 1 |
| Kynar Male Tee Fitting | F030033-01 | 1 |
| M3 x 6 Nylon Washer Shoulder | F050040 | 2 |
| Neoprene Washer (0.174" x 0.38" x 0.016") | F050041 | 2 |
| O-Ring (BS115) | O010004 | 2 |
| O-Ring (0.364 ID X 0.070 W) | O010010 | 2 |
| O-Ring (5/32 ID X 1/16 W (BS007)) | O010013 | 5 |

| Part Description | Part Number | Quantity |
|---|-------------|----------|
| Viton O-Ring (1 11/16 ID X 3/32 W) | O010014 | 2 |
| Viton O-Ring (1/4 ID X 1/16 W) | O010015 | 2 |
| Viton O-Ring (13/16 ID X 1/16 W) | O010016 | 2 |
| Viton O-Ring (1 5/8 X 1/16) | O010017 | 1 |
| Viton O-Ring (5 ¾ ID X 3/32 W) | O010018 | 1 |
| Viton O-Ring (0.208 ID X 0.07 W) | O010021 | 1 |
| Viton O-Ring (1.739 ID X 0.07 W) | O010022 | 1 |
| Viton O-Ring (BS015) | O010023 | 4 |
| Viton O-Ring (7/8 ID X 1/16 W) | O010026 | 1 |
| Viton O-Ring (0.987 ID X 0.103 W) | O010027 | 1 |
| Viton O-Ring (1.364 ID X 0.070 W) | O010028 | 1 |
| Viton O-Ring (0.799 ID X 0.103 W) | O010029 | 1 |
| Viton O-Ring (1.862 ID X 0.103 W) | O010030 | 4 |
| Viton O-Ring (5/16 ID X 1/2 OD X 3/32 W), | O010031 | 1 |
| Viton O-RING, BS032, VITON | O010042 | 1 |
| Viton O-RING, 1.989 ID x 0.07 W, | O010054 | 2 |
| Viton O-Ring (BS038) | ORI-1019 | 1 |
| Ecotech Tubing | T010026 | 3 ft |

9.3 Consumables

Parts shown as consumables below will require replacement over the course of the instrument's lifespan.

Table 28 – Serinus 50 Consumables

| Consumable | Part Number |
|---|-------------|
| Filter Paper Teflon 47 mm pack of 50 | F010006-01 |
| 1 kg Bottle of Activated Charcoal | ECO-1035 |
| Orifice - Sample #12 | H010043-11 |
| Orifice - Sample #20 | H010043-19 |
| UV Lamp Assembly | C020076 |
| External Pump Repair Kit (suite 607 pump) | P031001 |
| Internal Pump Repair Kit (to suit KNF Pump) | P031005 |
| Zero Air Scrubber | H010038 |
| Ecotech Tubing, 25 ft Length | T010026-01 |

| Consumable | Part Number |
|------------------------|-------------|
| Annual Maintenance Kit | E020204 |

***Warranty Disclaimer:** The product is subject to a warranty on parts and labour from date of shipment (the warranty period). The warranty period commences when the product is shipped from the factory. **Lamps, fuses, batteries and consumable items are not covered by this warranty.**

Subject to use refers to variable ambient conditions, toxic gases, dirt, extremes of temperature and moisture ingress may shorten the lifespan of components.

9.4 Instrument Parts List

List of Serinus 50 components and part numbers for reference.

Note: Before refer to the spare part number confirm the part number and its location in attached drawings.

Table 29 – Spare Parts List (Main Components)

| Part Description | Part Number |
|--|-------------|
| Lamp Driver PCA | C010006-01 |
| Main Controller PCA | E020230-01 |
| Fan (Chassis and PMT Assembly) | C020058 |
| DFU, 23 Micron | F010005 |
| Calibration Valve Manifold Assembly | H010013-01 |
| Zero Air Scrubber | H010038 |
| Rear Panel PCA | C010002-10 |
| Rear Panel PCA (Network Port) | C010002 |
| Chassis Fan Filter Kit | H010044 |
| Front Panel Assembly | H010130 |
| LCD Display | D010001-50 |
| Sample Filter Holder | H010160 |
| Power Supply | P010013 |
| Reaction Cell Assembly | H012100 |
| Pressure Sensor PCA (Reaction Cell) | C010004 |
| UV Reference Detector & Preamplifier PCA | C010008 |
| Heater Thermistor Assembly (Reaction Cell) | C020074 |
| UV Lamp Assembly | C020076 |
| Gasket for Pressure Sensor PCA | H010037 |
| #12 Orifice (Reaction Cell) | H010043-11 |

| Part Description | Part Number |
|---|-------------|
| #20 Orifice (Reaction Cell) | H010043-19 |
| Retainer (Plano-Convex Lens) | H012103 |
| Retainer (Bi-Convex Lens) | H012104 |
| Optical Bandpass Filter (U340) | H012114 |
| UV Bandpass Filter | H012116 |
| Lens (Plano-Convex) | H012117 |
| Lens (Bi-Convex) | H012118 |
| PMT Assembly | H012130 |
| Cooler and Thermistor Assembly (PMT Assembly) | C020088 |
| PMT Magnetic Shield | H011204 |
| Heatsink | H011209 |
| Cold Block | H011210 |
| PMT Assembly Housing | H011212 |
| Photomultiplier Tube (PMT Assembly) | H012132 |
| Dual Hydrocarbon Kicker Assembly | H012140 |

Table 30 – Spare Parts List (Cables)

| Part Description | Part Number |
|--|-------------|
| Pressure Sensor Cable | C020062-01 |
| Display Cable | C020065 |
| Analog & Digital I/O Cable | C020066 |
| Lamp Drive Cable | C020067 |
| Heater and Thermistor Cable | C020081 |
| UV Reference Detector & Preamplifier Cable | C020090 |
| Bluetooth Cable | C020119 |
| PMT Power Supply Cable | C020050-02 |

Table 31 – Spare Parts List (O-rings)

| Part Description | Part Number |
|---|-------------|
| O-ring 1/4 ID X 1/16 W (Calibration Valve Manifold) | O010015 |
| O-ring 1.862 ID X 0.103 W (Zero Air Scrubber) | O010030 |
| O-ring 1.989 ID X 0.07 W (Sample Filter) | O010054 |
| O-ring 11/16 ID X 3/32 W (UV Lamp Holder) | O010004 |
| O-ring 5/32 ID X 1/16 W (Reaction Cell Orifice) | O010013 |

| Part Description | Part Number |
|--|-------------|
| O-ring 1-5/8 ID X 1/16 W (Optical Bandpass Filter Cover) | O010017 |
| O-ring 0.208 ID X 0.07 W (Test Lamp Plug) | O010021 |
| O-ring 7/8 ID X 1/16 W (UV Bandpass Filter) | O010026 |
| O-ring 0.987 ID X 0.103 W (Lens, Plano-Convex) | O010027 |
| O-ring 1.364 ID X 0.070 W (Reaction Cell) | O010028 |
| O-ring 0.799 ID X 0.103 W (Lens, Bi-Convex) | O010029 |
| O-ring 5/16 ID X 1/2 OD X 3/32 W (UV Reference Detector) | O010031 |
| O-ring, BS032 (Optical Bandpass Filter Cover) | O010042 |
| O-ring, BS038 (Reaction Cell) | ORI-1019 |
| O-ring 1 1/4 ID X 1/16 W (Optical Bench Housing Plug) | 25000419-4 |
| O-ring 1.739 ID X 0.07 W (PMT Cable Desiccant Cap) | O010022 |
| O-ring 5-3/4 ID X 3/32 W (PMT Assembly Housing) | O010018 |

Table 32 – Spare Parts List (Fittings)

| Part Description | Part Number |
|---|-------------|
| Kynar Union Fitting | F030022 |
| 1/4" PTEF Straight Ferrule | F030028 |
| Nut 1/4T Steel Gripper Fitting | F030029 |
| Kynar Union Elbow Fitting | F030030 |
| 1/4"-1/8" PTFE Ferrule Reducing | F030031 |
| 1/4T Compression Fitting Nut | F030202-01 |
| 1/4T Suit Compression Ferrule | F030203-01 |
| 1/4T Union Tee Fitting | F030210-01 |
| 1/4" to 1/8" Adaptor Fitting | H010007 |
| Male Connector Fitting | F030200-01 |
| Kynar Male Elbow Fitting | F030032-02 |
| Male Elbow Fitting | F030201-01 |
| Kynar Bulkhead Union Fitting | F030023 |
| Male Elbow Fitting | F030025 |
| Kynar Male Branch Tee Fitting | F030033-01 |
| M3 X 10 Spacer | F050061 |
| Shoulder Washer M3 X 6 | F050040 |
| Washer 0.178 X 0.38 X 0.016 | F050041 |
| Kynar Fitting Nut 1/4T (Double Plastic Ferrule) | F030024 |

| Part Description | Part Number |
|-------------------------|-------------|
| Kynar Union Tee Fitting | F030034-01 |
| Adaptor Tee Fitting | F030211-01 |

Table 33 – Spare Parts List (Miscellaneous)

| Part Description | Part Number |
|--|-------------|
| Fan Bracket (PMT Assembly) | H010005 |
| PCB Support Bracket | H010011-01 |
| Filter Felt | F010010 |
| Scrubber Body | H010049 |
| Scrubber Cap | H010050 |
| Scrubber Support Screen | H010051 |
| Scrubber Spacer | H010052 |
| 9/16" High Foot Bumper | H010039 |
| Black Blanking Plug | H010041 |
| Front Panel Clearance Spacer | H010064 |
| Network Port Blanking Plug | H010067 |
| Main Controller PCA Support Bracket (Rear Panel Side) | H010111 |
| Sample Filter Mounting Plate | H010126 |
| Roller Bearing | H010131 |
| Power Supply Bracket | H010138 |
| Rear Panel | H010142 |
| Push Button Slam Lock | H030114 |
| Nylon P Clip, 1/2" (12.7 mm) | H030149 |
| Scrubber Support Ring | H010113 |
| Main Controller PCA Support Bracket (Front Panel Side) | H010117 |
| Plug | H010026 |
| Reaction Cell Block | H012101-01 |
| Retainer (Optical Bandpass Filter) | H012102 |
| Reaction Cell Bracket | H012105 |
| Reaction Cell Housing Plug | H012106 |
| Adaptor (Reaction Cell to PMT Assembly) | H012107 |
| Baffle (Reaction Cell) | H012109 |
| Dump (Reaction Cell) | H012111 |
| Retainer (UV Reference Detector) | H012112 |

| Part Description | Part Number |
|---|-------------|
| UV Lamp Block | H012121 |
| Baffle (UV Bandpass Filter) | H012122 |
| Retainer (UV Bandpass Filter) | H012123 |
| UV Lamp Collet (Stright Through) | H012124 |
| UV Lamp Collet (Blind) | H012125 |
| Cover (Lamp Driver PCB) | H012108 |
| Tie Bar (Reaction Cell to PMT Assembly) | H012113 |
| Heatsink Bracket | H010006 |
| Heatsink Spacer | H011208 |
| Optical Bench Housing Plug | H011213 |
| Ecotech Tubing | T010026 |
| 1/4" Teflon Tubing | TUB-1007 |
| 8 GB USB Memory Stick | H030021 |
| Cable Clip Mount 13.5 X 14 mm (L X H) | H030121 |
| Cable Clip Mount 13.5 X 14 mm (L X H) | H030122 |
| USB Cable | COM-1440 |
| Thumb Screw (Rear Panel) | F050037 |
| Thumb Screw (Main Controller PCA) | F050120 |
| Green Ecotech Resources USB Stick | H030137-01 |
| Cable Tie Mount | 060-060130 |

Table 34 – Spare Parts List (Shipping)

| Part Description | Part Number |
|--------------------------------|-------------|
| Desiccant Pack (5 gm) | C050014 |
| Shipping Box | B010002 |
| End Caps (Pair) | B010026 |
| Plastic Bag 760 X 1000 50 X UM | B020001 |
| Mid Support Cap | B010034 |
| Desiccant Pack (25 gm) | C050012 |

9.4.1 Optional Extras Spare Part List

Table 35 – Spare Part List (Test Lamp)

| Part Description | Part Number |
|------------------|-------------|
| Test Lamp | C020068-01 |
| Quartz Window | H010002 |

Table 36 – Spare Part List (Internal Pump)

| Part Description | Part Number |
|---------------------------------------|-------------|
| Pressure Sensor Cable | C020062-02 |
| Heater and Thermistor Cable | C020083 |
| DFU, 23 Micron | F010005 |
| Internal Pump | H010027 |
| Scrubber Assembly | H010038 |
| #10 Orifice | H010043-09 |
| Scrubber Support Ring | H010113 |
| Flow Block Thermal Isolator | H010119 |
| Flow Block Assembly | H010120 |
| Lamp Driver PCA Bracket | H012115 |
| Scrubber Assembly Bracket | H012172 |
| Cable Clip Mount 13.5 X 14 mm (L X H) | H030121 |
| Stop Valve | H030170 |
| O-ring, 5/32 ID X 1/16 W | O010013 |

Table 37 – Spare Part List (Metric Fittings Kit)

| Part Description | Part Number |
|---|-------------|
| Metric Fitting Kit | E020122 |
| Nut 1/4T Steel Gripper Fitting | F030029 |
| Reducing Ferrule, 1/4 - 6 mm | F030071 |
| Swagelok Fitting, Nut & Ferrule Set, 6 mm (Only for High Pressure Zero/Span Option) | F030077 |

Table 38 – Spare Part List (IZS)

| Part Description | Part Number |
|--------------------------------------|-------------|
| IZS Heater Cable for Permeation Oven | C020092 |
| 1/4" PTEF Straight Ferrule | F030028 |
| Nut 1/4T Steel Gripper Fitting | F030029 |
| KYNAR Union Tee Fitting | F030034-02 |
| 1/4T Compression Fitting Nut | F030202-01 |
| 1/4T Suit Compression Ferrule | F030203-01 |
| 1/4T Union Tee Fitting | F030210-01 |
| 1/4" to 1/8" Adaptor Fitting | H010007 |
| #5 Orifice with O-Ring Groove | H010043-03 |
| IZS Calibration Valve Manifold | H010056 |
| Lamp Driver PCA Bracket (Vertical) | H012115 |
| IZS Permeation Oven Assembly | H012170 |
| Scrubber Bracket | H012172 |
| O-ring, 5/32 ID X 1/16 W | O010013 |

Table 39 – Spare Part List (High Pressure Zero/Span Valves)


| Part Description | Part Number |
|---|-------------|
| Bulkhead Fitting 1/4 T, SS | 98300076 |
| O-ring, BS015 | O010023 |
| Swagelok fitting pipe adaptor 1/4" T - 1/8" NPT, SS | 28590462-3 |
| #12 Orifice | H010043-11 |
| O-ring, 5/32 ID X 1/16 W | O010013 |
| M12 Star Washer | F050131 |
| M12 Flat Washer | F050130 |
| High Pressure Valve Assembly (Exclude the Orifice and O-Ring) | H050043 |

Table 40 – Spare Part List (Trace Level Instrument)

| Part Description | Part Number |
|------------------------------|-------------|
| Trace Reaction Cell Assembly | H012100-02 |


9.5 Plumbing Schematic - (PN: D020003)

Serinus 50 and Serinus 50 TRACE - SO₂

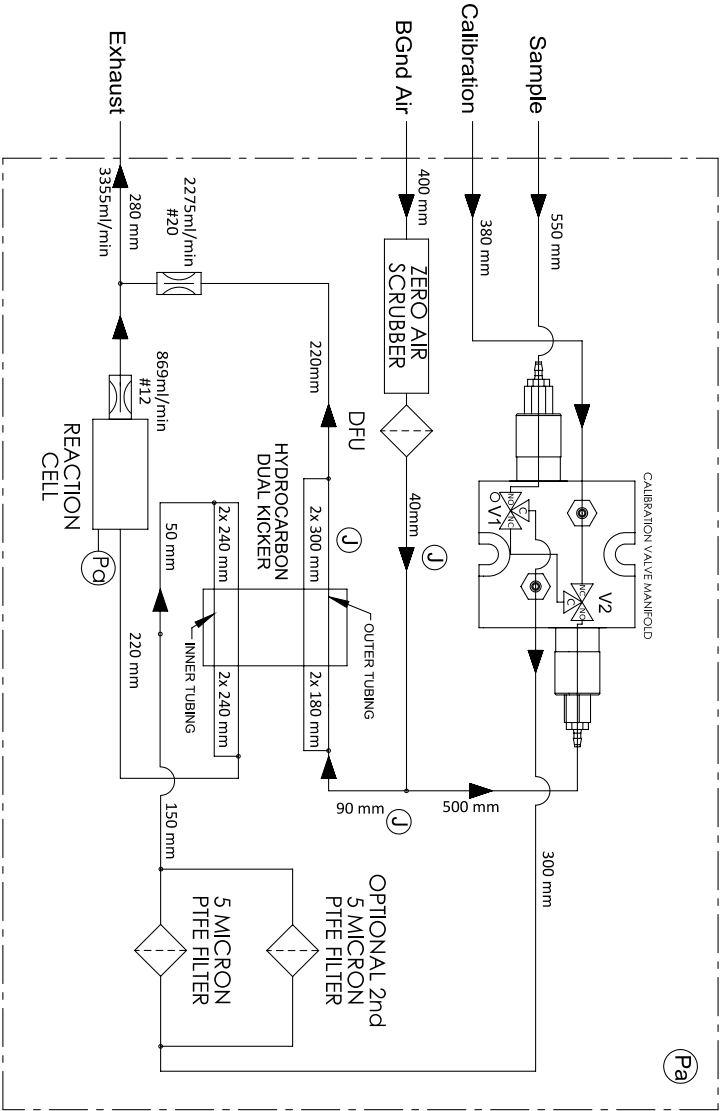




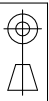

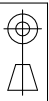

| | | | | | | | | | | | | | |
|--|-------|------------|-------|---------------|---------------------------|--|--|--------------------|--|-------------------|--|--|--|
|  ecoelm 1492 Fernree Gully Road Knowfield, Australia, 3180 | | | | SCALE: | | | | SHEET SIZE: | | MATERIALS: | | TITLE: | |
| | | | | 1:2 | | | | A4 | | N/A | | PLUMBING SCHEMATIC, SERINUS 50 & 50 TRACE | |
| | | | | SHEET 1 OF 1 | | | | | | | | | |
| THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF ECOTECH PTY LTD. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF ECOTECH PTY LTD IS PROHIBITED. | | | | PART NO: | | | | D020003 | | | | | |
| 7358 | JAM | 25/05/2021 | TBE | 26/05/2021 | UPDATED TUBING AS PER ECN | | | J | | | | | |
| EC | DRAWN | DATE | CHECK | DATE | DESCRIPTION | | | REV. | | | | | |

9.6 Internal Pump Plumbing Schematic - (PN: D020006)

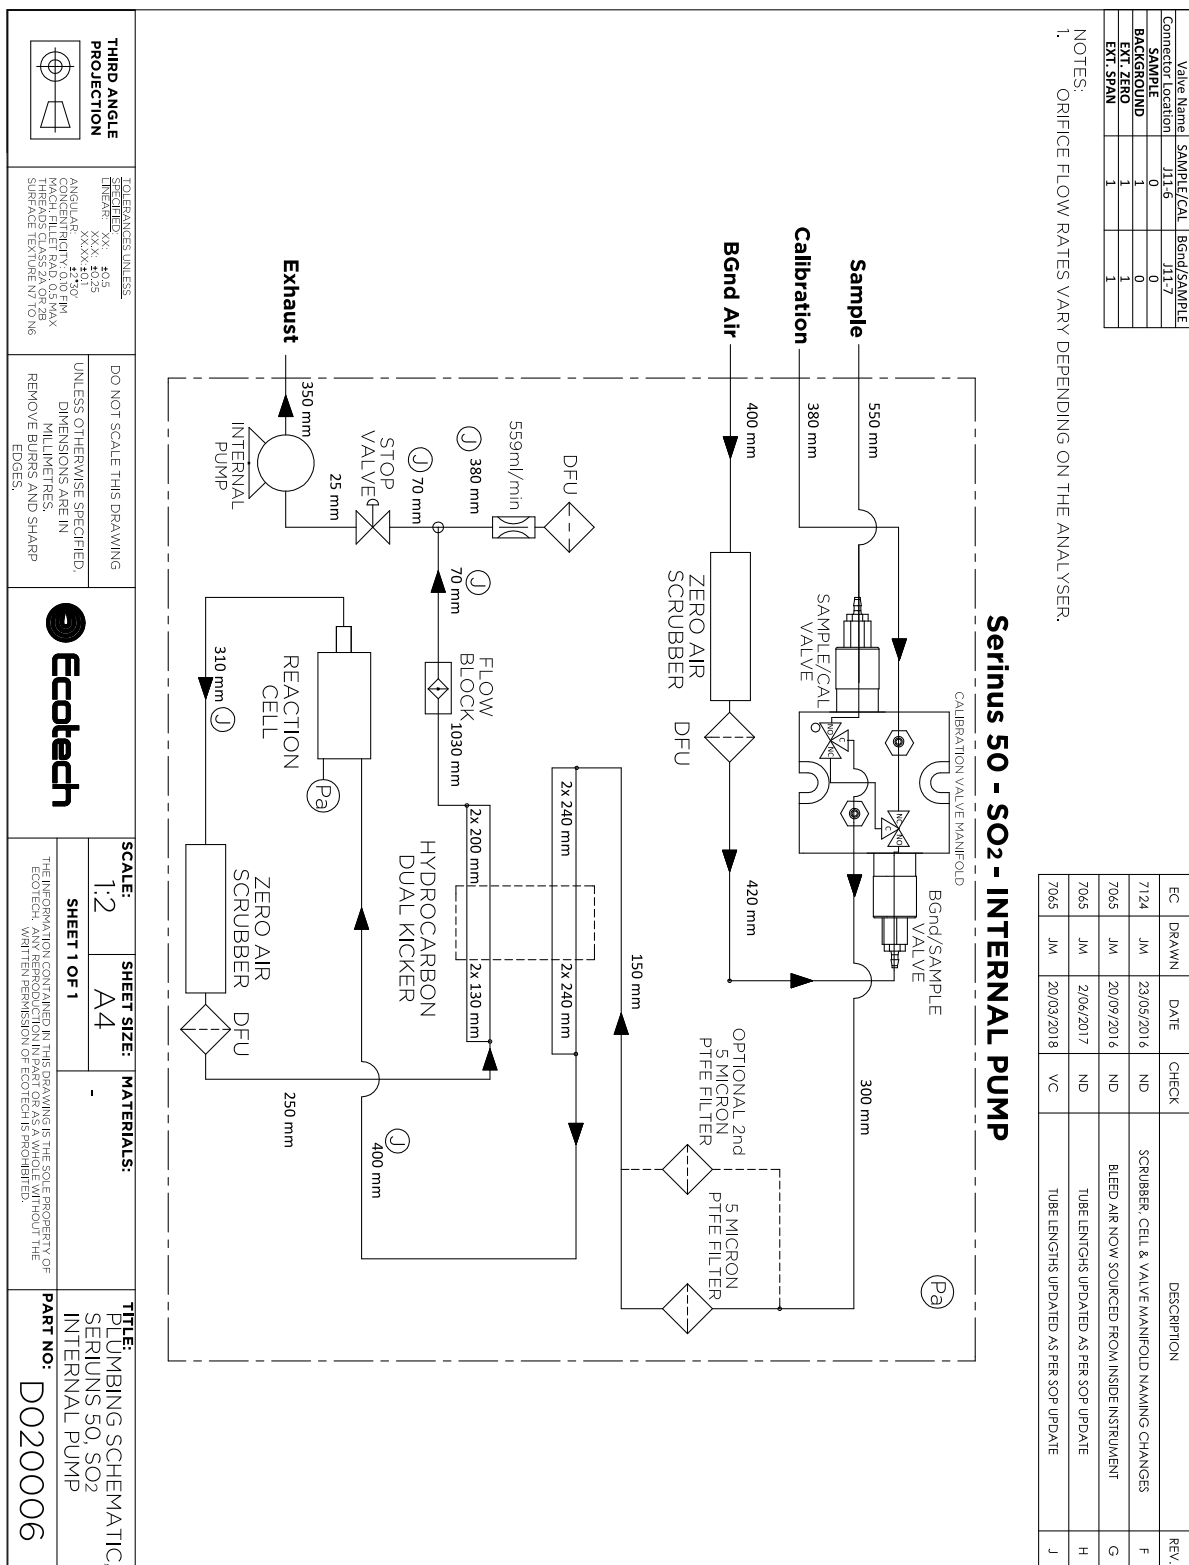


9.7 IZS Plumbing Schematic - (PN: D020053)

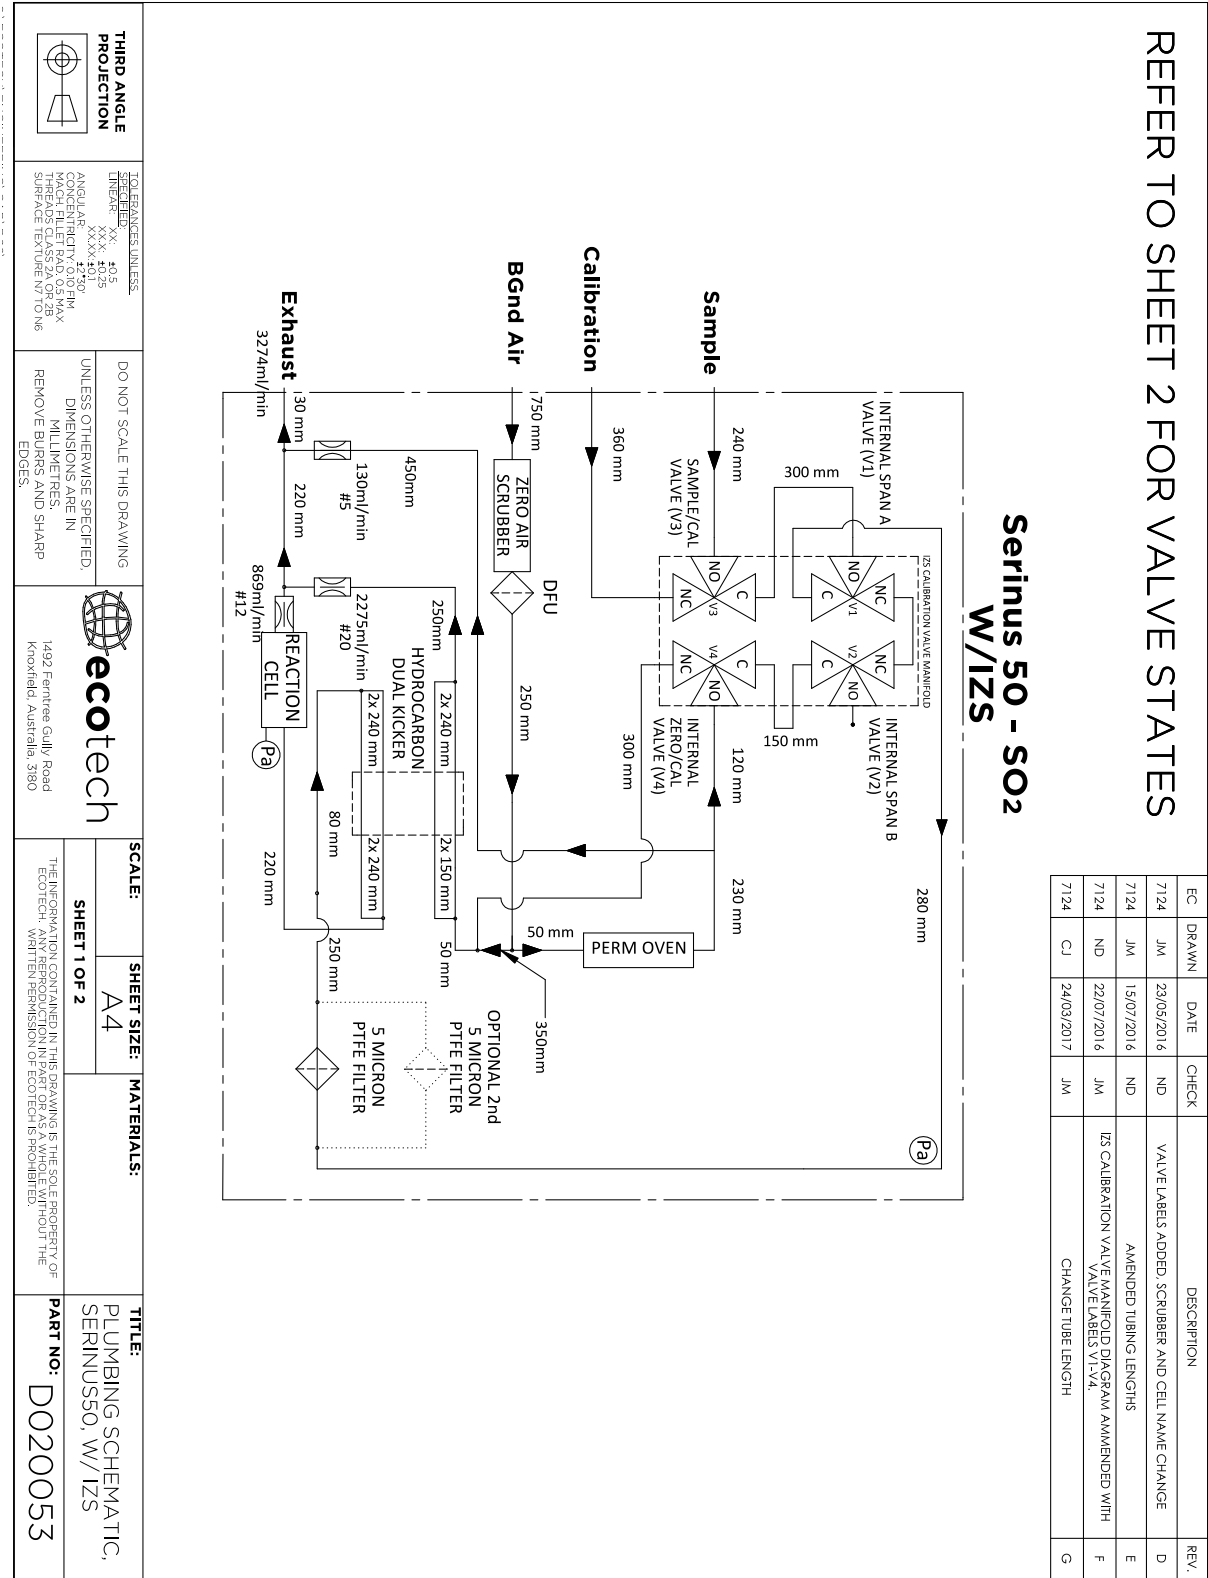

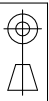
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|---|---------------------------|--|-------------------------------------|---|---------------------------------------|--|--|---|--|--|--------------------|--|-----|---|--------------------------|--|--|---|---------------|---------------|--------------------|-------------------------------------|-------------------------------------|--------------------------------|---------------------------------------|---------------------|----------------|-----|---------------|-----|---|--|-----------------------|----|----|-----|----|--|-----------------------|-----|-----|----|-----|--|-----------------------|----|----|-----|-----|--|-----------------------|-----|-----|----|-----|--|---------------------------|----|----|-----|----|
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| <table><tr><td colspan="5">VALVE STATES</td></tr><tr><td colspan="5">ITS CALIBRATION MANIFOLD</td></tr><tr><td colspan="2"></td><td>(V1) - (J11-8) (INTERNAL SPAN A)</td><td>(V2) - (J11-9) (INTERNAL SPAN B)</td><td>(V3) - (J11-6) (SAMPLE/CAL)</td><td>(V4) - (J11-7) (INTERNAL ZERO/CAL)</td></tr><tr><td>MODE</td><td>SAMPLE MEASURE</td><td>OFF</td><td>OFF</td><td>OFF</td><td>OFF</td></tr><tr><td></td><td>INTERNAL ZERO MEASURE</td><td>ON</td><td>ON</td><td>OFF</td><td>ON</td></tr><tr><td></td><td>EXTERNAL ZERO MEASURE</td><td>OFF</td><td>OFF</td><td>ON</td><td>OFF</td></tr><tr><td></td><td>INTERNAL SPAN MEASURE</td><td>ON</td><td>ON</td><td>OFF</td><td>OFF</td></tr><tr><td></td><td>EXTERNAL SPAN MEASURE</td><td>OFF</td><td>OFF</td><td>ON</td><td>OFF</td></tr><tr><td></td><td>BACKGROUND SAMPLE MEASURE</td><td>ON</td><td>ON</td><td>OFF</td><td>ON</td></tr></table> | | | | | | | | | | VALVE STATES | | | | | ITS CALIBRATION MANIFOLD | | | | | | | (V1) - (J11-8) (INTERNAL SPAN A) | (V2) - (J11-9) (INTERNAL SPAN B) | (V3) - (J11-6) (SAMPLE/CAL) | (V4) - (J11-7) (INTERNAL ZERO/CAL) | MODE | SAMPLE MEASURE | OFF | OFF | OFF | OFF | | INTERNAL ZERO MEASURE | ON | ON | OFF | ON | | EXTERNAL ZERO MEASURE | OFF | OFF | ON | OFF | | INTERNAL SPAN MEASURE | ON | ON | OFF | OFF | | EXTERNAL SPAN MEASURE | OFF | OFF | ON | OFF | | BACKGROUND SAMPLE MEASURE | ON | ON | OFF | ON |
| VALVE STATES | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| ITS CALIBRATION MANIFOLD | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | (V1) - (J11-8) (INTERNAL SPAN A) | (V2) - (J11-9) (INTERNAL SPAN B) | (V3) - (J11-6) (SAMPLE/CAL) | (V4) - (J11-7) (INTERNAL ZERO/CAL) | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| MODE | SAMPLE MEASURE | OFF | OFF | OFF | OFF | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | INTERNAL ZERO MEASURE | ON | ON | OFF | ON | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | EXTERNAL ZERO MEASURE | OFF | OFF | ON | OFF | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | INTERNAL SPAN MEASURE | ON | ON | OFF | OFF | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | EXTERNAL SPAN MEASURE | OFF | OFF | ON | OFF | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | BACKGROUND SAMPLE MEASURE | ON | ON | OFF | ON | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| <table><tr><td colspan="2">THIRD ANGLE PROJECTION </td><td colspan="2">TOLERANCES UNLESS SPECIFIED: DIMENSION: XX: ±0.5 XXX: ±0.25 XXXX: ±0.125 ANGULAR DIMENSIONS: ±1.0° MAX. HOLE FILLER: 0.10 FILL MAX. HOLE FILLER: 0.10 FILL SURFACE TEXTURE: N7 TO N6</td><td colspan="2">DO NOT SCALE THIS DRAWING UNLESS OTHERWISE SPECIFIED, DIMENSIONS ARE IN MILLIMETRES. REMOVE BURS AND SHARP EDGES.</td><td colspan="2"> 1492 Fernree Gully Road Knoxfield, Australia, 3160</td><td colspan="2"><table><tr><td>SCALE:</td><td>SHEET SIZE:</td><td>MATERIALS:</td></tr><tr><td>1:2</td><td>A4</td><td></td></tr><tr><td colspan="3">SHEET 2 OF 2</td></tr></table></td><td colspan="2">TITLE:</td></tr><tr><td colspan="8"><small>THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF ECOTECH. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF ECOTECH IS PROHIBITED.</small></td><td colspan="2">PART NO:</td></tr></table> | | | | | | | | | | THIRD ANGLE PROJECTION  | | TOLERANCES UNLESS SPECIFIED: DIMENSION: XX: ±0.5 XXX: ±0.25 XXXX: ±0.125 ANGULAR DIMENSIONS: ±1.0° MAX. HOLE FILLER: 0.10 FILL MAX. HOLE FILLER: 0.10 FILL SURFACE TEXTURE: N7 TO N6 | | DO NOT SCALE THIS DRAWING UNLESS OTHERWISE SPECIFIED, DIMENSIONS ARE IN MILLIMETRES. REMOVE BURS AND SHARP EDGES. | |  1492 Fernree Gully Road Knoxfield, Australia, 3160 | | <table><tr><td>SCALE:</td><td>SHEET SIZE:</td><td>MATERIALS:</td></tr><tr><td>1:2</td><td>A4</td><td></td></tr><tr><td colspan="3">SHEET 2 OF 2</td></tr></table> | | SCALE: | SHEET SIZE: | MATERIALS: | 1:2 | A4 | | SHEET 2 OF 2 | | | TITLE: | | <small>THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF ECOTECH. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF ECOTECH IS PROHIBITED.</small> | | | | | | | | PART NO: | | | | | | | | | | | | | | | | | | | | | | |
| THIRD ANGLE PROJECTION  | | TOLERANCES UNLESS SPECIFIED: DIMENSION: XX: ±0.5 XXX: ±0.25 XXXX: ±0.125 ANGULAR DIMENSIONS: ±1.0° MAX. HOLE FILLER: 0.10 FILL MAX. HOLE FILLER: 0.10 FILL SURFACE TEXTURE: N7 TO N6 | | DO NOT SCALE THIS DRAWING UNLESS OTHERWISE SPECIFIED, DIMENSIONS ARE IN MILLIMETRES. REMOVE BURS AND SHARP EDGES. | |  1492 Fernree Gully Road Knoxfield, Australia, 3160 | | <table><tr><td>SCALE:</td><td>SHEET SIZE:</td><td>MATERIALS:</td></tr><tr><td>1:2</td><td>A4</td><td></td></tr><tr><td colspan="3">SHEET 2 OF 2</td></tr></table> | | SCALE: | SHEET SIZE: | MATERIALS: | 1:2 | A4 | | SHEET 2 OF 2 | | | TITLE: | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| SCALE: | SHEET SIZE: | MATERIALS: | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 1:2 | A4 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| SHEET 2 OF 2 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| <small>THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF ECOTECH. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF ECOTECH IS PROHIBITED.</small> | | | | | | | | PART NO: | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |

9.8 Block Wiring Schematic - (PN: D020105)

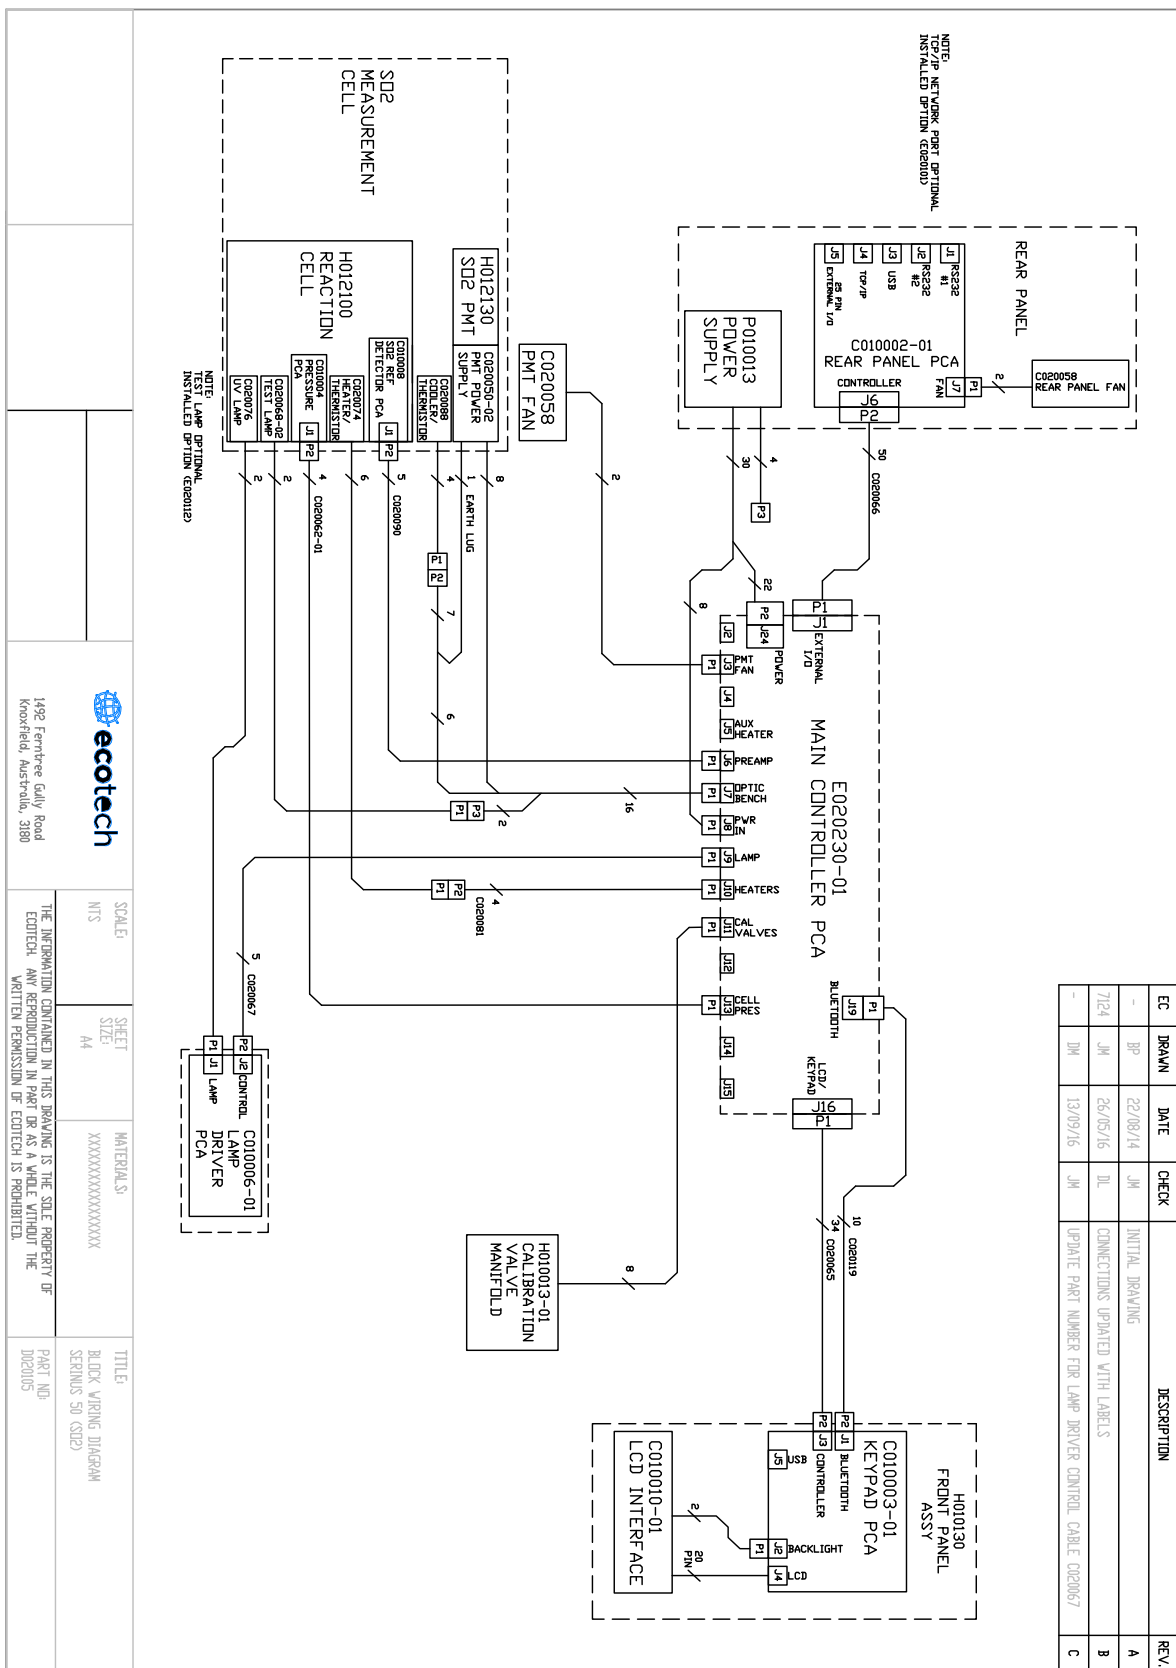

9.11 Reaction Cell Assembly - (PN: H012100)

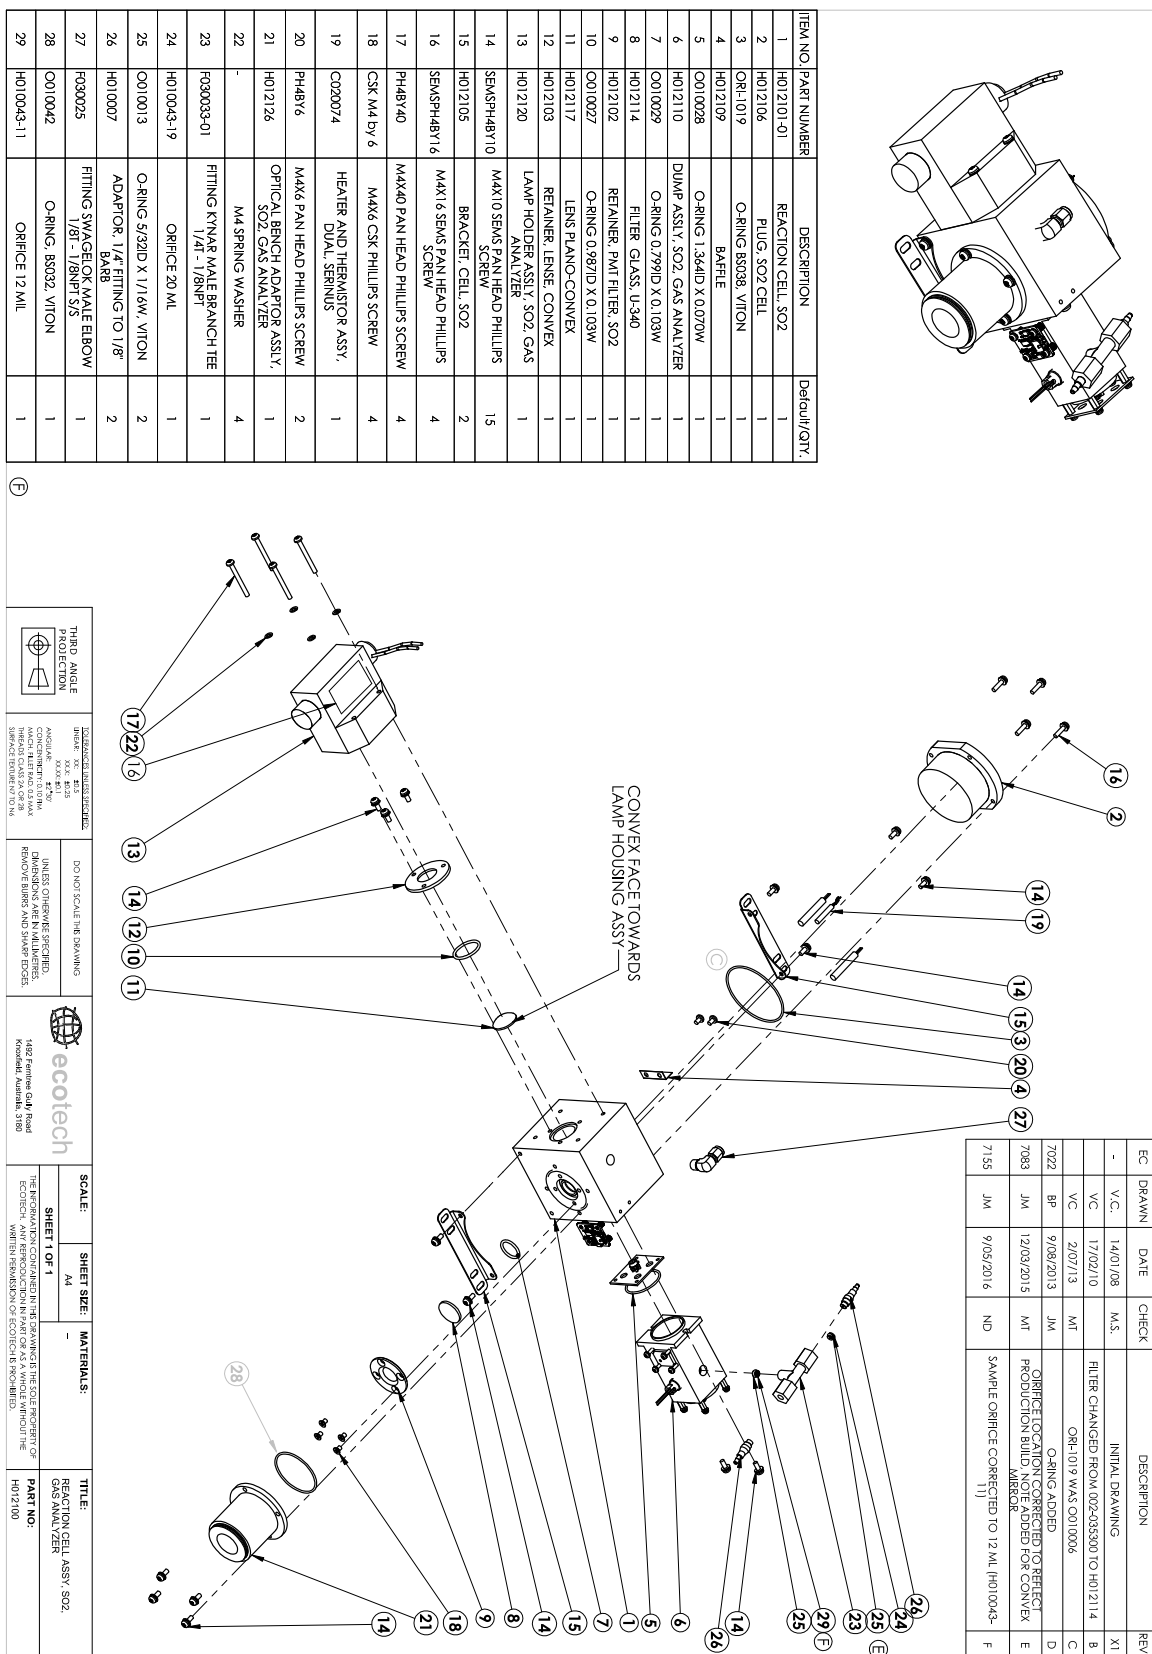

9.12 Lamp Holder Assembly - (PN: H012120)

ARROW ON LENSE
FRAME TO FACE CELL

| ITEM NO. | PART NUMBER | DESCRIPTION | QTY. |
|----------|-------------|-----------------------------------|------|
| 1 | H012121 | LAMP HOLDER, SO2 CELL | 1 |
| 2 | C020076 | LAMP ASSY, UV, SO2, GAS ANALYZER | 1 |
| 3 | H012125 | COLLET, SHORT, UV LAMP | 1 |
| 4 | H012124 | COLLET, LONG, UV LAMP | 1 |
| 5 | H012123 | REMAINER, LAMP FILTER, SO2 | 1 |
| 6 | H012122 | BAFFLE, LAMP, SO2 CELL | 1 |
| 8 | F050010 | M3X10 SEMSPAN HEAD PHILLIPS SCREW | 3 |
| 9 | H012116 | LENS UV FILTER | 1 |
| 10 | O010004 | O-RING BSI15, VITON | 2 |
| 11 | O010026 | O-RING 7/8ID X 1/16W, VITON | 1 |

THIRD ANGLE PROJECTION

TOLERANCES UNLESS SPECIFIED:

LINEAR: XX: .005

ANGULAR: XX.X: .015

CONCENTRICITY: .010 PM

MACH. FINISH: 0.5 MAX

THREADS: CLASS 2A OR 2B

SURFACE TEXTURE: IN7 TO N6

DO NOT SCALE THE DRAWING

UNLESS OTHERWISE SPECIFIED, DIMENSIONS ARE IN MILLIMETERS. REMOVE BURRS AND SHARP EDGES.

ECOTECH
environmental
1492 Fernside Gully Road
Knoxfield, Australia, 3180

SCALE: A4

SHEET 1 OF 2

THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF ECOTECH. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF ECOTECH IS PROHIBITED.


TITLE: LAMP HOLDER ASSY, SO2, GAS ANALYZER

PART NO: H012120


| EC | DRAWN | DATE | CHECK | DESCRIPTION | REV. |
|------|-------|------------|-------|--|------|
| | V.C. | 27/03/08 | D.B. | INITIAL DRAWING | A |
| 7083 | JM | 12/03/2015 | MT | NOTE ADDED FOR H012116, UV LAMP MOVED TO REFLECT CORRECT FITMENT | B |

Page 216

9.13 Dump Assembly - (PN: H012110)

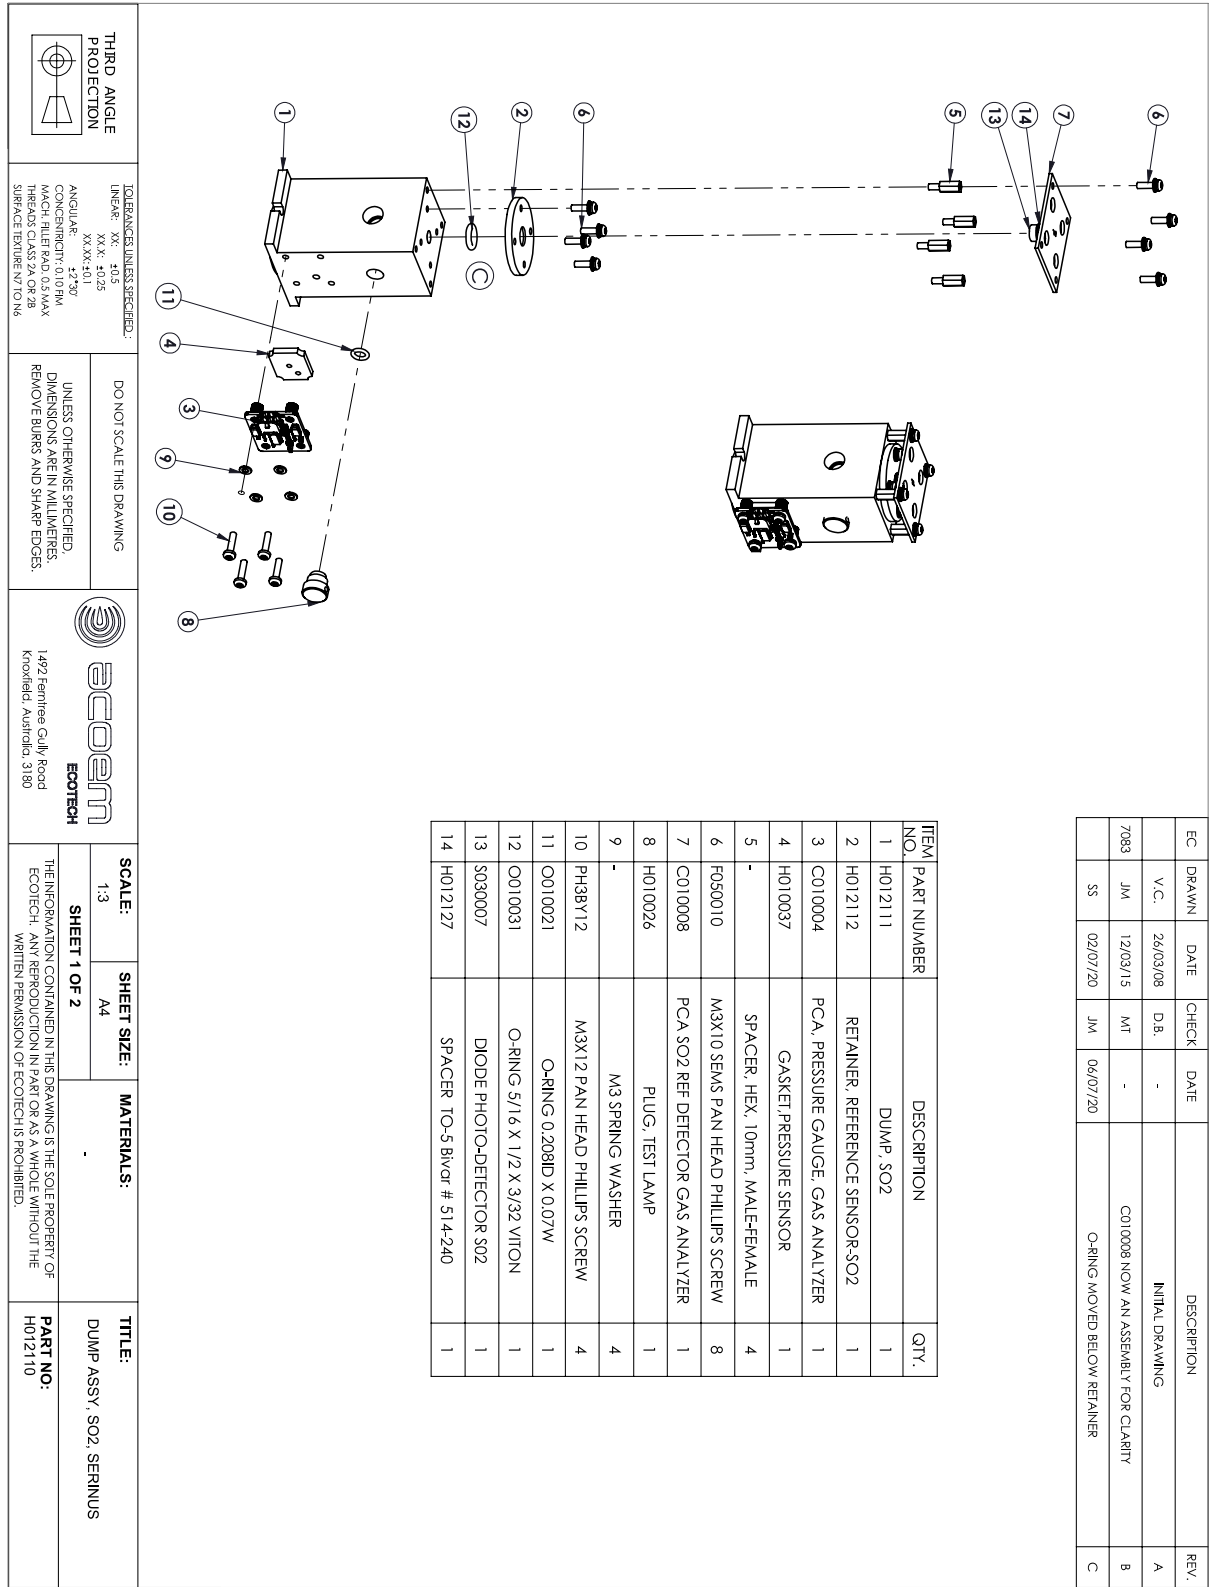

9.14 Permeation Oven Assembly - (PN: H012170)

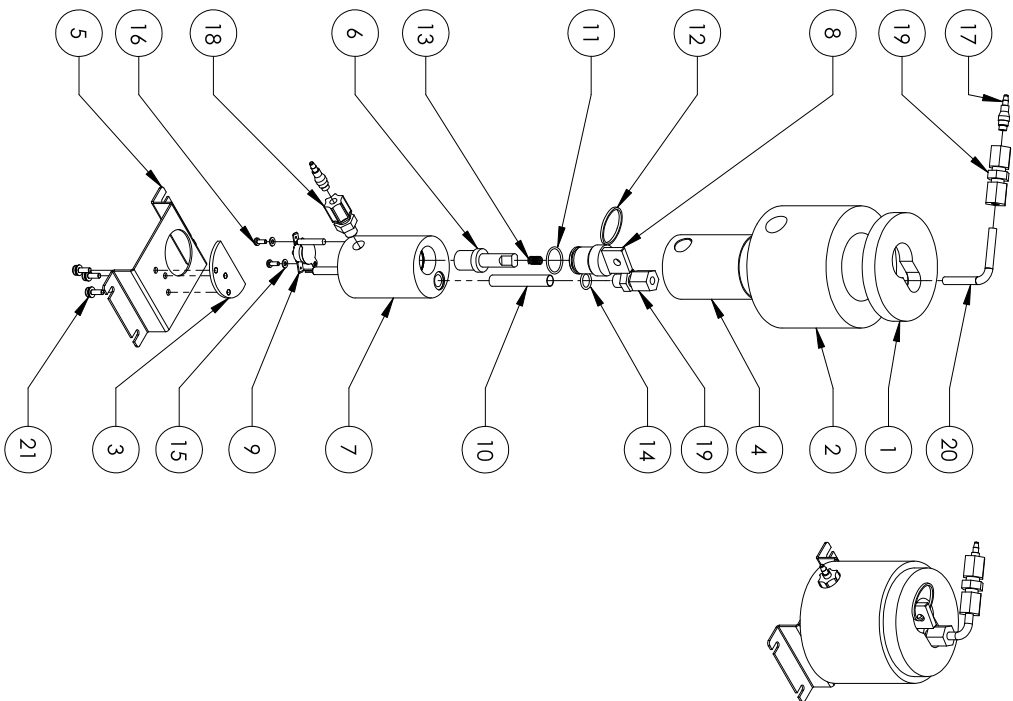


| EC | DRAWN | DATE | CHECK | DESCRIPTION | REV |
|----|-------|------------|-------|---------------|-----|
| - | ND | 13/08/2015 | JM | INITIAL ISSUE | A |

| ITEM NO. | PART NUMBER | DESCRIPTION | QTY. |
|----------|--------------|--|------|
| 1 | 98000217 | INSULATOR, FRONT, PERM CHAMBER | 1 |
| 2 | 98000216 | INSULATOR TUBE, PERM CHAMBER | 1 |
| 3 | 98000220 | INSULATOR, PERM CHAMBER BRACKET | 1 |
| 4 | 95080027 | INSULATOR, PERM CHAMBER | 1 |
| 5 | H011142 | BRACKET, PERM OVEN | 1 |
| 6 | REF. | PERM TUBE (FOR REFERENCE) | 1 |
| 7 | 98000212 | PERM CHAMBER | 1 |
| 8 | 98000213 | PLUG, PERM CHAMBER | 1 |
| 9 | C020091 | HEATER AND THERMISTOR ASSY, IZS, SERINUS | 1 |
| 10 | 95080024 | SCREEN, PERM CHAMBER | 1 |
| 11 | 25000447-018 | O-RING 3/4ID X 1/16W, VITON 2-018 | 1 |
| 12 | 28250003-221 | SPLIT RING, ST-ZL, 1 1/4" DIA | 1 |
| 13 | H010040 | SPRING COMPRESSION, 0.24 DIA 0.630 mm wire | 1 |
| 14 | O010011 | O-RING 0.426ID X 0.070W | 1 |
| 15 | FAS-M32P-21 | WASHER, FLAT, M3 | 2 |
| 16 | PH38Y8 | M3X8 PAN HEAD PHILLIPS SCREW | 2 |
| 17 | H010007 | ADAPTOR, 1/4" FITTING TO 1/8" BARB | 2 |
| 18 | F030020 | FITTING KYNAR MALE CONNECTOR 1/4T - 1/8NPT | 1 |
| 19 | F030022 | FITTING KYNAR UNION 1/4T - 1/4T | 2 |
| 20 | TUB-1007 | TUBING TEFLON 1/4 MEDIUM WALL 1/4 X 5/32 NAT FEP | 80mm |
| 21 | F050023 | M4 X 12 SEMS | 3 |


| | | | |
|---|-------------|---------------------------|-------------------------------------|
| SCALE: | SHEET SIZE: | MATERIALS: | TITLE: |
| 1:5 | A4 | SEE INDIVIDUAL COMPONENTS | PERM OVEN ASSEMBLY, IZS, SERINUS |
| SHEET 1 OF 1 | | | PART NO: H012170 |
| <p>THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF ECOTECH. ANY REPRODUCTION OR FURTHER DISTRIBUTION WITHOUT THE WRITTEN PERMISSION OF ECOTECH IS PROHIBITED.</p> | | | |

9.15 Sample Filter Holder Assembly - (PN: H010160)

| ITEM NO. | PART NUMBER | DESCRIPTION | QTY. |
|----------|-------------|---|------|
| 1 | H010161 | BASE, SAMPLE FILTER, 47MM, SERINUS | 1 |
| 2 | H010152 | CAP, SEALING, SAMPLE FILTER, SERINUS | 1 |
| 3 | H010153 | SAMPLE FILTER 47MM RETAINING RING | 1 |
| 4 | O010054 | O-RING, BS224, VITON | 1 |
| 5 | H010021 | SAMPLE FILTER BRACKET | 1 |
| 6 | FAS-M4ZP-2 | M4X8 ZP PAN PHILLIPS | 2 |
| 7 | F010006-02 | FILTER, PAPER, 47mm, 5 MICRON, PTFE | 1 |
| 8 | F030200 | FITTING MALE STRAIGHT WITH BARB 1/4" - 1/8NPT | 1 |
| 9 | F030201 | FITTING MALE ELBOW WITH BARB 1/4" - 1/8NPT | 1 |

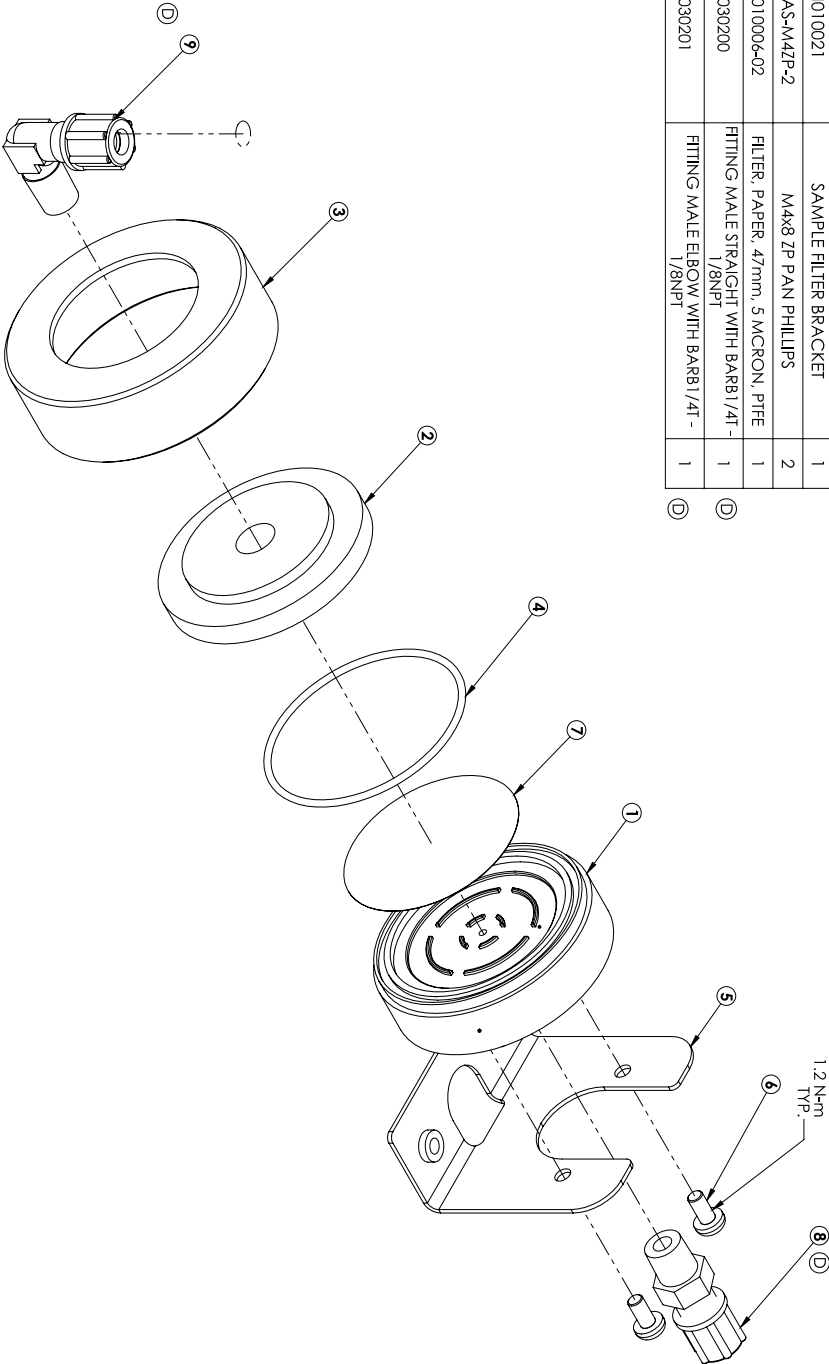

| EC | DRAWN | DATE | CHECK | DATE | DESCRIPTION | REV. |
|------|-------|------------|-------|------------|---------------------------------|------|
| 7151 | JM | 09/04/2018 | VC | | INITIAL DRAWING | A |
| 7151 | JM | 17/01/2019 | VC | | ADDED MISSING FILTER F010006-02 | B |
| 7298 | JM | 25/02/2021 | | | ADDED FASTENERS TORQUE VALUE | C |
| 7356 | SJS | 4/05/2021 | JAM | 11/05/2021 | FITTING UPDATED AS PER ECN | D |

| | | | |
|---|----|---|-------------|
| DO NOT SCALE THE DRAWING | | UNLESS OTHERWISE SPECIFIED, DIMENSIONS ARE TO BE TAKEN FROM THE DRAWING AND NOT FROM THE PARTS. | |
|  1482 Ferntree Gully Road Knoxfield, Australia, 3110 | | SCALE: | SHEET SIZE: |
| NTS | A3 | SHEET 1 OF 1 | MATERIALS: |
| SEE BOM | | TITLE: | |
| THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF ECO-TECH. ANY REUSE OR REPRODUCTION OF THIS DRAWING WITHOUT THE WRITTEN PERMISSION OF ECO-TECH IS PROHIBITED. | | PART NO: | |
| | | H010160 | |

9.16 Calibration Valve Manifold Assembly - (PN: H010013-01)

| EC | DRAWN | DATE | CHECK | DATE | DESCRIPTION | REV. |
|------|-------|------------|-------|------------|-------------------------------------|------|
| | VC | 16/03/10 | | | INITIAL DRAWING | X1 |
| | BP | 22/08/2014 | JM | | BOM ADDED | B |
| | ND | 9/11/2015 | JM | | COMPANY LOGO UPDATED IN TITLE BLOCK | C |
| 7154 | JM | 3/05/2016 | ND | | FITTING CHANGED AS PER EC | D |
| 7358 | SKS | 4/05/2021 | JAM | 11/05/2021 | FITTING UPDATED AS PER ECN | E |

NOTES:

1. VALVES MUST BE FREE OF DIRT, GREASE OR ANY OTHER FOREIGN MATERIAL.
2. THREADS MUST BE SEALED WITH SWAGelok THREAD TAPE.
3. MANIFOLD BLOCK MUST BE FREE OF DIRT GREASE OR ANY OTHER FOREIGN MATERIAL. ASSEMBLY MUST PASS LEAK TEST UNDER VACUUM OF -90 KPA. MAX DROP ALLOWED IS 2 KPA IN 5 MINS.
- 4.

VALVE 1
CABLE LENGTH 190 mm
CONNECT TO PINS 1 AND 6
ON THE CONNECTOR

CABLE TIE
2-PLACES

MICROFIT RECEPTACLE
FREE 10 WAY MOLEX

VALVE 2
CABLE LENGTH 250 mm
CONNECT TO PINS 2 & 7
ON THE CONNECTOR

| ITEM NO. | PART NUMBER | DESCRIPTION | QTY. |
|----------|-------------|---|------|
| 1 | H010014-01 | VALVE MANIFOLD | 1 |
| 2 | H010042 | VALVE MANIFOLD MOUNT, 3 WAY, 12VDC | 2 |
| 3 | F030200 | FITTING, MALE CONNECTOR 1/8NPT - 1/8 BARB | 4 |

SCALE: NTS
SHEET 1 OF 1
A4
SEE BOM

MATERIALS:

TITLE: CALIBRATION VALVE MANIFOLD


PART NO: H010013-01

DO NOT SCALE THIS DRAWING
UNLESS OTHERWISE SPECIFIED.
DIMENSIONS ARE IN MILLIMETRES.
REMOVE BURRS AND SHARP EDGES.

1492 Ferniea Cully Road
Knoxfield, Australia, 3180
EcoTech
EcoTech


THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF ECOTECH. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF ECOTECH IS PROHIBITED.

9.17 IZS Calibration Valve Manifold Assembly - (PN: H010056)

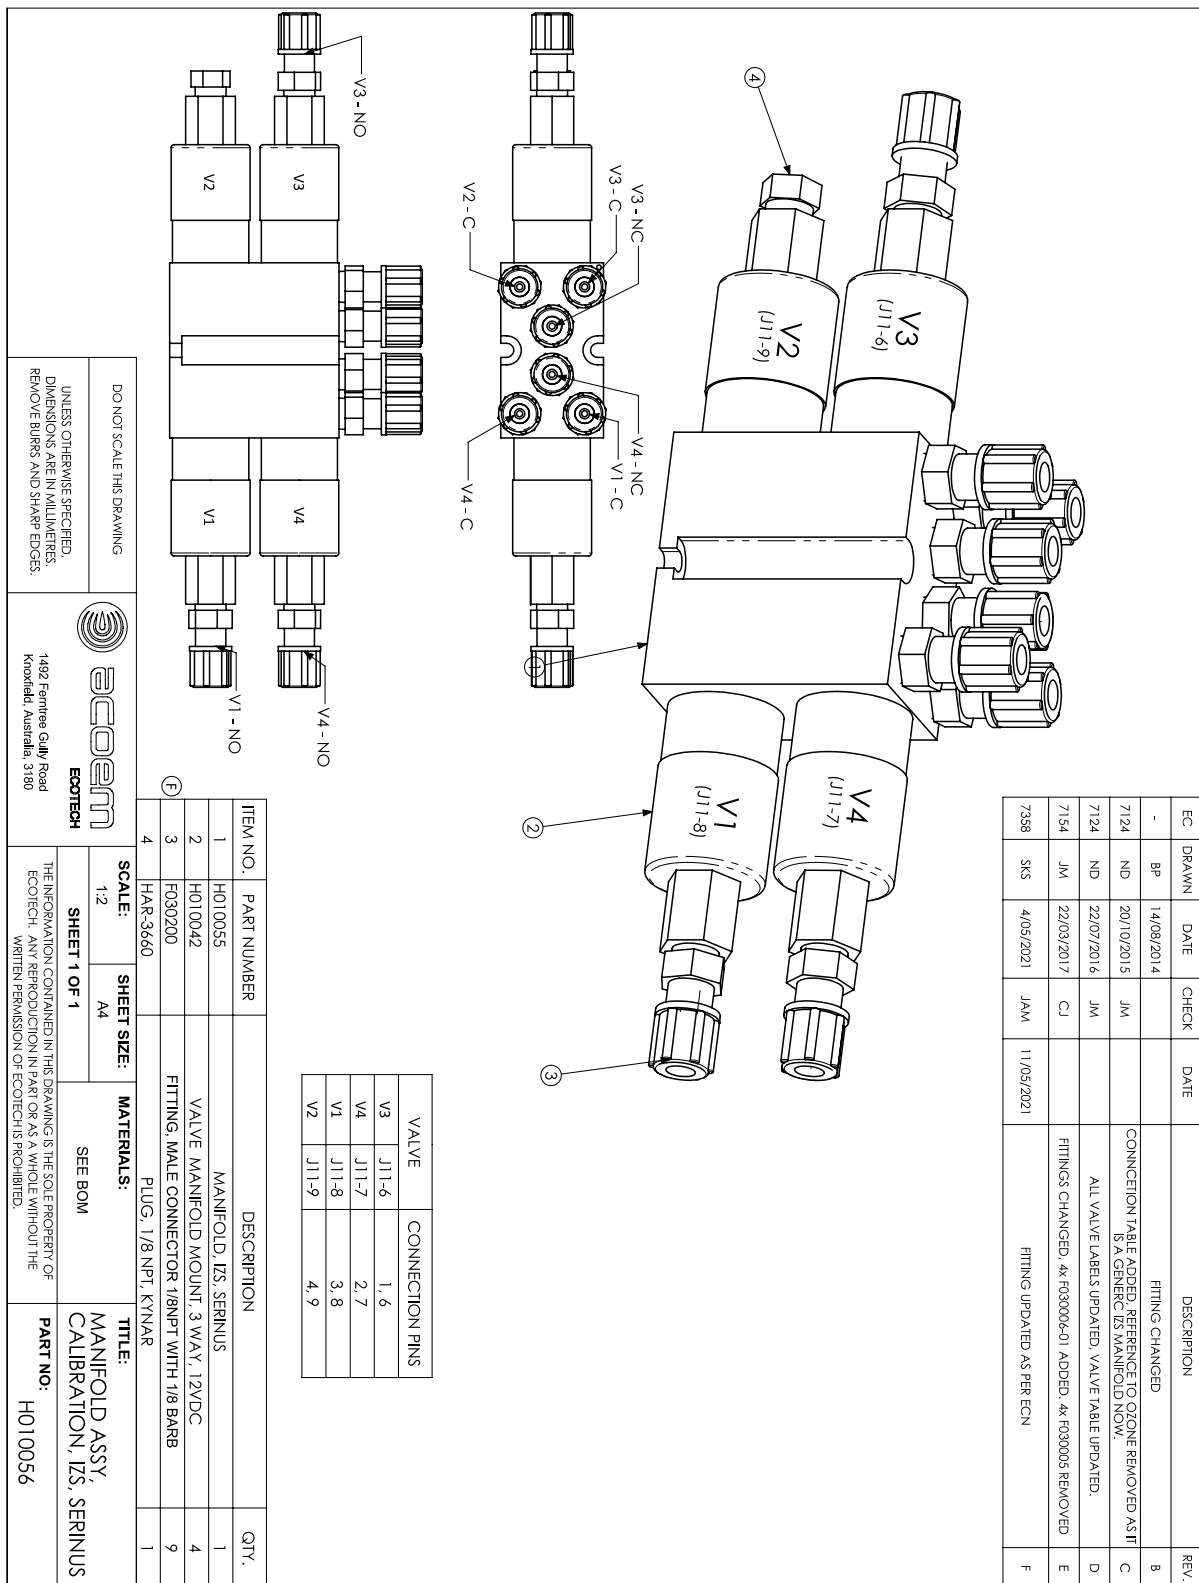

9.18 Valve Assembly - (PN: H010042)

| ITEM NO. | PART NUMBER | QTY. |
|----------|---------------|------|
| 1 | BODY | 1 |
| 2 | SOLENOID COIL | 1 |
| 10 | NUT | 1 |
| 4 | PLUNGER | 1 |
| 5 | O010016 | 1 |
| 6 | O010015 | 1 |
| 7 | O010010 | 1 |
| 8 | O010023 | 1 |
| 9 | STEM | 1 |

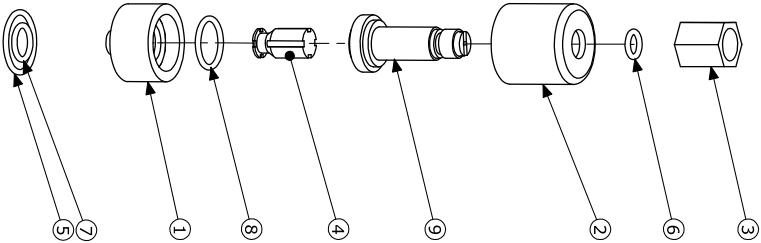

- STEPS TO REPLACE O-RINGS:
1. MARK THE SOLENOID COIL WITH A PERMANENT MARKER TO IDENTIFY THEIR RESPECTIVE VALVES AND THEIR POSITION ON MANFOLD BLOCK
 2. SECURE THE 3-WAY VALVE UPRIGHT INTO A LARGE VICE WITH PROTECTION AROUND ITS BODY TO PREVENT SCRATCH OR DAMAGE TO VALVE
 3. REMOVE NUT FROM THE TOP OF THE 3-WAY VALVE USING A 9/16" SPANNER
 4. REMOVE SMALL O-RING FROM AROUND 3 WAY VALVE USING 2 MM FLAT SCREW DRIVER
 5. LIFT OFF THE SOLENOID COIL FROM THE 3-WAY VALVE THEN UNSCREW THE SHAFT FROM THE BASE USING A LARGE FLAT SCREW DRIVER.
 6. WHILE UNSCREWING TAKE CARE THAT THE INTERNAL PLUNGER DOES NOT FALL OUT
 7. REPLACE THE INTERNAL O-RING WITH O010023
 8. ASSEMBLE THE SHAFT ALONG WITH PLUNGER BACK IN ITS POSITION
 9. ASSEMBLE NEW O010015 O-RING SUPPLIED
 10. ASSEMBLE THE NUT ON TOP OF 3-WAY VALVE.
 11. ASSEMBLE O010016 AND O010010 O-RINGS ON THE BOTTOM OF THE VALVE.
 12. ASSEMBLE VALVE BACK IN MANFOLD BLOCK

H010042
3 WAY VALVE SERVICE PROCEDURE

9.19 High Pressure Valve Exploded View - (PN: H050043)

| EC | DRAWN | DATE | CHECK | DESCRIPTION | REV |
|----|-------|------------|-------|--|-----|
| | JM | 04/12/2015 | ND | INITIAL ISSUE | A |
| | JM | 7/08/2018 | VC | ADDED M12 WASHERS AND NOTES FOR MOUNTING | B |

| INSTRUMENT TYPE | ORIFICE PART NO. |
|------------------------------|------------------|
| S10 (O3) | H010043-09 |
| S30/S31 (CO / CO2) | H010043-13 |
| S40 (NOX) | H010043-11 |
| S40H (NOX HIGH LEVEL) | H010043-03 |
| S44 (NH3/NOX) | H010043-11 |
| S5X (SO2, H2S/SO2, H2S, TRS) | H010043-13 |

NOTES: (B)

1. FITTING TO BE MOUNTED FROM OUTSIDE OF INSTRUMENT IN FOLLOWING ORDER: FITTING, INSTRUMENT REAR PANEL, STAR WASHER, FLAT WASHER, RETAINING NUT

2. STAMPED 'V' ON FITTING DENOTES DIRECTION OF FLOW AND ORIENTATION OF VALVE

3. ASSEMBLY TO MOUNTED WITH VALVE END INSIDE OF INSTRUMENT

| ITEM NO. | PART NUMBER | DESCRIPTION | QTY. |
|----------|-------------|--|------|
| 1 | 98300076 | FITTING, BULKHEAD, 1/4T S/S, MODIFIED | 1 |
| 2 | BASE | BASE, VALVE, 2 WAY, 12 VDC | 1 |
| 3 | O010023 | O-RING BS038, SILICONE | 1 |
| 4 | NUT | NUT, VALVE, 2 WAY, 12 VDC | 1 |
| 5 | COIL | SOLENOID COIL, VALVE, 2 WAY, 12 VDC | 1 |
| 6 | PLUNGER | PLUNGER, VALVE, 2 WAY, 12 VDC | 1 |
| 7 | STEM | STEM, VALVE, 2 WAY, 12 VDC | 1 |
| 8 | WASHER | WASHER, VALVE, 2 WAY, 12 VDC | 1 |
| 9 | F030006-01 | FITTING, MALE CONNECTOR 1/8NPT - 1/8 BARB, KYNAR | 1 |
| 10 | 28590462-3 | Male Adapter (Tapped Thread) | 1 |
| 11 | H010043-XX | ORIFICE | 1 |
| 12 | O010013 | O-RING 5/32ID X 1/16W, VITON | 1 |
| 13 | F050131 | M12 INTERNAL STAR WASHER | 1 |
| (B) 14 | F050130 | WASHER, FLAT, M12, SS | 1 |

THIRD ANGLE PROJECTION

TOLERANCES UNLESS SPECIFIED:
LINEAR: .015
ANGULAR: .015
HOLE POSITION: .015
HOLE CONCENTRICITY: 0.10 FIM
HOLE SURFACE: 32 RZ MAX
SURFACE TEXTURE: 12.5 RZ MAX

DO NOT SCALE THIS DRAWING
UNLESS OTHERWISE SPECIFIED, DIMENSIONS ARE IN MILLIMETRES.
REMOVE BURS AND SHARP EDGES.

1492 Fernree Gully Road
Knoxfield, Australia, 3180

SCALE: 1:2

SHEET 1 OF 1

SHEET SIZE: A4

MATERIALS: AS PER BOM

TITLE: VALVE ASSY, HIGH PRESSURE, SERINUS

PART NO: H050043

THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF ECOTECH. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF ECOTECH IS PROHIBITED.

| EC | DRAWN | DATE | CHECK | DESCRIPTION | REV. |
|----|-------|------------|-------|--|------|
| | JM | 04/12/2015 | ND | INITIAL ISSUE | A |
| | JM | 7/08/2018 | VC | ADDED M12 WASHERS AND NOTES FOR MOUNTING | B |

This page is intentionally blank.

Appendix A. Advanced Protocol

The Advanced protocol allows access to the full list of instrument parameters.

A.1 Command Format

All commands and responses sent to and from the Instrument will be in the following packet format to ensure data is reliable.

Table 41 – Packet Format

| 1 | 2 | 3 | 4 | 5 | 6 ... 5+n | 6+n | 7+n |
|---------|-----------|---------|---------|--------------------|-----------|----------|---------|
| STX (2) | Serial ID | Command | ETX (3) | Message Length (n) | Message | Checksum | EOT (4) |

Where:

<STX> ASCII Start of Text = 0x02 hex.

Serial ID The Serial ID assigned in the **Main Menu → Communications Menu → Serial Communication Menu**.

<ETX> ASCII End of Text = 0x03 hex.

Checksum The XOR of the individual bytes except for STX, ETX, EOT and Checksum.

Message length Must be in the range 0 - 32. Responses from the instrument can have a message Length of 0 - 255.

<EOT> ASCII End of Transmission = 0x04 hex.

Examples

A basic request for Primary gas data would be as follows:

Table 42 – Example: Primary Gas Request

| Byte Number | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 |
|----------------------|-----|----|------------------|-----|------------------|--------------------|----------|-----|
| Description | STX | ID | Command | ETX | Message Length | Primary Gas Conc | Checksum | EOT |
| Value | 2 | 0 | 1 | 3 | 1 | 50 | 50 | 4 |
| Checksum Calculation | | 0 | $0 \oplus 1 = 1$ | | $1 \oplus 1 = 0$ | $0 \oplus 50 = 50$ | 50 | |

And a sample response:

Table 43 – Example: Primary Gas Response

| Byte Number | 1 | 2 | 3 | 4 | 5 | 6 | Continued in next table. |
|----------------------|-----|----|------------------|-----|------------------|--------------------|--------------------------|
| Description | STX | ID | Command | ETX | Message Length | Primary Gas Conc | |
| Value | 2 | 0 | 1 | 3 | 5 | 50 | |
| Checksum Calculation | | 0 | $0 \oplus 1 = 1$ | | $1 \oplus 5 = 4$ | $4 \oplus 50 = 54$ | |

Table 44 – Example: Primary Gas Response (Continued)

| Byte Number | 7 | 8 | 9 | 10 | 11 | 12 |
|----------------------|-----------------------------|----------------------|----------------------|----------------------|----------|-----|
| Description | IEEE representation of 1.00 | | | | Checksum | EOT |
| Value | 63 | 128 | 0 | 0 | 50 | 4 |
| Checksum Calculation | $54 \oplus 63 = 9$ | $9 \oplus 128 = 137$ | $137 \oplus 0 = 137$ | $137 \oplus 0 = 137$ | 137 | |

A.2 Commands

A.2.1 Communication Error

Where:

Command byte 0
 Message byte 1 0
 Message byte 2 0..7

If the command byte of a response is 0, this indicates an error has occurred. The message field will be 2 bytes long, where the 2nd byte indicates the error according to the following table.

Table 45 – List of Errors

| Error # | Description |
|---------|---|
| 0 | Bad Checksum received |
| 1 | Invalid Parameter Length |
| 2 | Invalid Parameter |
| 3 | Internal Data Flash Erase in Progress unable to return data for a few seconds |
| 4 | Unsupported Command. |
| 5 | Another process is collecting data - unable to service request. |

| Error # | Description |
|---------|-----------------------|
| 6 | MemStick No Connected |
| 7 | MemStick Busy |

A.2.2 Get IEEE Value

Where:

Command byte 1

Message byte 1 Index from List of Parameters

Message byte 2..32 Additional indexes (optional)

This command requests the value of an instrument parameter. The message field byte contains the index of the parameter requested, as described in the List of Parameters.

Up to 32 indexes can be supplied in a single request. The response has 5 bytes for each parameter requested - the first byte is the parameter index and the next four are the IEEE representation of the current value.

Example

A request with a message field of 50,51,52 to a Serinus S40 would return a 15 byte message as shown below:

Table 46 – Example: Get IEEE Response data

| 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 |
|----|------------|---|---|---|----|-------------|---|---|----|----|-------------|----|----|----|
| 50 | NO reading | | | | 51 | NOx reading | | | | 52 | NO2 reading | | | |

A.2.3 Set Calibration Mode

Where:

Command byte 4

Message byte 1 85

Message byte 2 - 5 The IEEE representation of 0, 1, 2, or 3
 0 puts the instrument into Measure mode (0,0,0,0)
 1 puts the instrument into Cycle mode (63,128,0,0)
 2 puts the instrument into Zero mode (64,0,0,0)
 3 puts the instrument into Span mode (64,64,0,0)

This command puts the instrument into a calibration mode (the same as going to the Calibration menu and choosing a Cal. Mode).

Example

A request with a command of 4 and a message field of 85,64,64,0,0 would place the instrument into Span mode.

A.2.4 Set Calibration

Enters a new calibration value: the same as entering Span Calibrate or Zero Calibrate on the calibration menu.

Where:

| | |
|----------------|----------------------------|
| Command byte | 18 |
| Message byte 1 | 0, 1, 2, or 3 where |
| | 0 = Span |
| | 1 = Zero (first zero gas) |
| | 2 = Zero (second zero gas) |
| | 3 = Zero (Third zero gas) |

Message byte 2 - 5 The IEEE representation of the calibration value.

A.3 List of Parameters

Note: Parameters are for all Serinus series analysers and may not be applicable to an individual instrument.

Table 47 – Advanced Protocol Parameter List

| # | Description | Notes |
|----|-----------------------|--|
| 1 | Cal/Zero Valve | 0 = Zero, 1 = Cal |
| 2 | Internal Span Valve | 0 = OFF, 1 = ON |
| 3 | +Analog Supply | Positive analog supply voltage |
| 4 | Gas 5 Avg. | Average of the readings (for Gas5) of the last n minutes where n is the averaging period E.g. Nx |
| 5 | Pregain | S30H linearization coefficient gain |
| 6 | Sample/Cal Valve | 0 = Sample, 1 = Cal/Zero |
| 7 | NOx Measure Valve | 0 = NO, 1 = NOx |
| 8 | NOx Bypass Valve | 0 = NO, 1 = NOx |
| 9 | NOx Backgnd Valve | 0 = OFF, 1 = ON |
| 10 | Valve Sequencing | 0 = OFF, 1 = ON |
| 11 | LCD Contrast Pot | 0 = Lightest, 255 = Darkest |
| 12 | SO2 Ref Zero Pot | S50 Reference zero pot |
| 13 | CO Input Pot | S30 Input pot |
| 14 | CO Reference Test Pot | Not Used |

| | | |
|----|-----------------------|---|
| 15 | CO Test Measure Pot | Not Used |
| 16 | High Volt Adjust Pot | PMT High Voltage Adjust Pot for S50 & S40 |
| 17 | SO2 Lamp Adjust Pot | S50 Lamp adjustment Pot |
| 18 | O3 Lamp Adjust Pot | S10 Lamp adjustment Pot |
| 19 | O3 Meas. Zero Pot (C) | S10 Signal zero measure (coarse) |
| 20 | O3 Meas. Zero Pot (F) | S10 Signal zero measure (fine) |
| 21 | PMT Fan Pot | Optical Bench fan speed control pot |
| 22 | Rear Fan Pot | Chassis Fan speed control pot |
| 23 | Pump Fine Pot | Internal Pump speed fine pot |
| 24 | Pump Coarse Pot | Internal Pump speed coarse pot |
| 25 | Analog input 0 | SO2 Reference signal |
| 26 | Analog input 1 | CO Reference signal |
| 27 | Analog input 2 | O3 Reference signal |
| 28 | Analog input 3 | SO2 & O3 Lamp current |
| 29 | Analog input 4 | Flow block pressure |
| 30 | Analog input 5 | Cell pressure |
| 31 | Analog input 6 | Ambient pressure |
| 32 | Analog input 7 | Raw ADC calibration input |
| 33 | Analog input 8 | Reserved |
| 34 | Analog input 9 | Concentration data |
| 35 | Analog input 10 | Reserved |
| 36 | Analog input 11 | Reserved |
| 37 | Analog input 12 | Raw analog to digital count for external analog input 0. 0 - 5 V = 0 - 32766 A/D counts |
| 38 | Analog input 13 | Raw analog to digital count for external analog input 1. 0 - 5 V = 0 - 32766 A/D counts |
| 39 | Analog input 14 | Raw analog to digital count for external analog input 2. 0 - 5 V = 0 - 32766 A/D counts |
| 40 | Analog input 15 | Reserved |
| 41 | CO Meas Zero Pot (C) | S30 Measure ZERO coarse adjustment Pot |
| 42 | CO Meas Zero Pot (F) | S30 Measure ZERO fine adjustment Pot |
| 43 | SO2 Input Pot | SO2 Measure Signal Gain Pot |
| 44 | SO2 Ref. Gain Pot | SO2 Reference Signal Gain Pot |
| 45 | SO2 Meas. Zero Pot | SO2 Measure zero pot |
| 46 | O3 Input Pot | O3 Input signal gain pot |
| 47 | Diagnostic Test Pot | The Diagnostic mode adjustment pot for all the analysers except for S30 |

| | | |
|----|------------------|--|
| 48 | NOx Input Pot | PMT signal input gain control for NOx |
| 49 | PGA Gain | 1, 2, 4, 8, 16, 32, 64, 128 |
| 50 | Gas 1 Inst. | Primary gas concentration currently displayed on the front screen E.g. NO |
| 51 | Gas 2 Inst. | Secondary gas concentration currently displayed on front screen E.g. NOx |
| 52 | Gas 3 Inst. | Calculated gas concentration currently displayed on front screen E.g. NO2 |
| 53 | Gas 1 Avg. | Average of the readings (for Gas1) of the last n minutes where n is the averaging period |
| 54 | Gas 2 Avg. | Average of the readings (for Gas2) of the last n minutes where n is the averaging period |
| 55 | Gas 3 Avg. | Average of the readings (for Gas3) of the last n minutes where n is the averaging period |
| 56 | Instrument Gain | Current calibration value (default is 1.0) |
| 57 | Serial ID | Multidrop or Bayern-Hessen gas id |
| 58 | Bayern-Hessen ID | For multigas instruments only |
| 59 | Decimal Places | 2 - 5 |
| 60 | Noise | Instrument noise |
| 61 | Gas 1 Offset | An offset applied to Gas 1 |
| 62 | Gas 3 Offset | An offset applied to Gas 3 |
| 63 | Flow Temperature | Temperature of the flow block |
| 64 | Lamp Current | Lamp current in mA E.g 35 mA |
| 65 | +5V Supply | Digital Supply voltage (should always read close to 5 volts) |
| 66 | Conc. Voltage | Concentration Voltage |
| 67 | High Voltage | High Voltage reading for PMT |
| 68 | Ozonator | 0 = OFF, 1 = ON |
| 69 | Control Loop | 0 = OFF, 1 = ON (default is ON) |
| 70 | Diagnostic Mode | 0 = Operate 1 = Preamp 2 = Electrical 3 = Optical (default is Operate) |
| 71 | Gas Flow | Units in slpm |
| 72 | Gas Pressure | Units in torr |
| 73 | Ambient Pressure | Units in torr |
| 74 | +12V Supply | The 12 volt Power supply voltage |
| 75 | Cell Temperature | Cell Temperature |

| 76 | Conv. Temperature | Converter Temperature | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|-----------------------|--|---|-----------------------|------------------|-------------|-----------------------------|---|---|---|-------------------------|---|------------------------|---|------------------------|---|--|---|----------------------|---|--|---|---------------------------|---|--------------------------|----|----------------|----|-------------------|----|---------------------------|----|---------------------|----|------------|----|--|
| 77 | Chassis Temperature | Chassis Temperature | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 78 | Manifold Temp. | Manifold Temperature | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 79 | Cooler Temperature | Cooler Temperature | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 80 | Mirror Temperature | Mirror Temperature | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 81 | Lamp Temperature | Lamp Temperature | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 82 | O3 Gen. Lamp Temp. | O3 Lamp Temperature | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 83 | Instrument Status | <div>Each bit in this 4-byte word represents a different condition (not all conditions apply to every instrument model):</div> <table><tr><th>BIT</th><th>Condition if set</th></tr><tr><td>0</td><td>Currently in warmup process</td></tr><tr><td>1</td><td>Volumetric units (ppm); otherwise gravimetric units (mg/m3)</td></tr><tr><td>2</td><td>Performing a background</td></tr><tr><td>3</td><td>Currently in Span mode</td></tr><tr><td>4</td><td>Currently in Zero mode</td></tr><tr><td>5</td><td>Instrument Out of Service (or in Diagnostic mode, PTF compensation or control loop disabled, or Comms debugging enabled)</td></tr><tr><td>6</td><td>High Voltage failure</td></tr><tr><td>7</td><td>System power failure (not actually possible to report)</td></tr><tr><td>8</td><td>Reference voltage failure</td></tr><tr><td>9</td><td>Cell temperature failure</td></tr><tr><td>10</td><td>Cooler failure</td></tr><tr><td>11</td><td>Converter failure</td></tr><tr><td>12</td><td>Correlation wheel failure</td></tr><tr><td>13</td><td>Lamp source failure</td></tr><tr><td>14</td><td>Flow fault</td></tr><tr><td>15</td><td>Any system error (the red instrument status light is ON)</td></tr></table> | BIT | Condition if set | 0 | Currently in warmup process | 1 | Volumetric units (ppm); otherwise gravimetric units (mg/m3) | 2 | Performing a background | 3 | Currently in Span mode | 4 | Currently in Zero mode | 5 | Instrument Out of Service (or in Diagnostic mode, PTF compensation or control loop disabled, or Comms debugging enabled) | 6 | High Voltage failure | 7 | System power failure (not actually possible to report) | 8 | Reference voltage failure | 9 | Cell temperature failure | 10 | Cooler failure | 11 | Converter failure | 12 | Correlation wheel failure | 13 | Lamp source failure | 14 | Flow fault | 15 | Any system error (the red instrument status light is ON) |
| BIT | Condition if set | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 0 | Currently in warmup process | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 1 | Volumetric units (ppm); otherwise gravimetric units (mg/m3) | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 2 | Performing a background | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 3 | Currently in Span mode | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 4 | Currently in Zero mode | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 5 | Instrument Out of Service (or in Diagnostic mode, PTF compensation or control loop disabled, or Comms debugging enabled) | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 6 | High Voltage failure | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 7 | System power failure (not actually possible to report) | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 8 | Reference voltage failure | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 9 | Cell temperature failure | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 10 | Cooler failure | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 11 | Converter failure | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 12 | Correlation wheel failure | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 13 | Lamp source failure | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 14 | Flow fault | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 15 | Any system error (the red instrument status light is ON) | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 84 | Reference Voltage | Units in Volts | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 85 | Calibration State | <div>This variable has two different sets of values:</div> <table><tr><th>Set Calibration State</th><th>Get IEEE Value</th></tr><tr><td>0 = MEASURE</td><td>0 = MEASURE</td></tr></table> | Set Calibration State | Get IEEE Value | 0 = MEASURE | 0 = MEASURE | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Set Calibration State | Get IEEE Value | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 0 = MEASURE | 0 = MEASURE | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |

| | | | |
|-----|---------------------|---|----------|
| | | 1 = CYCLE | 1 = ZERO |
| | | 2 = ZERO | 2 = SPAN |
| | | 3 = SPAN | |
| 86 | Primary Raw Conc. | (For S40, before NOx background and gain) | |
| 87 | Secondary Raw Conc. | Only for multigas instruments (For S40, before NOx background and gain) | |
| 88 | S40 Backgnd Conc. | NOx Background Concentration (For S40, before gain) | |
| 89 | Cal. Pressure | Calibration Pressure | |
| 90 | Conv. Efficiency | Converter Efficiency | |
| 91 | Multidrop Baud Rate | 0 = 1200 bps 1 = 2400 bps 2 = 4800 bps 3 = 9600 bps 4 = 14400 bps 5 = 19200 bps 6 = 38400 bps | |
| 92 | Anlg Range AO 0 | Maximum range value for analog output | |
| 93 | Anlg Range AO 1 | | |
| 94 | Anlg Range AO 2 | | |
| 95 | Output Type AO 0 | Output Type 1 = Voltage 0 = Current | |
| 96 | Output Type AO 1 | | |
| 97 | Output Type AO 2 | | |
| 98 | Anlg Ofst/Rng AO 0 | Voltage Offset /Current Range 0 = 0% or 0 - 20mA 1 = 5% or 2 - 20mA 2 = 10% or 4 - 20mA | |
| 99 | Anlg Ofst/Rng AO 1 | | |
| 100 | Anlg Ofst/Rng AO 2 | | |
| 101 | F/Scale Volt AO 0 | 5.0 Volt Calibration value | |
| 102 | F/Scale Volt AO 1 | | |
| 103 | F/Scale Volt AO 2 | | |
| 104 | Z Adj Volt AO 0 | 0.5 Volt Calibration value | |
| 105 | Z Adj Volt AO 1 | | |
| 106 | Z Adj Volt AO 2 | | |
| 107 | -Analog Supply | Negative analog supply | |
| 108 | Digital Outputs | A single byte expressing the most recent state of the digital outputs | |
| 109 | Digital Inputs | A single byte expressing the most recent state of the digital inputs | |

| | | |
|-----|------------------|--|
| 110 | Instrument State | 0 = Sample Fill 1 = Sample Measure 2 = Sample Fill Aux 3 = Sample Measure Aux 4 = Sample Fill Aux2 5 = Sample Measure Aux2 6 = Background Fill 7 = Background Measure 8 = Background Purge 9 = Background Fill Aux 10 = Background Measure Aux 11 = Zero Fill 12 = Zero Measure 13 = Zero Fill Aux 14 = Zero Measure Aux 15 = Zero Fill Aux2 16 = Measure Aux2 17 = Background Fill Zero 18 = Background Measure Zero 19 = Span Fill 20 = Span Measure 21 = Span Fill Aux 22 = Span Measure Aux 23 = Span Fill Aux2 24 = Span Measure Aux2 25 = Background Fill Span 26 = Background Measure Span 27 = Background Purge Span 28 = Electronic Zero Adjust 29 = Instrument Warm Up 30 = Background Adjust Fill 31 = Background Adjust Measure |
| 111 | CO Lin. Factor A | CO Linearisation Factor A |
| 112 | CO Lin. Factor B | CO Linearisation Factor B |
| 113 | CO Lin. Factor C | CO Linearisation Factor C |
| 114 | CO Lin. Factor D | CO Linearisation Factor D |
| 115 | CO Lin. Factor E | CO Linearisation Factor E |
| 116 | Instrument Units | 0 = ppm 1 = ppb 2 = ppt 3 = mg/m ³ 4 = µg/m ³ |

| | | |
|-----|---------------------|--|
| | | 5 = ng/m ³ 6 = % |
| 117 | Backgnd Meas. Time | In seconds. |
| 118 | Sample Fill Time | These parameters can be changed, but only temporarily; restarting the instrument will restore them to their default values. |
| 119 | Sample Measure Time | |
| 120 | Aux Measure Time | |
| 121 | Aux Smpl. Fill Time | |
| 122 | Backgnd Fill Time | |
| 123 | Zero Fill Time | |
| 124 | Zero Measure Time | |
| 125 | Span Fill Time | |
| 126 | Span Measure Time | |
| 127 | O3 Gen. Coeff D | O3 Generator Coefficient D |
| 128 | Backgnd Pause Time | In seconds |
| 129 | Bkgnd Intrleav Fact | |
| 130 | Cal. Pressure 2 | Calibration Pressure for 2nd gas |
| 131 | 2nd Instrument Gain | Only valid with an S40 variant set to multiple gains. Shows the second gas gain (NO). Default is 1.0. |
| 132 | Background voltage | Units in Volts |
| 133 | Perm Rate | Permeation rate of the gas in ng/min |
| 134 | Perm Flow | Total flow past the permeation chamber during an activated internal span mode. In ml/min |
| 135 | Perm Oven Setpoint | Set target temperature for the permeation oven. Default is 50 °C |
| 136 | Perm Oven Temp | Temperature readout of the Permeation oven. Units in °C |
| 137 | Ozone Target | Ozone Target for S10 IZS Ozone generation |
| 138 | Conc Adjusted 1 | Concentration value in PPM before filtering |
| 139 | Conc Adjusted 2 | |
| 140 | Conc Adjusted 3 | |
| 141 | Chopper Speed | Revolutions in the last second |
| 142 | Chopper Frequency | In rpm |
| 143 | IR Source | The S30 IR source voltage |
| 144 | Background (hrs) | The background interval in hours. 0.0 if disabled 0.25 for every 15 minutes 0.30 for every 20 minutes 0.50 for every 30 minutes 1.00 for every hour 24.00 for once a day |

| | | |
|-----|------------------------|---|
| 145 | Cycle Time | In minutes |
| 146 | CO Cooler Pot | CO Cooler voltage adjustment POT |
| 147 | CO Source Pot | CO Source voltage adjustment POT |
| 148 | CO Test Meas. Pot | Diagnostics use only |
| 149 | CO Test Ref. Pot | Diagnostics use only |
| 150 | O3 Ref Average | S10 Background Average |
| 151 | PTF Correction (gas 1) | Pressure Temperature Flow Compensation Factor for first gas |
| 152 | PTF Correction (gas 2) | Pressure Temperature Flow Compensation Factor for second gas in dual gas analysers. |
| 153 | Inst. Cell Pressure | Instantaneous cell pressure |
| 154 | Manifold Pressure | Manifold Pressure in S40 instruments |
| 155 | Cell Press. (gas 1) | Cell Pressure for Gas 1 |
| 156 | Cell Press. (gas 2) | Cell Pressure for Gas 2 |
| 157 | Cell Press. (Bgnd) | Cell Pressure when in Background |
| 158 | Background | 0 = the instrument is measuring a gas sample 1 = the instrument is measuring background air |
| 159 | Gas To Measure | S51 only; see Measurement Settings Menu 0 = Measure both gasses 1 = Measure SO2 only 2 = Measure H2S only |
| 160 | Valve States | Diagnostic use only |
| 161 | Temperature Units | 0 = "°C" 1 = "°F" 2 = "K" |
| 162 | Pressure Units | 0 = "torr" 1 = "psi" 2 = "mbar" 3 = "atm" 4 = "kPa" |
| 163 | Averaging Period | 0 = "1 Min" 1 = "3 Mins" 2 = "5 Mins" 3 = "10 Mins" 4 = "15 Mins" 5 = "30 Mins" 6 = "1 Hr" 7 = "4 Hrs" 8 = "8 Hrs" 9 = "12 Hrs" 10 = "24 Hrs" |

| | | |
|-----|-----------------------|--|
| | | 11 = "4 hrs/hr" 12 = "8 hrs/hr" 13 = "2 Mins" 14 = "4 Mins" 15 = "6 Mins" 16 = "12 Mins" 17 = "20 Mins" 18 = "2 Hrs" 19 = "6 Hrs" |
| 164 | Filter Type | 0 = NO FILTER 1 = KALMAN FILTER 2 = 10 SEC FILTER 3 = 30 SEC FILTER 4 = 60 SEC FILTER 5 = 90 SEC FILTER 6 = 300 SEC FILTER 7 = ADPTIVE FILTER |
| 165 | NO2 Filter enabled | 0 = Disabled, 1 = Enabled |
| 166 | Background Interval | 0 = 24 Hrs 1 = 12 Hrs 2 = 8 Hrs 3 = 6 Hrs 4 = 4 Hrs 5 = 2 Hrs 6 = Disable Note: this parameter is deprecated; while it can still be read, writing to it will have no effect. Use parameter 144 instead. |
| 167 | Service (COM1) Baud | Serial baud rate |
| 168 | Multidrop (COM2) Baud | 0 = 1200 bps 1 = 2400 bps 2 = 4800 bps 3 = 9600 bps 4 = 14400 bps 5 = 19200 bps 6 = 38400 bps |
| 169 | Service Protocol | 0 = EC9800 |
| 170 | Multidrop Protocol | 1 = Bayern-Hessen 2 = Advanced 3 = Modbus |
| 171 | AO1 Over Range | The Upper Concentration Range when Over-Ranging is enabled |
| 172 | AO2 Over Range | |
| 173 | AO3 Over Range | |

| | | |
|-----|----------------------|---|
| 174 | AO1 Over-Ranging | 0 = Over Ranging Disabled |
| 175 | AO2 Over-Ranging | 1 = Over Ranging Enabled |
| 176 | AO3 Over-Ranging | 2 = Over Ranging enabled and currently active |
| 177 | Heater Set Point | Cell Heater Set Point units in °C |
| 178 | High Volt Adjust Pot | High voltage pot setting |
| 179 | PMT Test LED Pot | PMT Test LED intensity controller POT |
| 180 | Last Power Failure | Time Stamp of the Last power fail (4 byte time stamp) Bit 31:26 ---- Year (0 - 99) Bit 25:22 ---- Month (1 - 12) Bit 21:17 ---- Date (1 - 31) Bit 16:12 ---- Hour (00 - 23) Bit 11:06 ---- Min (00 - 59) Bit 05:00 ---- Sec (00 - 59) |
| 181 | Inst Manifold Press. | Manifold Pressure in S40 instruments (instantaneous) |
| 182 | Cell Press. (Gas 5) | Cell Pressure for Gas 5 (Nx) |
| 183 | Gas 4 Inst. | Calculated gas concentration currently displayed on front screen E.g. NH3 |
| 184 | Gas 4 Avg. | Average of the readings (for Gas 4) of the last n minutes where n is the averaging period E.g. NH3 |
| 185 | Gas 5 Inst. | Calculated gas concentration currently displayed on front screen E.g. Nx |
| 186 | NH3 Conv. Efficiency | |
| 187 | Cell/Lamp Duty Cycle | |
| 188 | Mirror T. Duty Cycle | |
| 189 | Flow Temp Duty Cycle | |
| 190 | Cooler T. Duty Cycle | |
| 191 | Conv Temp Duty Cycle | |
| 192 | CO Conv T Duty Cycle | |
| 193 | F/Scale Curr AO 0 | 20 mA Calibration value |
| 194 | F/Scale Curr AO 1 | |
| 195 | F/Scale Curr AO 2 | |
| 196 | Z Adj Curr AO 0 | 4 mA Calibration value |
| 197 | Z Adj Curr AO 1 | |
| 198 | Z Adj Curr AO 2 | |
| 199 | Ext Analog Input 0 | The value of the external analog input after the multiplier and offset have been applied |
| 200 | Ext Analog Input 1 | |
| 201 | Ext Analog Input 2 | |
| 202 | Conv Set Point | Converter Set Point |

| | | |
|-----|------------------------|---|
| 203 | Cal. Pressure 3 | Calibration Pressure 3 |
| 204 | PTF Correction (gas 3) | Pressure Temperature Flow Compensation Factor for third gas in multi-gas instruments. |
| 205 | Dilution Ratio | The current dilution ratio (default is 1.0) |
| 206 | Traffic Light | State of the status light: 0 = Green 1 = Amber 2 = OFF (normally impossible) 3 = Red |
| 207 | Network Protocol | 0 = EC9800 1 = Bayern-Hessen 2 = Advanced 3 = Modbus |
| 208 | Gas 4 Offset | An offset applied to Gas 4 |
| 209 | O3 Gen. Fine Pot | Ozone generator control, DAC controlled. DAC: 0..64535 |
| 210 | O3 Gen. Lamp Current | Units in mA |
| 211 | O3 Gen. Coarse Pot | Repeat of parameter 209 |
| 212 | Logging Period | The data logging period, in seconds (1.. 86400) |
| 213 | O3 Gen. Coeff A | Ozone generator coefficients Note that Coeff D is parameter 127 |
| 214 | O3 Gen. Coeff B | |
| 215 | O3 Gen. Coeff C | |
| 216 | Meas. Count | S60 measure count |
| 217 | Sig. Count 1 | S60 signal counts |
| 218 | Sig. Count 2 | |
| 219 | Sig. Count 3 | |
| 220 | Sig. Count 4 | |
| 221 | Signal Voltage | S60 signal voltage |
| 222 | LED Drive | S60 LED drive value |
| 223 | 3rd Instrument Gain | Only valid with an S44 variant set to multiple gains. Shows the third gas gain (Nx). Default is 1.0. |
| 224 | Legacy PTF Method | Only applies to S40 variants. 0 = new PTF calculation 1 = old PTF calculation inherited from ML This value was added to Build 10800 and defaults to 1. |
| 225 | Chassis Humidity | Only applies to S30 variants, and only on Rev P or later boards. The current humidity inside the instrument, in percentage. |
| 226 | Opto. Strength | Only applies to Rev P or later boards. Optical signal strength. |

Appendix B. EC9800 Protocol

The Serinus implements a subset of the 9800 instrument protocol. Only the basic commands of reading the concentration value and setting the instrument calibration state (measure, span or zero) are supported.

B.1 Command Format

All commands are sent as ASCII strings. Fields are delimited by commas and the command ends with the normal return key (i.e. the TERMINATOR is either a <CR> or a <LF>). The DEVICE I.D. is the Serial ID assigned in the **Main Menu → Communications Menu → Serial Communication Menu**. If the instrument is not being used in a multi-drop connection, the DEVICE I.D> can be replaced with the string “???”.

B.2 Commands

B.2.1 DCONC

Function: Sends the current instantaneous concentration data to the serial port.

Format: DCONC, {<DEVICE I.D.>} {TERMINATOR}

Device response: {GAS} <SPACE> {STATUS WORD} <CR><LF>

The GAS value is the concentration value in the current instrument units, expressed as a floating point number (i.e. 12.345). The STATUS WORD indicates the instrument status in hex (i.e. A01F) using the following format:

Bit 15 = SYSFAIL (MSB)

Bit 14 = FLOWFAIL

Bit 13 = LAMPFAIL

Bit 12 = CHOPFAIL

Bit 11 = CVFAIL

Bit 10 = COOLERFAIL

Bit 9 = HEATERFAIL

Bit 8 = REFFAIL

Bit 7 = PS-FAIL

Bit 6 = HV-FAIL

Bit 5 = OUT OF SERVICE

Bit 4 = Instrument is in zero mode

Bit 3 = Instrument is in span mode

Bit 2 = Unused

Bit 1 = SET→PPM selected, CLEAR→MG/M3

Bit 0 = reserved (LSB)

B.2.2 DSPAN

Function: Commands the instrument to enter span mode.

Format: DSPAN, {<DEVICE I.D.>} {TERMINATOR}

Device response: <ACK> if the instrument is able to perform the command, <NAK> if not.

B.2.3 DZERO

Function: Commands the instrument to enter the zero mode.

Format: DZERO, {<DEVICE I.D.>} {TERMINATOR}

Device response: <ACK> if the instrument is able to perform the command, <NAK> if not.

B.2.4 ABORT

Function: Commands the instrument to abort the current span/zero mode and return to measure mode.

Format: ABORT, {<DEVICE I.D.>} {TERMINATOR}

Device response: <ACK> if the instrument is able to perform the command, <NAK> if not.

B.2.5 RESET

Function: Reboots the instrument (software reset).

Format: RESET, {<DEVICE I.D.>} {TERMINATOR}

Device response: <ACK>.

Appendix C. Bayern-Hessen Protocol

The Serinus implements a limited subset of the Bayern-Hessen Network protocol. Only the ability to set the instrument calibration state (measure, span or zero) and read the gas concentrations are supported.

C.1 Command Format

<STX><text><ETX>< bcc1><bcc2>

Where:

| | |
|--------|---|
| <STX> | ASCII Start of Text = 0x02 hex. |
| <Text> | ASCII text maximum length of 160 characters. |
| <ETX> | ASCII End of Text = 0x03 hex. |
| <bcc1> | ASCII representation of block check value MSB. (That is, the character “3” for 3, the character “F” for 15, etc.) |
| <bcc2> | ASCII representation of block check value LSB. |

The block check algorithm begins with 0 and exclusive-OR’s each ASCII character from <STX> to <ETX> inclusive. This block check value is converted to ASCII format and sent after the <ETX> character.

Examples

This is an example of a valid Bayern-Hessen data request for an instrument that has a Serial ID of 97 (Serial ID assigned in the **Main Menu → Communications Menu → Serial Communication Menu**):

<STX>DA097<ETX>3A

The block check calculation is best shown by the following example:

Table 48 – Bayern-Hessen Data

| Character | Hex Value | Binary | Block Check |
|-----------|-----------|-----------|-------------|
| <STX> | 02 | 0000 0010 | 0000 0010 |
| D | 44 | 0100 0100 | 0100 0110 |
| A | 41 | 0100 0001 | 0000 0111 |
| 0 | 30 | 0011 0000 | 0011 0111 |
| 9 | 39 | 0011 1001 | 0000 1110 |
| 7 | 37 | 0011 0111 | 0011 1001 |
| <ETX> | 03 | 0000 0011 | 0011 1010 |

The binary value 0011 1010 corresponds to the hex value 3A. This value in ASCII forms the last two characters of the data request message.

Note: The I.D. of 97 is sent as the sequence 097. All I.D. strings must have three digits and must always be padded with ASCII zero characters.

This is an example of a valid command to put the unit in the manual span mode if the instrument has an ID of 843:

```
<STX>ST843 K<ETX>52
```

The block check operation is best shown with the following table:

Table 49 – Block Check Operation

| Character | Hex Value | Binary | Block Check |
|-----------|-----------|-----------|-------------|
| <STX> | 02 | 0000 0010 | 0000 0010 |
| S | 53 | 0101 0011 | 0101 0001 |
| T | 54 | 0101 0100 | 0000 0101 |
| 8 | 38 | 0011 1000 | 0011 1101 |
| 4 | 34 | 0011 0100 | 0000 1001 |
| 3 | 33 | 0011 0011 | 0011 1010 |
| <SPACE> | 20 | 0010 0000 | 0001 1010 |
| K | 4B | 0100 1011 | 0101 0001 |
| <ETX> | 03 | 0000 0011 | 0101 0010 |

The binary block check value is 0101 0010 which is the hex value 52 as shown at the end of the command string.

C.2 Commands

C.2.1 DA

Return the current instantaneous concentration.

Command Format

```
<STX>{DA}{<kkk>}<ETX>< bcc1><bcc2>
```

Where:

- kkk

Device’s ID. This field is optional, but if provided it must be padded with zeros to be 3 characters long. The value must match one of the following: the instrument’s Bayern-Hessen ID, 000, or ??? (three question marks).
- bcc1

First byte of the block check calculation.
- bcc2

Second byte of the block check calculation.

Device response

The instrument responds with a variable length string, depending on how many measured gasses have been assigned an ID above 0. The text between the [] will be repeated once for each reported gas.

```
<STX>{MD}{cc}[<SP><kkk><SP><+nnnn+ee><SP><ss><SP><ff><SP><mmm><SP>eeeeee<SP>]<ETC><bcc1><bcc2>
```

Where:

| | |
|----------|--|
| <SP> | Space (0x20 hex). |
| cc | The number of gasses reported (0..5). The text in between the [] will be repeated once for each gas reported. |
| kkk | The Bayern-Hessen instrument ID. |
| +nnnn+ee | Gas concentration. |
| ss | Status byte (see table below for individual bits). |
| ff | Failure byte (see table below for individual bits). |
| mmm | Gas ID. |
| eeeeee | Ecotech instrument ID. |
| bcc1 | First byte of the block check calculation. |
| bcc2 | Second byte of the block check calculation. |

Table 50 – Status Bit Map

| Status Bit | Meaning if set to 1 |
|------------|---|
| 0 | Instrument off (this value is always set to 0). |
| 1 | Out of service. |
| 2 | Zero mode. |
| 3 | Span mode. |
| 4 | - |
| 5 | - |
| 6 | Units: 1 = Volumetric, 0 = Gravimetric. |
| 7 | Background mode (S30 and S50 family only). |

Table 51 – Failure Bit Map (Positive Logic)

| Failure Bit | Meaning if set to 1 |
|-------------|--|
| 0 | Flow sensor failure. |
| 1 | Instrument failure. Note that while the In Maintenance mode reports as an instrument failure with a red light on the front panel, for Bayern-Hessen this particular error is merely a status instead of a failure. |

| Failure Bit | Meaning if set to 1 |
|-------------|---|
| 2 | - |
| 3 | Lamp failure (S40 family only). |
| 4 | - |
| 5 | Cell heater failure (S30, S40 and S50 family only). |
| 6 | - |
| 7 | - |

C.2.2 ST

Set the instrument mode.

Command Format

<STX>{ST}{< kkk>}<SP>{command}<ETC><bcc1><bcc2>

Where:

| | |
|---------|---|
| kkk | Device's Serial ID. This field is optional, but if provided it must be padded with zeros to be 3 characters long. The value must match one of the following: the instrument's Bayern-Hessen ID, 000, or ??? (three question marks). |
| Command | M, N or K for Measure, Zero or Span mode. |
| bcc1 | First byte of the block check calculation. |
| bcc2 | Second byte of the block check calculation. |

Device response

The device does not issue a response to this command.

Appendix D. ModBus Protocol

The Serinus supports a limited Modbus implementation. The only function codes supported are 3 (read holding register) and 16 (write multiple registers). The Serial ID is assigned in the **Main Menu → Communications Menu → Serial Communication Menu**.

D.1 Command Format

<Slave address><Function code><Start register (MSB)><Start register (LSB)><Register count (MSB)><Register count (LSB)><Write byte count><Write data><CRC (MSB)><CRC (LSB)>

Where:

| | |
|------------------|--|
| Slave address | The instrument Serial ID. If the request is being made via TCP, this field is omitted. |
| Function code | 3 (read) or 16 (write). |
| Start register | Specifies an Advanced Protocol IEEE index (refer to Table 47 to see what values are available and what index to specify for them). The ModBus index is calculated from the Advanced Protocol index via the following formula: $\text{Modbus Index} = \text{Advanced Protocol Parameter List number} \times 2 + 256$ |
| Register count | A single read command may request from 2 - 124 registers, which is to say from 1 - 62 values. The first index is specified by Start register; all following indexes are in sequential order. To read values that are not sequential requires using another read command. Note that the number of registers must be even, as each value is returned as a floating point value (4 bytes) and each register is a word (2 bytes). A write command can only write a single IEEE value at a time. Thus for write commands this value must be 2. |
| Write byte count | This field is only supplied for a write request; it indicates the amount of bytes of data that will follow, and must be set to 4 (since only one value can be written at a time). |
| Write data | This field is only supplied for a write request. It is the value to be written, expressed in IEEE format. The "Endian" structure can be selected on the Modbus Serial Communications menu. Big Endian means that the MSB byte of the IEEE value is at the right end of the four bytes; Little Endian means it is at the left. |
| CRC | Calculated by the standard Modbus CRC method. If the request is being made via TCP, this field is omitted. |

D.2 Commands

D.2.1 Read Holding Registers

The response to a read request is in the following format:

<Slave address>3<Register count (MSB)><Register count (LSB)><Data><CRC (MSB)><CRC (LSB)>

Where:

| | |
|----------------|---|
| Slave address | As general command format. |
| Register count | As general command format. |
| Data | 4 - 248 bytes of data, representing 1 - 62 floating point numbers in IEEE format. The “Endian” structure can be selected on the Modbus Serial Communications menu. Big Endian means that the MSB byte of the IEEE value is at the right end of the four bytes; Little Endian means it is at the left. |
| CRC | As general command format. |

D.2.2 Write Holding Register

The only supported use for this command is to set the instrument into a calibration state.

Where:

| | |
|--------------------|--|
| Start register MSB | 1 |
| Start register LSB | 170 |
| Register count | 2 |
| Write Data bytes | The IEEE representation of 0, 1, 2, or 3 0 puts the instrument into Measure mode (0,0,0,0) 1 puts the instrument into Cycle mode (63,128,0,0) 2 puts the instrument into Zero mode (64,0,0,0) 3 puts the instrument into Span mode (64,64,0,0) |

The response to a write request is to return the first six bytes of the initiating write request.

D.2.3 Error

An error will be returned in the following format:

<Slave address><Function code><Exception code><CRC (MSB)><CRC (LSB)>

| | |
|---------------|--|
| Slave address | As general command format. |
| Function code | The initiating command’s function code + 128; so either 131 (read) or 144 (write). |

Exception code The error code (see table below).

CRC As general command format.

Table 52 – Modbus Error Codes

| Value | Error |
|-------|----------------------|
| 1 | Illegal Function |
| 2 | Illegal Data Address |
| 3 | Illegal Data Value |
| 4 | Slave Device Failure |



**1492 Ferntree Gully Road,
Knoxfield, Victoria,
Australia 3180**

Phone: +61 (0)3 9730 7800

Email: info.au@acoem.com

Support: support@ecotech.com

www.ecotech.com



FS 603790

OHS 603791